

OWNER'S MANUAL

TERMS OF USE

INSTALLER TERMS OF USE

Automotive Data Solutions Inc. ("ADS") products are strictly intended for installation by Certified Technicians who are employed by a registered business specialized in the installation of automotive aftermarket electronics products. Prior to beginning installation of an ADS product in a vehicle, it is the Certified Technician's responsibility to review the most current Product Guide, Install Guide and vehicle-specific notes available in Weblink®. ADS is not responsible for any damages whatsoever, including but not limited to any consequential damages, incidental damages, damages for loss of time, loss of earnings, loss of profit, commercial loss, loss of economic opportunity and the like that may or may not have resulted from the use, misuse, improper installation or operation of its products. Purchasers sole contractual remedy is refund of the purchase price of the ADS product(s). ADS reserves itself the right to suspend any Weblink® account without notice and decline to offer technical support to non-Certified Technicians, non-compliant Certified Technicians or end users.

END USER TERMS OF USE

ADS products are designed to remote start vehicles from a distance. In order to ensure your iDatastart system meets all safety regulations and operates as intended by the manufacturer, please follow the usage recommendations below:

- DO NOT use this product for any purpose other than its intended usage.
- DO NOT remote start a vehicle in an indoor or enclosed area (i.e. garage). Exhaust fumes are extremely dangerous and can cause personal injury or death. Install carbon monoxide detectors in every living area that can be exposed to vehicle exhaust fumes.
- DO NOT remote start a vehicle while it is being serviced. Follow the Valet Mode procedure as outlined in your Owner's Manual.
- DO NOT remote start a vehicle in gear.
- DO NOT remote start a vehicle with the key in the ignition.
- DO NOT remote start a vehicle left unattended with open windows, unlocked doors or open convertible top.
- DO NOT allow children handle or operate long range remotes.
- ALWAYS engage your emergency brake prior to exiting your vehicle. This may limit motion if the vehicle is accidentally started in gear.
- AVOID remote starting your vehicle while passengers or pets are on board. This may increase the risk of

shifter being put in gear after vehicle has been remote started.

- AVOID parking your vehicle on an inclined surface or an area surrounded by obstacles. For manual vehicles, ALWAYS ensure the Reservation Mode sequence, as outlined in your Owner’s Manual, is correctly engaged prior to the next remote start.
- AVOID delaying the inspection of your iDatastart system in the event of malfunction. Immediately contact a Certified Technician to ensure that installation or defective equipment is properly addressed.

REMOTE OVERVIEW

Your iDatastart remote start system may include one or both long-range remotes listed below. Please take a moment to familiarize yourself with their general features.



FLEX configuration	FLEX 1W
Remote model	TR3450AT/TR3450ATL
Buttons	5
Communication / Range	1-Way / Half-Mile*
Range upgrade options	FLEX 2W or 2WX
Transmit confirmation (TX)	Red Top LED
Receive confirmation (RX)	—
Batteries required	1 x CR2450
Avg. battery Life	15-20 months
Warranty	1 year



FLEX configuration	FLEX 2W
Remote model	TR3450AT/TR3450ATL
Buttons	5
Communication / Range	2-Way / Half-Mile*
Range upgrade options	FLEX 2WX
Transmit confirmation (TX)	Yellow Top LED
Receive confirmation (RX)	Yellow Button LED + Chime
Batteries required	1 x CR2450
Avg. battery Life	10-15 months
Warranty	1 year



FLEX configuration	FLEX 2WX
Remote model	TR3450AT/TR3450ATL
Buttons	5
Communication / Range	2-Way / 1-Mile*
Range upgrade options	—
Transmit confirmation (TX)	Orange Top LED
Receive confirmation (RX)	Orange Button LED + Chime
Batteries required	1 x CR2450
Avg. battery Life	8-15 months
Warranty	1 year


REMOTE COMMANDS & CONFIRMATIONS


Thanks to their multiplexing technology, iDatastart remotes can pack over 30 functions using only 5 buttons. In order to get the most out of your remotes, please take a moment to get acquainted with the following functions below:


NOTES:

1. All functions must be enabled by an Authorized Dealer during installation to be functional on remote
2. Non-highlighted icons = Press & release button

- 3. Highlighted (grey) icons = Press & hold button for 2.5 seconds
- 4. Coma (,) between icons = Press buttons one after the other
- 5. Plus (+) between icons = Press buttons together
- 6. Timeout between each button press = 3 seconds
- 7. Function* = Available in 2nd Car Mode

COMMAND	Lock & Arm
BUTTON	
DESCRIPTION	Secures your vehicle by locking the doors and arming the alarm.
CONFIRMATION	1 chime + 1 flash


COMMAND	Unlock & Disarm
BUTTON	
DESCRIPTION	Accesses your vehicle by unlocking the doors and disarming the alarm.
CONFIRMATION	2 chimes + 2 flashes


COMMAND	Query*
BUTTON	
DESCRIPTION	Queries vehicle and vehicle battery voltage and interior temperature.

COMMAND	Panic*
BUTTON	
DESCRIPTION	Triggers the panic siren.
CONFIRMATION	1 chime + 1 flash

COMMAND	AUX 5*
BUTTON	
DESCRIPTION	To be completed by Authorized Dealer if applicable

COMMAND	Trunk Release*
BUTTON	
DESCRIPTION	Releases the trunk or hatch.


COMMAND	Engine Start/Stop*
BUTTON	
DESCRIPTION	Starts and stops the engine.
CONFIRMATION	4 chimes + 4 flashes (Button LEDs will also flash intermittently while engine is running)


COMMAND	AUX 1
BUTTON	
DESCRIPTION	To be completed by Authorized Dealer if applicable


COMMAND	AUX 2
BUTTON	
DESCRIPTION	To be completed by Authorized Dealer if applicable


COMMAND	AUX 3
BUTTON	
DESCRIPTION	To be completed by Authorized Dealer if applicable


COMMAND	AUX 4
BUTTON	
DESCRIPTION	To be completed by Authorized Dealer if applicable


COMMAND	2nd Car Mode
BUTTON	
DESCRIPTION	Controls two iDatastart-equipped vehicles using one remote. Works with all functions marked with an asterisk (*).


COMMAND	Silent Lock*
BUTTON	
DESCRIPTION	Disables the vehicle's horn and alarm siren.

COMMAND	Silent Unlock*
BUTTON	
DESCRIPTION	Disables the vehicle's horn and alarm siren.

COMMAND	Valet Mode ON/OFF
BUTTON	
DESCRIPTION	Turns off remote start and security features when servicing your vehicle or valet parking. Keyless entry features remains functional.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF

COMMAND	Runtime Extend
BUTTON	
DESCRIPTION	Seamlessly extends your engine runtime without restarting your vehicle.

COMMAND	Mute ON/OFF
BUTTON	
DESCRIPTION	Disables the vehicle's horn and alarm siren even when alarm is triggered. Remote will still receive alarm notification.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF


COMMAND	Ignition Lock ON/OFF
BUTTON	
DESCRIPTION	Automatically locks doors when engine is running.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF


COMMAND	Passive Lock & Arm ON/OFF
BUTTON	
DESCRIPTION	Automatically locks and arms your vehicle 60 seconds after you unlock it.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF

COMMAND	Turbo ON/OFF
BUTTON	
DESCRIPTION	Cools down your turbo before turning the engine off. Programmable runtime from 30 seconds to 4 minutes.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF

COMMAND	Weather Start ON/OFF
BUTTON	
DESCRIPTION	Sets your vehicle to automatically remote start every 2, 3 or 4 hours (programmable) or from a temperature sensor sold separately.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF

COMMAND	Lock Remote
BUTTON	
DESCRIPTION	Disables all functions on your remote.
CONFIRMATION	1 chime + 1 flash

COMMAND	Unlock Remote ON/OFF
BUTTON	
DESCRIPTION	Enables all functions on your remote.
CONFIRMATION	2 chimes + 2 flashes

COMMAND	Mute Remote ON/OFF
BUTTON	
DESCRIPTION	Disables the chime when pressing any button on your remote.
CONFIRMATION	<ul style="list-style-type: none"> •1 chime ON •2 chimes OFF


PROGRAMMING A NEW REMOTE

Are you replacing a lost or damaged remote or simply adding an extra remote to your iDatastart system? Please take note of the following:

1. A functional iDatastart system must already be installed in your vehicle.
2. All new remotes must be installed by an iDatastart Authorized Dealer.
3. A maximum of 4 remotes can be programmed to your iDatastart system.

REPLACING REMOTE BATTERIES



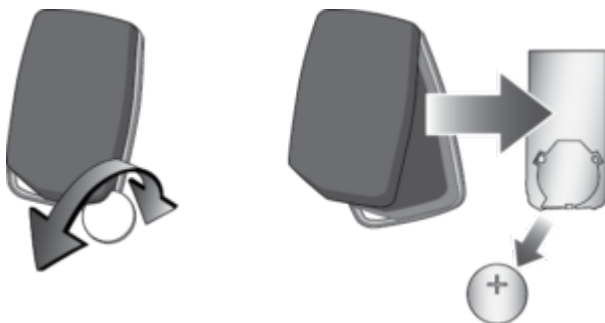



Follow the steps below to replace the batteries in your iDatastart remotes*.









1. Insert a 25 cent coin into the hollow corner of your iDatastart remote.
2. Gently twist the coin until the casing pops open.
3. Use your coin to pry open the rest of the case perimeter.
4. Carefully remove the circuit board from the case.
5. Slide the old battery out of its enclosure and replace with the new battery.
6. Carefully replace the circuit board into bottom half of the casing.
7. Snap top and bottom casings back together using your hands.

REMOTE STARTING FROM FACTORY KEY FOB

Your iDatastart system may enable remote engine start by performing one of the following button sequences on your factory key fob:

BUTTON	FUNCTION
Press on  ,  , 	Start engine
Press on  ,  , 	Stop engine

OR

BUTTON	FUNCTION
Press on  ,  , 	Start engine
Press on  ,  , 	Stop engine

NOTE: This feature may not be supported on some vehicles. If supported, the chosen button sequence will be communicated to you by your iDatastart Authorized Dealer at the time of installation. The remote start range will be equal to your factory key fob's door lock range.

ADJUSTING ENGINE RUNTIME SETTINGS

Once remote started from your factory key fob or long-range remote, your vehicle will run for the programmed 'runtime' setting. The default runtime is 15 minutes but it can also be programmed for 3, 5, 10, 25, 30 or 35 minutes. If you wish to change your remote start runtime setting, contact your iDatastart Authorized Dealer.

KEY TAKEOVER FOLLOWING REMOTE START

The ‘key takeover’ procedure ensures that your engine does not shut down upon entering the vehicle, during the programmed remote start runtime. To prevent your vehicle from shutting down, complete the steps below within the programmed delay time (45 seconds, 90 seconds, 3 minutes or 4 minutes):

For Standard Key Vehicles

1. Unlock and enter vehicle
2. Close doors
3. Insert key into ignition and turn ignition to ON position
4. Press foot brake

For Push-To-Start Vehicles

1. Unlock and enter vehicle with valid smartkey
2. Close doors
3. Press foot brake

NOTE: This feature may not be supported on some vehicles. If available, the programmed ‘key takeover’ delay time will be communicated to you by your iDatastart Authorized Dealer at the time of installation.

WHEN SERVICING YOUR VEHICLE



 
To ensure safety during vehicle servicing, the remote starter must be placed in ‘Valet Mode’. The ‘Valet Mode’ will disable remote start functionality. To activate or deactivate the ‘Valet Mode’, follow the instructions below:

With Vehicle Key:

Cycle ignition OFF/ON 2x rapidly, then press brake 3x.

FUNCTION	# OF PARKING LIGHT FLASHES
Valet Mode ON	1
Valet Mode OFF	2

With iDatastart Remote:

Turn ignition ON, then press  ,  + 

FUNCTION	# OF PARKING LIGHT FLASHES
Valet Mode ON	1
Valet Mode OFF	2

With iDatastart Antenna:

Turn ignition ON, then press & hold button for 5 seconds

FUNCTION	# OF PARKING LIGHT FLASHES
Valet Mode ON	1
Valet Mode OFF	2

REMOTE START TROUBLESHOOTING

If your iDatastart remote fails to start the vehicle, the parking lights will flash three times immediately, then flash a number of times according to the errors below:

# OF PARKING LIGHT FLASHES	DIAGNOSTIC	SOLUTION
3 + 1	Need to learn tach	
3 + 2	Key in ignition at ON position	Remove key from ignition
3 + 3	Door is open	Close door
3 + 4	Trunk is open	Close trunk
3 + 5	Brake is detected	Release brake
3 + 6	Hood is open	Close hood
3 + 7	Reservation not done (manual only)	Perform reservation procedure
3 + 8	Tach failure	Contact Authorized Dealer
3 + 9	VSS detected (vehicle in movement)	Contact Authorized Dealer
3 + 10	System is in Valet Mode	Exit Valet Mode
3 + 11	Can communication failure	Contact Authorized Dealer
3 + 12	Can communication failure	Contact Authorized Dealer
3 + 13	Bypass error	Contact Authorized Dealer
3 + 14	No Pitstop or Takeover available	Contact Authorized Dealer
3 + 15	Module overheat protection	Contact Authorized Dealer

VEHICLE SHUTDOWN TROUBLESHOOTING

If the remote start sequence has been completed and the vehicle shuts down, the vehicle’s parking lights will flash 4 times immediately, then flash a number of times according to the errors below:

# OF PARKING LIGHT FLASHES	DIAGNOSTIC	SOLUTION
4+1	No engine rev detected	Contact Authorized Dealer
4+3	Brake detected	Release brake
4+4	Hood open detected	Close hood
4+5	Engine revving over 3000 RPM	Check your accelerator pedal
4+6	Glow plug error	Contact Authorized Dealer
4+7	Vehicle speed sensor error	Contact Authorized Dealer
4+8	‘Check Engine’ light detected	Clear ‘Check Engine’ code
4+9	Low fuel detected	Add fuel
4+10	Door open detected	Close door
4+11	CAN communication failure	Contact Authorized Dealer
4+12	Key synchronisation failure	Contact Authorized Dealer
4+13	Bypass error	Contact Authorized Dealer
4+14	No Pitstop or Takeover available	Contact Authorized Dealer
4+15	Module overheat protection	Contact Authorized Dealer

LIMITED LIFETIME WARRANTY

Automotive Data Solutions Inc. (“ADS”) warrants to the original purchaser of the iDatastart product that the following components product shall be free of defects in material and workmanship under normal use and circumstances:

Control module and installation harnesses

For as long as the original purchaser owns the vehicle in which it was originally installed.

Remote transmitters and antenna

For the period of one (1) year from the date of original installation.

Excludes battery replacement.

In the event of any product malfunction during the Warranty period, the original purchaser must return to the Authorized Dealer where it was originally purchased with the original proof of purchase. If a malfunction is detected, the Authorized Dealer will elect to repair or replace the product at its discretion. Labor costs may be applicable and are at the discretion of the Authorized Dealer.

The Limited Lifetime Warranty is automatically void if:

- An original proof of purchase is not provided when servicing the product during the warranty period;
- The date code and/or serial number is defaced, missing, or altered;
- The iDatastart product is transferred to another vehicle;
- The vehicle in which the product was originally installed is transferred to a new owner.

ADS is not responsible for any damages whatsoever, including but not limited to any consequential damages, incidental damages, damages for loss of time, loss of earnings, commercial loss, loss of economic opportunity and the like that may or may not have resulted from the installation or operation of an iDatastart product. Purchasers sole contractual remedy is refund of the purchase price of the ADS product(s).

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

ADVERTENCIA IC

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement

économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

