



INSTRUCTIONS FOR USE :

This product is a remote-controlled climbing car driven by the front and rear wheels at the same time. It has the function of moving forward and backward, turning left and right leap and climb on rough condition areas, stone roads and ramps. Outstanding climbing abilities enable it to climb on walls till its limitation. When the vehicle power supply is turned on indicators will flash, lights are automatically off when the vehicle is paired with the remote control, lights up when there is a remote control function. Light flashes when the remote control is turned on, and the indicator light remains up after pairing with the car.

2.4GHZ FREQUENCY:

1. Turn on the remote control switch at first, then turn on the car switch, the product will then automatically connect to the frequency.
2. When the product shutdown or turnoff due to external factors cause, just simplify turn off the car switch and then turn it on, and just press any button on the remote control, the product will automatically re-connect to the frequency; if it still not working, please repeat the first step.

OPERATION INSTRUCTION:

1. Connect a set of 8.4V rechargeable battery a PC using the USB charger included in the package, USB light is red flash when charging, USB light is go out when full charged; Or connect the a set of 8.4V rechargeable battery with AC adaptor, plug the AC adaptor into a mains power socket and switch it on.
2. After full charged time is about 4-5 hours, put the rechargeable battery into battery case and connect the circuit board plug is correct pole, and closed the battery cover; Regularly check the toys, batteries, wires and plug of or USB or adapter, and stop use if these accessories are damaged unit they are repaired.
3. Open the battery cover of controller, install to 3 AA non-rechargeable batteries(not included) in the correct polarity direction, and close the battery cover.
4. Turn on the switch of controller and car body at the same time. After pairing with the controller, turn the remote control joystick to start playing; When the rechargeable battery is used up, remove the battery pack from car body and charge it.
5. Please make sure the power switch is " ON" position on the car and controller, when you are operating; If the power switch is in " OFF" position, the car and controller is closed.
6. The car body allows fine- tuned adjustment, which is on the bottom of car body, it allows the car to travel in a straight line with fine adjustment.

CAUTION:

1. Do not throw batteries into fire. Otherwise, batteries may explode or leak
2. Do not mix new and old batteries
3. Do not mix different types of batteries such as carbon-zinc, alkaline or rechargeable
4. It is suggested to use batteries of the same brand or the same type
5. As small parts may cause choking danger, battery replacement should be done by an adult
6. Note polarity when installing the batteries to avoid short circuit.
7. Do not leave exhausted batteries in the product. When necessary replace the batteries with new ones.
8. Do not charge batteries that are not rechargeable
9. If rechargeable battery is used, remove it from the product before charging
10. Please keep this packaging box as they contain important information about product.

PRECAUTIONS:

Car Speed: About 140m/ min
 Remote control effective distance: About 30 meters
 Do not store close to high temperature or humid places. Do not get close to the fire source, do not touch the water, do not drop or expose under the sun for too long. Turn off the switch when you are finished playing (turn the body switches to the "OFF" position). If you do not use it for a long time, please take out the battery of the body and remote control and store it separately. Fully charged battery will allow the toy run 15 minutes or even more, if the speed is slow, it indicates that battery is low, please charge it in time. Please check the relevant parts of the product periodically and must stop using, if damaged parts are found to be un-functional, no more usage until the repair is completed.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

FCC ID: 2AETTEDDIE6980

This is device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This is device may not cause harmful interference, and
- 2) This device must accept any interference received, included interference that may cause undesired operation.

ITEM NO: JH991445 TRACK NO: 090120

RC WILLEY HOME FURNISHINGS, INC.
2301 S 300 WEST
SALT LAKE CITY, UT 84115-2516

FCC Statement

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.