

ring


CHIME

Quick Install Guide

Table of Contents 2

What's in the Box.....	3
Power Requirements.....	4
Quick Setup... ..	5
Lighting Guide.....	6

With Ring, you're
Always home.

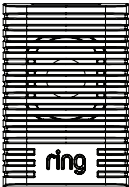


1. Ring Chime
2. Wall plug adapters (U.S, UK, EU)
3. Quick Install Guide

Power Requirements

4

Ring Chime can be powered by plugging it into an outlet that supports 110 to 240 VAC.

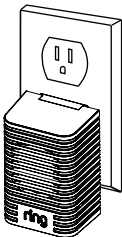

Quick Setup

5

1. Plug Chime into an outlet. The Ring logo on the front of the device will begin **pulsing blue**.
2. Open the Ring app and select **Add Device**
3. Choose **Ring Chime** and follow the in-app instructions to connect Chime to your Wi-Fi network.
4. Once connected to your Wi-Fi network, select one or more Ring Doorbells to link Chime to.

The Ring logo located on the front of Chime lights up to indicate the device's status.



Rapid Blinking

Scanning for available networks

Slow Pulse

Wi-Fi setup mode

Solid State

Connected to your Wi-Fi network.

Customer Support

7

For additional help visit
ring.com/help

Or call us at:

DOMESTIC: 1-800-656-1918

INTERNATIONAL: +1 310-929-7085

ring 1523 26th St.
Santa Monica, CA 90404

Hereby, Bot Home Automation, declares that this consumer electronic is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at www.ring.com/DoC.pdf.

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Modifications to this equipment not authorized by Bot Home Automation may void its approval for operation.

Cet appareil est conforme à IC RSS Règles et FCC Part 15.

Son utilisation est soumise aux conditions suivantes:

a.) Ce dispositif ne peut causer des interférences nuisibles.

b.) Cet appareil doit accepter toute interférence reçue, y compris

les interférences qui peuvent provoquer un fonctionnement indésirable.

Les modifications apportées à cet équipement non autorisé par connexion Bot Home Automation peut annuler son approbation pour l'opération.

CE 0682