



ring



Stick Up Cam Elite





1. Set up your Stick Up Cam Elite.

Download the Ring app.

The app walks you through setting up and managing your Stick Up Cam Elite.

Search for “Ring” in one of the app stores below, or visit: ring.com/app




Grab your Wi-Fi password.

You'll need it to set up your Stick Up Cam.
Write it down below so it's handy when you need it:

Your Wi-Fi password 

Let's get your Stick Up Cam ready.


First, slide off the bottom cover.

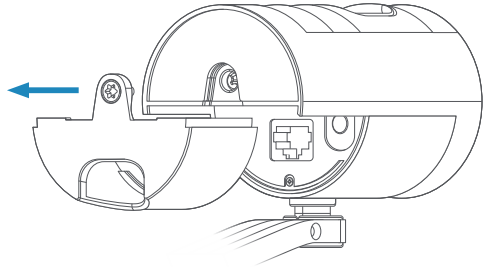

Do not reattach this cover until setup is complete!

When you plug your Ethernet cable into your Stick Up Cam, be sure to feed it through the hole in this bottom cover first.

You'll reattach the cover to your Stick Up Cam in a later step.

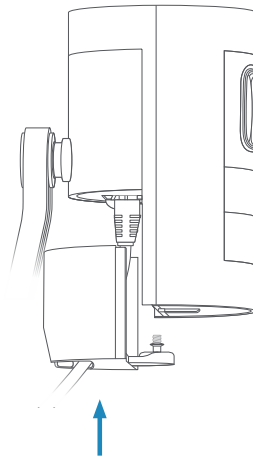

4

Powering your Stick Up Cam

Stick Up Cam connects using Power over Ethernet (or PoE). This lets you use one cable for both power and internet.

Most Ethernet equipment does not provide PoE, so we've included a PoE Adapter. You connect it to your network and a power outlet, then connect it to your Stick Up Cam.

If your home is already equipped with a PoE system, you can **connect Stick Up Cam directly to a PoE-enabled Ethernet port.**

i If using an existing PoE hub or switch, it must meet the IEEE 802.3af (PoE) or IEEE 802.3at (PoE+) standard.




PoE Adapter
(Included)

5

Connect your Stick Up Cam.

Use the included Ethernet cable to connect the PoE Adapter to your internet modem or Ethernet switch. Purchase a 2nd Ethernet cable to connect Stick Up Cam to the PoE Adapter.

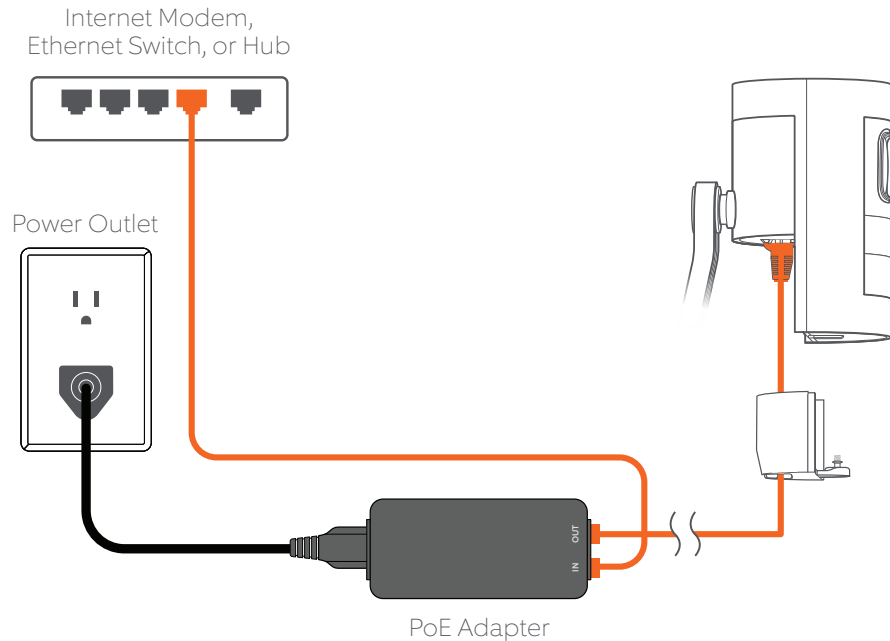

i For outdoor use, install your PoE Adapter indoors, then run an Ethernet cable outdoors to your Stick Up Cam.

6


Set up your Stick Up Cam in the Ring app.

In the Ring app, select **Set Up a Device**.

When prompted, select **Security Cams** and follow the in-app instructions.

Try it out!

After setup, tap the Live View button in the Ring app to see live video from your Stick Up Cam.

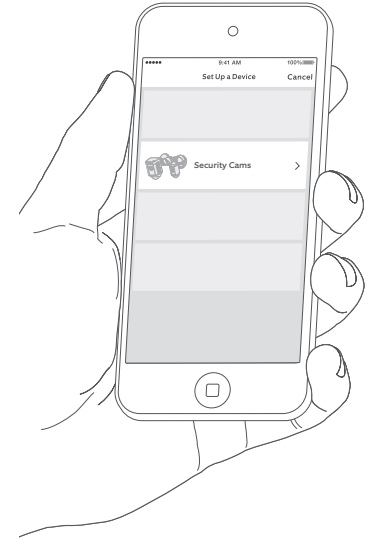

Blue light flashing?

If the light on the front of your Stick Up Cam is flashing after setup, it's updating its software.

Do not unplug your Stick Up Cam while the light is flashing!

2. Install your Stick Up Cam Elite.

How to use Stick Up Cam on a table or shelf:



Choose a location.

Stick Up Cam is happy just about anywhere, indoors or out. It comes ready to sit on a flat surface like a table or shelf, but can also be mounted to a wall or ceiling.

Choose a spot where it can provide the view you want, within reach of the Ethernet port you've connected to the included Ring PoE Adapter.



Table or shelf



Mounted on a wall




Mounted on a ceiling

Make sure that your Ethernet cable has been routed through the hole in the bottom cover.

Then, slide the cover into place on your Stick Up Cam. Secure the cover with the attached screw, using the star-shaped end of the screwdriver bit.

Finally, place Stick Up Cam in your chosen position. Your Stick Up Cam is now ready to use.

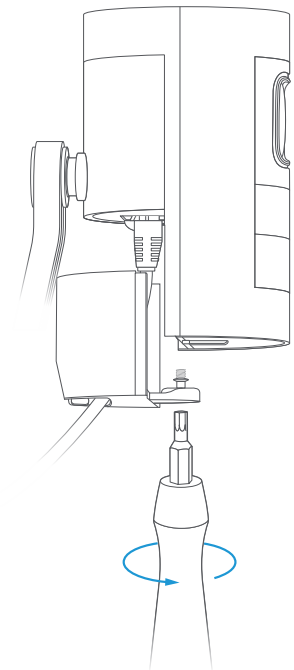


How to install Stick Up Cam on a wall:




Remove the plastic cover and rubber pad from the base.

You'll put the cover back on once you've mounted your Stick Up Cam.

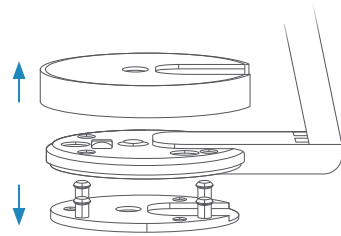

Flip the base to the rear.


The base of the stand is hinged. Before wall-mounting, flip the base down and behind your Stick Up Cam.

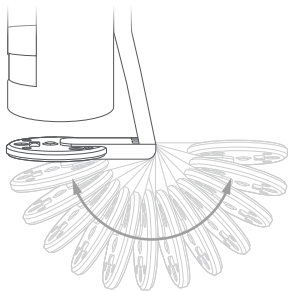

10

Push the rubber pad back into the base.


The rubber pad should sit between your wall and the base of your Stick Up Cam.

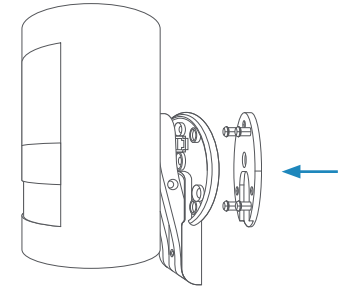

Drive the screws.

Hold the round part of the base against your wall, rubber-side down. Use the integrated level to ensure it's straight.

Finally, mount it with the included screws.

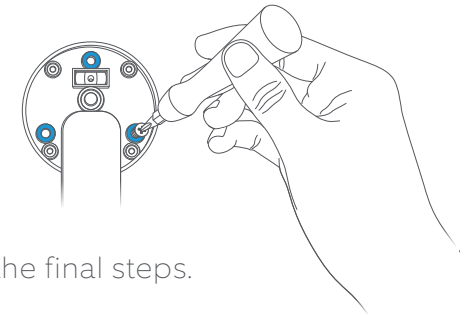

Then, head to page 14 for the final steps.


11

How to install Stick Up Cam on a ceiling:





Remove the plastic cover from the base.

You'll put the cover back on once you've mounted your Stick Up Cam.

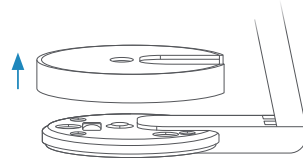


Rotate the stand above the camera:

The whole stand can rotate on its axis. Before ceiling-mounting, rotate the stand 180 degrees so the base is positioned above your Stick Up Cam.

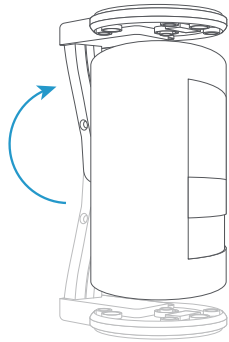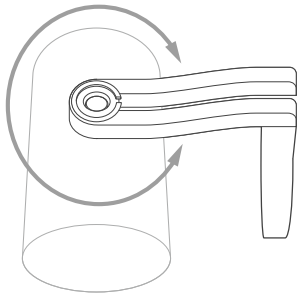

Drive the screws.

Hold the round part of the base against your ceiling, rubber-side down. Then mount it with the included screws.

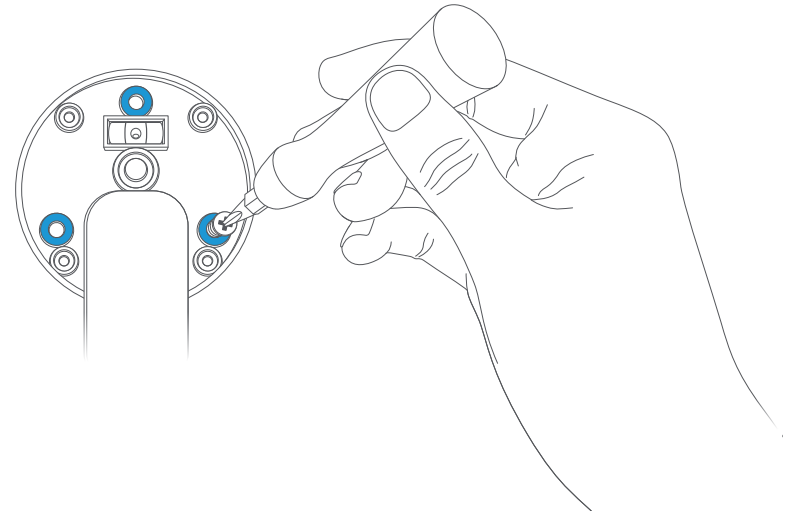

Then, head to page 14 for the final steps.


Final steps for wall or ceiling mounting:



Close it up.

Make sure that your Ethernet cable has been routed through the hole in the bottom cover and is plugged into your Stick Up Cam.

Then, slide the cover back into place and secure it with the attached screw, using the star-shaped end of the included screwdriver bit.

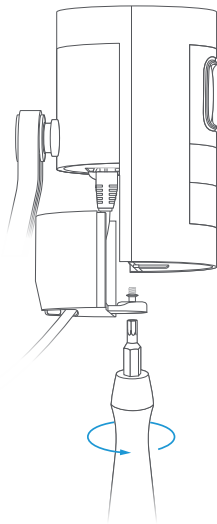


14

Snap the cover back onto the base.

Then, secure it with the included security screw, using the star-shaped end of the included screwdriver bit.

Now your Stick Up Cam is installed and ready to use.

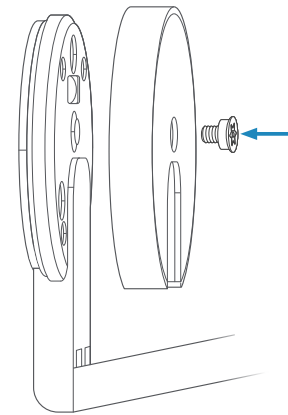

15



For additional help, visit: ring.com/help

Or give us a call...

US 1 800 656 1918

Canada 1 855 300 7289

Worldwide +1 310 929 7085

For a list of all our customer support numbers, visit:
ring.com/callus



To review your warranty coverage, please visit www.ring.com/warranty.
© 2019 Ring LLC or its affiliates. Ring and all related logos are trademarks of Ring LLC or its affiliates.
Last updated: 09/12/19



Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device is restricted to indoor use.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.