APP SETUP

- 1. Download the Sharper Tracker app from the App Store or Google Play.
- 2. Enable Bluetooth® on your phone if it's not already on.
- 3. Open the Sharper Tracker app.
- 4. For the Tracker to work, you must allow app access to Bluetooth® and Location Services. For additional app features, allow camera access.

TRACKER SETUP

- 1. Press and hold the button on the Tracker to turn on sync mode.
- Open the Sharper Tracker app and tap
 ⊕ to search for trackers.





4. Press FIND TRACKER to

confirm the Tracker is

connected.

3. Tap CONNECT to sync with the Tracker.

an langung V	Device	€
	Sharper Tracker	PROFILE
	ătt - E	CONNECT

ad Tablebile T	Device	⊕
	Sharper Tracker	PROFILE
	itti	FIND TRACKER

TRACKER LOCATING

- 1. Tap FIND TRACKER in the Sharper Tracker app and listen for the beep.
- 2. If you can't hear it, open Location in the app to see the last synced location.
- 3. Tap STOP ALARM to turn off the Tracker alert.

PHONE LOCATING

If you've misplaced your synced phone, double tap the button on the Tracker to make your phone ring.

Note: Your device will not ring if the volume is muted or headphones are plugged in.

You can customize the phone alert in the EDIT PROFILE screen.

© 2019 MerchSource, LLC. Irvine, CA 92618. All rights reserved. For technical support, please call 1-800-374-2744

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG. Smart Phones, must have built-in Bluetooth® wireless technology to connect.

TRACKER SHUTDOWN

To power down, press and hold the Tracker button until you hear a long beep.

BATTERY REPLACEMENT

Insert a small, flat-head screwdriver into the hole next to the strap and gently separate the Tracker casing. Replace the battery and press the body back together.

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Do not expose to extreme temperatures or moisture.
- Use this product only for its intended purpose.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

BUTTON CELL BATTERY WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention

- · Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Recycle or dispose of batteries according to federal, state, and local laws.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.