


ART DEPARTMENT			
Job # / Filename 2021-07-26_ShowerSpeakerWithMagneticMount_SI_IM		Product Line Sharper Image	
Designer Shane/Nick	Brand Manager Daniel D.	Finished Size 68mm W x 70mm H	
File Format Adobe Illustrator CC (live)/CS4 (OL)	Fonts Helvetica Neue, Manila Sans, DIN Next LT Pro	Color (Spot or 4C) 4 Color Process	# of Colors 4
Printing Process / Finishing Matte PP Coating		Comments OUTSIDE	
 <p>All copyright, trademark and patent rights or any other intellectual property rights or material associated with the content provided herein, and the selection, coordination and arrangement of such content, are owned exclusively by MERCHSOURCE LLC., or any third-party licensors. The use or misuse of any copyrights, trademarks, patents or any other intellectual property or materials, except as permitted herein, is expressly prohibited. Any infringements shall be prosecuted to the fullest extent of the law, both foreign and domestic.</p>			
C M Y K DIE LINE			



THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC.

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO AND TOMORROW'S TOMORROW) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2021 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED. PRINTED IN CHINA.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

DUE TO CONTINUOUS PRODUCT IMPROVEMENTS, THE PICTURES ON THIS MANUAL MAY DIFFER SLIGHTLY FROM THE ACTUAL PRODUCT.

RECHARGEABLE BATTERY WARNING:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.

- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY WARNINGS:


PLEASE READ BEFORE USE

- Not a children's item. Keep out of reach of children.
- Inspect the product before every use. If the product appears worn, frayed, cracked, or broken in any manner, discontinue use and discard immediately.
- Do not submerge in water.
- Do not disassemble.
- Do not use for anything other than its intended purpose.
- Do not charge speaker in shower or when it is wet.
- Do not allow moisture to enter USB port.



SHARPER IMAGE®

SPASTUDIO™ SHOWER SPEAKER

ART DEPARTMENT			
Job # / Filename 2021-05-26_ShowerSpeakerWithMagneticMount_SI_IM		Product Line Sharper Image	
Designer Shane	Brand Manager Daniel D.	Finished Size 68mm W x 70mm H	
File Format Adobe Illustrator CC (live)/CS4 (OL)	Fonts Helvetica Neue, Manila Sans, DIN Next LT Pro	Color (Spot or 4C) 4 Color Process	# of Colors 4
Printing Process / Finishing Matte PP Coating		Comments INSIDE	
 <p>All copyright, trademark and patent rights or any other intellectual property rights or material associated with the content provided herein, and the selection, coordination and arrangement of such content, are owned exclusively by MERCHSOURCE LLC., or any third-party licensors. The use or misuse of any copyrights, trademarks, patents or any other intellectual property or materials, except as permitted herein, is expressly prohibited. Any infringements shall be prosecuted to the fullest extent of the law, both foreign and domestic.</p>			
		C M Y K DIELINE	

CONTENTS

- Speaker
- Wall mounting plate
- Charging cable


FEATURES

- IPX7 waterproofing
- Rechargeable battery
- Built-in magnet for mounting speaker

GETTING STARTED

 
CHARGE

1. Make sure the speaker and cable are completely dry.
2. Remove the USB protector cover from the speaker.
3. Attach the small end of the USB charging cable to the speaker.
4. Attach the other end of the cable to a computer's USB port.
5. Orange LED will turn on while speaker is charging and turn off after it is fully charged.
6. Cover with water resistant USB protector cover.




CONNECT

1. Place your Bluetooth enabled device within 3 feet of the speaker.
2. Enable Bluetooth on your device and search for new Bluetooth devices.
3. Press and hold the power button to turn speaker on.
4. Select SI Shower Speaker from the list of Bluetooth available devices.

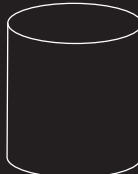


MOUNT

 1. Clean and dry a flat hard surface where the mounting plate will be placed.
2. Peel the red sticker from the plate.
3. Firmly press the plate onto the area for at least 1 minute.
4. Connect the magnetic back of the speaker to the plate.

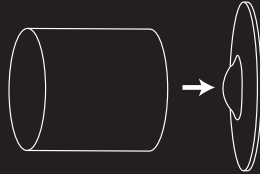


USING YOUR SPEAKER

 - Once connected, use your device to stream music to the speaker.
- Connect to a new device by pressing VOL+ and VOL-.
- Speaker will power off after 10 minutes of not connection.
- Charge when LED Indicator begins to flash.
- Hard reset by pressing the power button for 12 seconds.

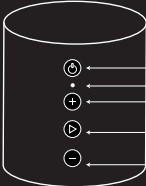

- Power – Press and hold on/off LED Indicator
- Volume Up – Press and hold, press twice for next song
- Play/Pause, Answer/Reject Call – Long-press to reject a call
- Volume Down – Press and hold, press twice for previous song

COMPATIBLE WITH



SPASTUDIO HOOK
SPASTUDIO HOOK PLUS