

IC: 21808-1015868

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) L'appareil ne doit pas produire de brouillage;  
 (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device must not cause interference.  
 (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Not a children's item. Keep out of reach of children.  
 - Do not use earbuds while driving.  
 - Listening to loud music for extended periods of time may damage hearing.  
 - Do not use earbuds while driving.  
 - Always pay attention to your surroundings while using your earbuds.  
 - Charge only with the included charging case and cables.  
 - Do not expose to extreme temperatures or leave in direct sunlight.  
 - Thoroughly inspect earbuds and case before every use. If items appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use immediately.

FCC ID: 2AEVM1015868

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

— Increase the separation between the equipment and receiver.  
 — Reorient or relocate the receiving antenna.  
 — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 — Consult the dealer or an experienced radio/TV technician for help.

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— Reorient or relocate the receiving antenna.  
 — Increase the separation between the equipment and receiver.  
 — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 — Consult the dealer or an experienced radio/TV technician for help.

## SAFETY WARNINGS:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

## RECHARGEABLE BATTERY WARNINGS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference

## FCC STATEMENT

## CONGRATULATIONS ON YOUR PURCHASE OF THE SOUNDHAVEN® BONE CONDUCTION.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO, TOMORROW'S TOMORROW) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2022 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

Printed in China.



 
SHARPER IMAGE®

## SOUNDHAVEN® BONE CONDUCTION



WIRELESS HEADPHONES

## CONTENTS

- SoundHaven® Bound Conduction headphones
- Carrying pouch
- USB-C charging cable

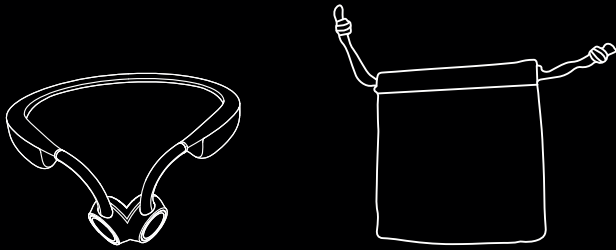

## GETTING STARTED

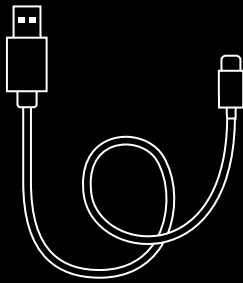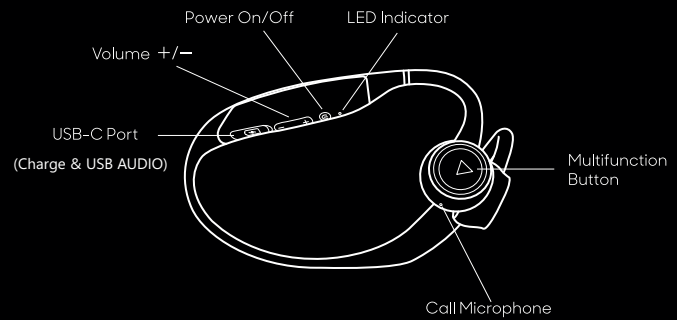  

## POWER

1. Connect the USB-C charging cable to a USB power adapter (not included).
2. Lift the flap covering the USB-C charging port on the right side of the headphones and plug the other end of the USB-C charging cable into the port.
3. The LED indicator will light up orange when charging and will turn green when fully charged. It will turn red when the battery is low.

## TURN ON/OFF

 
1. To turn on the headphones, press and hold the power button for approximately 2 seconds. The LED will flash green 3 times.
2. To run off the headphones, press and hold the power button for approximately 2 seconds. The LED will flash orange 3 times.

## HOW TO USE


### WIRELESS PAIRING

1. Power on the headphones to automatically enter pairing mode. The LED will flash orange and green.
2. Enable Bluetooth® functionality on your compatible device and select "SOUNDHAVEN BC" from the menu. A connected notification will play when the headphones have been successfully paired.
3. To manually enter pairing mode, hold the power button for 3 seconds.
4. To manually disconnect, turn off Bluetooth on your connected device or remove the headphones from the device list.
5. To reset the previously connected devices from the headphone memory, press and hold the multifunction button for 7 seconds.

### CALL FUNCTIONS

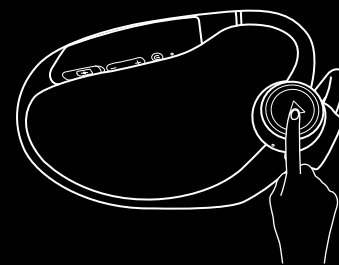

- To answer an incoming call, single press the multifunction button.
- To end a call, single press the multifunction button.
- To reject a call, press and hold the multifunction button for 1 second.
- To transfer a call, double press multifunction button.
- To answer another call and put the previous call on hold, quickly double press the multifunction button twice.
- To switch between calls, quickly single press the multifunction button twice.
- To end the active call and answer the incoming call, quickly press the multifunction button.

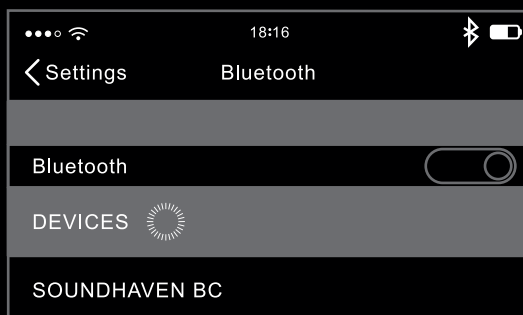 

### MUSIC FUNCTIONS

- To play or pause music, press the multifunction button once.
- To play the previous song, press and hold the minus (-) button for 3 seconds.
- To skip to the next song, press and hold the plus (+) button for 3 seconds.
- To raise the volume, press the plus (+) button once.
- To lower the volume, press the minus (-) button once.

### VOICE ASSISTANT

- To activate your voice assistant, quickly press the multifunction button 3 times.