Printed in China.

POWER CONSORTIUM.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

IRVINE, CA 92618. ALL RIGHTS RESERVED.

**DUAL MODE + WIRELESS CHARGING** 

**LAPTOP DESK** 

SHARPER IMAGE®

# LAPTOP DESK.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

THE 'Qi' SYMBOL IS A TRADEMARK OF THE WIRELESS

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO, TOMORROW'S TOMORROW) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2021 MERCHSOURCE, LLC.

## **CONGRATULATIONS ON** YOUR PURCHASE OF THE

## **FCC STATEMENT**

including interference that may cause undesired operation. interference, and (2) this device must accept any interference received, to the following two conditions: (1) this device may not cause harmful This device complies with part 15 of the FCC Rules. Operation is subject

this equipment does cause harmful interference to radio or television harmful interference to radio communications. However, there is no installed and used in accordance with the instructions, may cause deverates, uses and can radiate radio frequency energy and, if not harmful interference in a residential installation. This equipment These limits are designed to provide reasonable protection against limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Note: This equipment has been tested and found to comply with the

reception, which can be determined by turning the equipment off and guarantee that interference will not occur in a particular installation. If

- Reorient or relocate the receiving antenna. more of the following measures: on, the user is encouraged to try to correct the interference by one or

- Connect the equipment into an outlet on a circuit different from that Increase the separation between the equipment and receiver.

- Consult the dealer or an experienced radio/TV technician for help. to which the receiver is connected.

to operate the equipment. by the party responsible for compliance could void the user's authority Warning: Changes or modifications to this unit not expressly approved

product at least 20cm from nearby persons. To maintain compliance with the RF exposure guidelines, place the

placez le produit à au moins 20 cm des personnes proches. Pour rester en conformité avec les consignes d'exposition aux RF,

ECC ID: SYEAWT0T2693

## PLEASE READ BEFORE USE SAFETY WARNINGS

. Not a children's item. Keep out of the reach of children.

· For indoor use only. Do not use attachments of any kind other than those that may be included.

adjusting the work surface angle and when closing the foldable legs. To avoid pinching, injury, or property damage, always use caution when

worn, frayed/splintered, cracked, or broken in any manner, · Thoroughly inspect products before every use. If the product appears

discontinue use and discard immediately.

#### **DANGER:** $\nabla i \mathcal{I}$

the electrical outlet immediately after using and before cleaning. · To reduce the risk of electric shock, always unplug this appliance from

licence-exempt RSS(s). Operation is subject to the following two comply with Innovation, Science and Economic Development Canada's This device contains licence-exempt transmitter(s)/receiver(s) that

2) This device must accept any interference, including interference that 1) This device may not cause interference. conditions:

appareil est conforme aux CNR d'Innovation, Sciences et L'émetteur/récepteur exempt de licence contenu dans le présent may cause undesired operation of the device.

exempts de licence. L'exploitation est autorisée aux deux conditions Développement économique Canada applicables aux appareils radio


le brouillage est susceptible d'en compromettre le fonctionnement. 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si T) L'appareil ne doit pas produire de brouillage;

IC: 57808-7072693

#### **CONTENTS**

- a. Laptop Desk
- b. Mouse pad with wireless charging
- c. Removable cushion
- d. USB-C power cable

a.

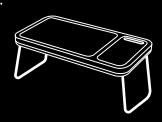


b.



c.




 d



#### **GETTING STARTED**


#### **POWER**

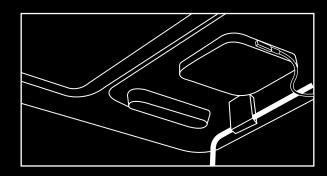

- $\cdot$  The laptop table is equipped with a 10W Qi charger.
- 1. Locate the USB-C port directly underneath the Qi charger inside the fabric mouse pad on the back of the desk.
- 2. Connect the USB-C power cable into the port.
- 3. Plug the other end of the cable into a USB power adapter and plug the power adapter into a wall outlet.
- 4. The Qi charger will be ready for use.

### **FEATURES**

#### **DESK MODE**

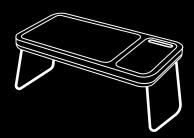

Fold out the legs located on the underside of the Laptop Desk

#### LAP MODE



With the legs folded closed, slip the removable cushion into the clips on the underside of the Laptop Desk.

#### **ANGLE ADJUSTMENT**



Lift the left side of the work surface and align the stand with the grooves to lock the work surface into place at the desired angle.

Note: Remove all items from the work surface before adjusting the angle.

# MOUSE PAD WITH WIRELESS CHARGING



Charge Qi compatible devices on the charging pad or use the fabric surface as a mouse pad.

Optionally, stand up your smartphone in the slot at the top of the mouse pad for easy operation and viewing. Wireless charging will not function in the phone stand.