Model # 1016957

Bluetooth

(BC)

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED

SHARPER IMAGE® NAME AND LOGO (INCLUDING THE 77 LOGO) TOMORROW'S TOMORROW, AND REALTOUCH) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2022 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED

TRADEMARKS OWNED BY BLUETOOTH SIG, INC

PRINTED IN CHINA

EYE MASSAGER **HOT + COLD THERAPY**

SHARPER IMAGE®

REALTOUCH™



CONGRATULATIONS ON YOUR REALTOUCH™ EYE MASSAGER.

Please read all instructions and warnings prior to use. Keep this sheet

as it contains important information for future reference.

FCC STATEMENT

1. This device may not cause harmful interference, and Operation is subject to the following two conditions: This device complies with part 15 of the FCC Rules.

interterence that may cause undesired operation. 2. This device must accept any interference received, including

television reception, which can be determined by turning the equipment off installation. If this equipment does cause harmful interference to radio or However, there is no guarantee that interference will not occur in a particular instructions, may cause harmful interference to radio communications. trequency energy and, it not installed and used in accordance with the residential installation. This equipment generates, uses and can radiate radio designed to provide reasonable protection against harmful interference in a a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are NOTE: This equipment has been tested and found to comply with the limits for

more of the following measures: and on, the user is encouraged to try to correct the interference by one or

- Connect the equipment into an outlet on a circuit different from that to - Increase the separation between the equipment and receiver. - Reorient or relocate the receiving antenna.

- Consult the dealer or an experienced radio/TV technician for help. which the receiver is connected.

approved by the party responsible for compliance could void the user's WARNING: Changes or modifications to this massager not expressly

authority to operate the equipment.

SAFETY WARNINGS:

. Not a children's item. Keep out of the reach of children. Do not use this item if you are pregnant or have an injury, infection, or illness. Consult your physician if you have a medical condition that may prevent

Test your comfort level and check massaged facial areas often. sate use of this item.

any loss of sensation or numbness. Consult your physician immediately if Individual reactions to massage, skin contact, and temperature therapy youry. Stop use immediately if skin becomes irritated or inflamed, if may vary. Stop use immediately if skin becomes irritated or inflamed, if

symptoms persists. Mever wear the eye mask during charging. Do not fall asleep while using the eye mask. Always allow eye mask to cool if it becomes uncomfortably hot during use. Do not expose to extreme temperatiruse or maisture.

Do not expose to extreme temperatures or moisture.

Never touch the charging cable with wet hands,

Do not use with attachments of any kind other than those that may be

Thoroughly inspect products before every use. If the product appears worn,

This product is not intended to treat, cure, or prevent medical conditions. frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

WARNINGS: RECHARGEABLE BATTERY

natuadea, or misusea. There is a risk of fire and personal injury if battery is punctured, nis product contains batteries that are non-replaceable

Do not dismantle, crush, incinerate or short-circuit battery.
 Never expose battery to extreme temperatures or moisture.
 Keep away from flammable materials and direct sunlight.

Charge on a non-flammable surface and keep away from flammable Only charge using the provided charger, cable, and/or adapters. Allow battery to cool to room temperature before charging.

off a strong odor.

Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, In the event of such damage, chargers must not be used until the damage has been repaired. Service or discose of battery according to be defined to be been and local law. Discontinue charging if battery becomes hot, swells, smokes, or gives


. Recycle or dispose of battery according to federal, state, and local laws. Reep these instructions for future reference.

IMPORTANT: MAINTAINING BATTERY HEALTH

- · Your massager is designed with a lithium-ion battery pack for cordless convenience, increased massage duration per charge, and frequent use and recharaina
- · To maintain charge capacity and prevent battery damage, all lithium-ion batteries must be regularly used and recharged.
- · For optimal battery health, keep the battery at approximately 50% state of charge when not in use.
- · All batteries naturally lose charge when not in use. If you will not be using the massager for an extended period, check the massager at least every 30 days to ensure the battery is at approximately 50% state of charge. Recharge as needed to maintain a 50% state of charge but do
- · IMPORTANT: DO NOT store the battery for an extended period with above 60% or below 40% state of charge. An incorrect state of charge during storage could irreparably damage the battery and may result in reduced charge capacity, inability to maintain charge, failure to recharge, or complete inoperability of the massager
- · For the health of the battery, always store the massager in a cool, dry place. The storage location should have a consistent temperature between 40°F and 70°F (5°C and 20°C) as well as a relative humidity at

WHAT YOU GET

- a. RealTouch™ Eye Massager
- b. USB-C to USB-A charging cable

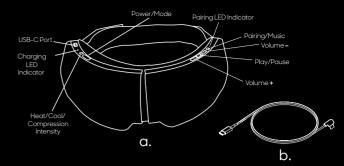


GETTING STARTED

CHARGING

- 1. Plug the USB-C side of the charging cable into the port located on the top of the eve mask
- 2. Plug the USB-A side of the charging cable into a power adapter (not included).
- 3. Plug the power adapter into a wall outlet. The white LED on the eye mask will flash during charging.
 4. Unplug the eye mask when it is fully
- charged. The LED will stop flashing and remain lit. It may take up to 3 hours to fully charge the eye mask.

Note: The eye mask cannot be used while charging. When the battery is low, a voice prompt will state "low battery" and a red LED will begin flashing. Recharge the eye mask to continue use.

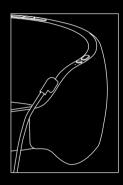

HOW TO USE

COMFORT FIT

- 1. Adjust the strap at both ends until you can easily and comfortably wear the eye mask. The strap features hook-and-loop fasteners that attach to the strap itself.
- 2. Make sure the eye mask sits comfortably on your face and that the fit is not too tight. Loosen the strap if necessary



POWER

- 1. Press and hold the power/mode button for 2 seconds to power on the eye mask. The "power on" voice prompt will play.
- 2. Press and hold the power/mode button again to manually turn off the eye mask. If left on, the eye mask will automatically power off after 15 minutes

PAIRING

- 1. To connect your device via Bluetooth® wireless technology, press and hold the pairing button for 2 seconds. The eye mask will enter pairing mode and the LED will start flashing blue.

 2. Select "SI MASSAGING EYE MASK" from
- your device's Bluetooth menu to connect the eye mask. The "Bluetooth connected" voice prompt will play and the LED will remain lit for 5 seconds.
- 3. To disconnect the eye mask and return to built-in soundscapes, press and hold the pairing button for 1 second



MUSIC SETTINGS

- 1. Press the play/pause ▶∥ button to play or pause audio.
- 2. Press the plus + button to increase the volume or the minus — button to decrease the volume. The eye mask powers on with audio at max volume.
- 3. To cycle through the built-in soundscapes, quick press the pairing/music button while the eye mask is not paired with another device.



MASSAGE SETTINGS

- 1. Power on the eye mask to automatically activate air compression massage.
- 2. Quick press the power/mode button to cycle through the 3 massage modes or turn off the massage functions
 - · Mode 1: air compression only
 - · Mode 2: air compression and vibration
 - · Mode 3: vibration only
 - · Off: disables air compression and vibration
- 3. To switch between low and high massage intensities, press and hold the hot + cold/intensity button for 1 second.



TEMPERATURE SETTINGS

- 1. Power on the eye mask to automatically activate alternating hot and cold therapy. 2. Quick press the hot + cold/intensity button to cycle through the 3 hot + $\,$
- cold modes or turn off the hot + cold functions
 - · Hot + Cold: alternates hot (3 minutes) and cold (2 minutes)
 - · Cold: remains cold
 - · Hot: remains hot
 - Off: disables hot and cold