

## SAFETY WARNINGS:

PLEASE READ BEFORE USE

- Use this item only for its intended use.
- Do not expose to extreme temperatures.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Recycle or dispose of battery according to federal, state, and local laws.
- Battery chargers used with the product are to be regularly examined for damage, charge to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Charge on a non-flammable surface and keep away from flammable products.
- Allow battery to cool to room temperature before charging.
- Only charge using the provided charger, cable, and/or adapters.
- Keep away from flammable materials and direct sunlight.
- Never expose battery to extreme temperatures or moisture.
- Do not disassemble, crush, incinerate or short-circuit battery.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- This product contains batteries that are non-replaceable.

## RECHARGEABLE BATTERY WARNINGS:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
1. This device may not cause harmful interference, and  
2. This device must accept any interference, including interference that may cause undesired operation.

## FCC STATEMENT

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- WARNING:** Changes or modifications to this massager not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CONGRATULATIONS ON YOUR PURCHASE OF THE BODY GROOMER.

Please read all instructions and warnings prior to use. Keep this sheet as it contains important information for future reference.



SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2022 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

PRINTED IN CHINA.

 


# SHARPER IMAGE®


## BODY GROOMER

## WHAT YOU GET


- a. Body Groomer
- b. Wireless charging stand
- c. 4 blade guards
- d. Brush
- e. Storage tray

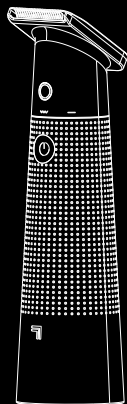

a.

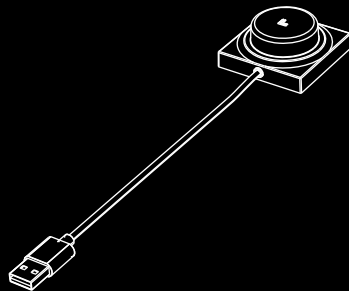 


b.

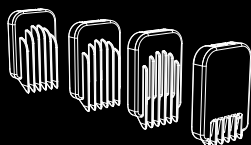 

c.



 
d.

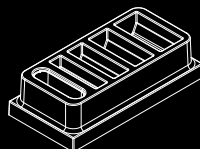

e.


## GETTING STARTED

 1. Plug the USB end of the wireless charging stand cable into a 5V USB power adapter or port.

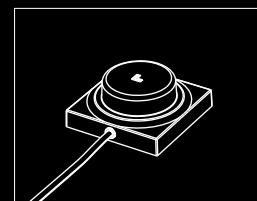

2. Place the trimmer on the wireless charging stand. To fully charge the battery from 0% takes approximately 2.5 hours. The LED indicator shows the charge status when charging or using the trimmer.

 
- Pulses red – charging, under 20%
- Solid red – in use, under 20%
- Pulses white – charging, over 20%
- Solid white – in use, over 20% battery
- Solid white and then off – finished charging

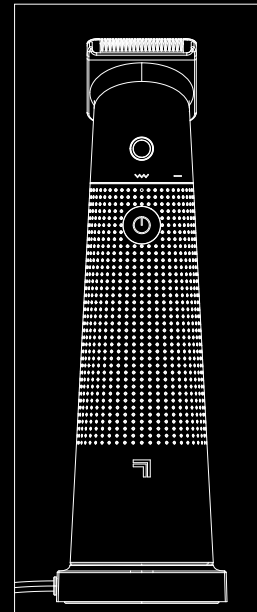

## HOW TO USE



### POWER + TRAVEL LOCK

 1. Press the power button to power on the trimmer.
2. Press the power button again to power off the trimmer.
3. To engage the travel lock, twist the top of the trimmer clockwise until the straight line on it aligns with the dot above the power button. The power button will not activate while the travel lock is engaged.
4. To disengage the travel lock, twist the top of the trimmer counterclockwise.

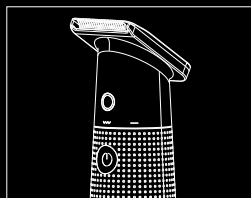

### CLEANUP

  1. Make sure the trimmer is powered off.
2. Clean off the trimmer head using the included brush.
3. For thorough cleaning, remove the top section of the trimmer head by gently pressing up from the bottom of the section until it slides off. Replace immediately after cleaning.
4. Rinse the trimmer under running water and then gently shake off any excess water before charging or storing the trimmer.

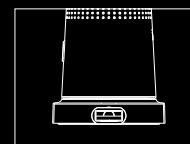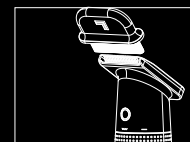

### TRIMMING

1. Make sure the trimmer is powered off.
2. Select the blade guard size you want to use.
3. Slide the front of the blade guard over the cutting edge of the trimmer head and then press down on the back of the blade guard until it clicks into place.
4. Trim your hair. You can use the mirror on the base of the trimmer to check your progress and you can activate the trimming light by pressing the light button on the back of the trimmer.
5. To remove or swap the blade guard, power off the trimmer and then lift up on the tab at the back of the blade guard.

