

HAIR VACUUM

SHARPER IMAGE®



SAFETY WARNINGS:

PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Place wireless charging pad on flat and stable surfaces only.
- Keep nozzle away from hair, face, fingers, uncovered feet, and loose clothing.
- Do not use to vacuum any liquids.
- Do not use to vacuum hard or sharp objects that could damage the vacuum cleaner, including but not limited to glass, nails, screws, or coins.
- Do not use to vacuum drywall dust or ashes.
- Do not use to vacuum smoking or burning objects such as hot coals, embers, cigarettes, or matches.
- Do not leave vacuum cleaner unattended while powered on.
- Do not insert objects into any openings in the vacuum cleaner. Use only to vacuum loose debris.
- Do not immerse or expose vacuum cleaner to water or other liquids.
- Do not expose vacuum cleaner to high temperatures or heated surfaces.
- Do not use, charge, or store the vacuum cleaner below 37.4°F (3°C) or above 104°F (40°C). Ensure the vacuum is at room temperature during use.
- Do not use vacuum cleaner with attachments of any kind other than those that may be included.
- The vacuum cleaner includes no serviceable parts. Do not modify or attempt to repair.
- For indoor use only.
- Thoroughly inspect vacuum, wireless charging pad, and power cord before every use. If any parts appear worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

RECHARGEABLE BATTERY WARNINGS:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.



Printed in China.

1-800-374-2744.

FOR CUSTOMER SUPPORT, PLEASE CALL

ALL RIGHTS RESERVED.

MERCHSOURCE, LLC, IRVINE, CA 92618.

TRADEMARKS, DISTRIBUTED BY AND © 2022

THE 77 LOGO) ARE TRADEMARKS OR REGISTERED

SHARPER IMAGE NAME AND LOGOS (INCLUDING

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

CONGRATULATIONS ON YOUR PURCHASE OF THE HAIR VACUUM.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CONTENTS

- a. Hair Vacuum
- b. Wireless Charging Pad

a.

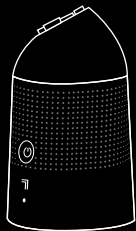


b.



GETTING STARTED


POWER

 1. Plug the power cable attached to the wireless charging pad into a USB power adapter (not included) and then plug the USB power adapter into a wall outlet.
2. Place the vacuum on the charging pad. The base of the vacuum is contoured to dock with the charging pad.
3. Fully charge the vacuum before first use. The LED indicator on the front of the vacuum will flash red when charge is below 20% and flash white when charge is above 20%. The LED indicator will stay solid white for 5 minutes and then power off when the vacuum is fully charged.

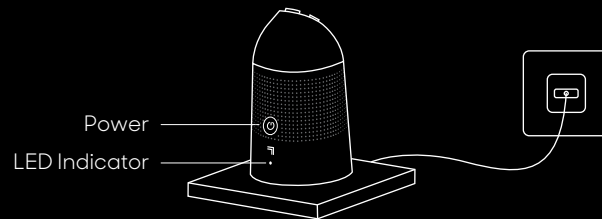

HOW TO USE

 1. To power on the vacuum, press the power button. The LED indicator will light up when the vacuum is on.
2. Swipe the nozzle on top of the vacuum across any hair or small debris until the area is clean.
3. When you are finished cleaning, press the power button again to power off the vacuum.

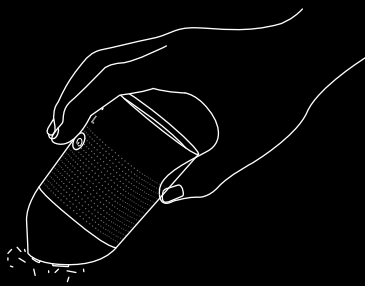

CARE INSTRUCTIONS

1. When you are finished cleaning or the vacuum is full, power off the vacuum and then empty the dustbin.
2. Hold the vacuum over a garbage can and then twist the vacuum nozzle counterclockwise to access the dustbin.
3. Empty the dustbin into the garbage can.
4. Pull out the filter and brush away any remaining debris. If the suction diminishes between uses, clean the filter more thoroughly with a dry soft bristle brush.
5. Replace the filter.
6. Line up the dots on the vacuum nozzle and vacuum base, press together and gently twist clockwise until locked.
7. Wipe the vacuum exterior with a dry non-abrasive soft cloth until clean.
8. Place the vacuum back on the charging pad.

