

1.6 User Manual

 
Suitable for 14 years old and above

YD-826 4 CH RC QUAD-COPTER (LATEST 6-AXIS FLIGHT SYSTEM / 4 WAYS FLIPS)



Locking route mode

The button can lock the flying direction, no matter what direction the head pointing, easy to control back the drone.

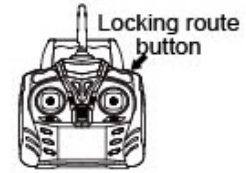

2.4
GHZ

MAIN PARAMETERS:

Main blade diameter:	60mm	Frame width:	150mm
Frame length:	150mm	Frame height:	55mm
Battery:	3.7V380mAh	Main motor type:	7x20 4pcs
Total weight:	46g±2g	Charge time:	About 50 minutes
Gyroscope:	Built-in	Flight time:	5-6 minuts

MIAN FEATURES:

- 1: the 4 motors within the heli give the heli stable flight and enable it to perform the actions easily
- 2: with the modularized structure, it's easy to install and convenient to disassemble for repair
- 3: with the 6 axis gyroscope and position control system automated, the heli can be easily stopped and accurately aloft
- 4: once fully charged, the 3.7V380mAh Li-Po battery gives approximately 5-6 minutes flight

1.INTRODUCTION

Thanks for choosing ATTOP product! This is a 4 axle aircraft which is capable of flying in confined space and outdoor, in order for you to maneuver the R.C. helicopter more conveniently and easily, please fly it only after this instruction manual is carefully read, in the meantime, this manual shall be properly kept for future necessary adjustment and repair work.

Suitable for indoor or outdoor which under Grade 3 winds.

WARNING LABEL LEGEND



Mistakes made due to negligence of these operation instructions may cause property loss and severe human injury.



Mistakes made due to negligence of operation instruction may cause danger.



Please do not fly the R.C. helicopter under any specified forbidden environment.

IMPORTANT NOTES

This RC helicopter is not a toy, though it is just a mini RC 4 axle heli, it still could be dangerous. Please fly the model RC heli according to the manual instruction and its notices. Any modification, maloperation or unfamiliarity to the heli could bring about unexpected danger or accident, please be prudent.

NOTE: for any RC helicopters, neither manufacture nor dealers is responsible for any losses caused by maloperation or improper assembly or accidents owing to abnormal abrasion or inappropriate environment. This product is suitable for 14years old and above. Please only operate the heli in safety environment, once sold; ATTOP will not hold any responsibilities for property loss and personal injury caused by maloperation, disassembly and modification.

This model RC heli requires high operation skills and is consumable. After itspackage is opened and the heli is flown, varying degree of abrasions occur. Malfunction or dissatisfactory brought about during usage will not be entitled to replacement nor return. In case of operation and repair instruction, please contact ATTOP and our agencies for technical support and after sale service.

2.SAFETY NOTES



R.C model and 4 axle aircrafts are products with danger; it must be away from the crowd when flying. Misassemble, defect, poor performance of the electronic control or improperoperation could lead to unexpected incident like plane damage or personal injury. Please pay attention to flight safety and make sure it is well understood that responsibility will fall on the player for accidents caused by himself.



R.C. heli. is for indoor and outdoor use only, must stay away from obstacles when flying This product is suitable for indoor and outdoor (wind scale must be under 4) use only, for indoor, please make sure it is clear of obstacles; for outdoor, stay away from crowd and pets etc, do not fly it in improper environment,such as areas with heat source, power line and power source etc.otherwise, fire or electric shock,loss of fortuneor personalinjury could occur due to crash, emergency landing or entwining.



Stay away from damp conditions

The interior of heli consists of many precise electronic and mechanic components, therefore moisture and water must be prevented and it shall not be performed in bathroom or in rainy days to avoid breakdown of the components that may cause unexpected accident!



Use the product properly

Please do not tear apart or modify the RC heli at will and only apply authentic ATTOP components to update, replace or fix RC heli to ensure its safety. Please only maneuver it within its limit. Any illegal purpose of use concerning its safety shall bestopped.



Attent ions to battery

When install batteries, make sure the electric polarities are correct, do not mix new batteries with old ones. For long time storage, please take them out to prevent battery leakage. Please dispose abandoned batteries in accordance to the laws and regulations of the corresponding region to prevent pollutionto the environment.



Instruction Li-Po battery

LI-Po battery is comparatively more dangerous than other batteries. Please make sure below instruction is carefully read and rigorously followed prior to using them. ATTOP shall not be responsible for any damages caused by improper operation of the battery.

The battery can only be charged by authentic ATTOP charger, otherwise it may lead to fire or explosion. Do not hit, disassemble, burn or connect them to the wrong pole. Avoid contact from metal or sharp item otherwise it may cause short circuit or fire.

Be cautious when charging the battery and make sure it is within sight and beyond the reach of children to avoid any danger.

Please do not charge the battery if it becomes when during usage. Otherwise it will inflate, deform or even cause fire which could cause property damage and personal injury.

Please dispose abandoned batteries in accordance to the law and regulation of the corresponding region to prevent pollution to the environment.



Stay away from heat source

Most of the RC aircraft are made of PA fiber, plastic and electronic materials therefore it should stay away from heat source, sun shine to prevent deformation even damage caused by high temperature.






Not to do it alone


This product is suitable for 14 years old or above. It is not easy to learn to fly 4 axle RC heli at the beginning, try not to fly it alone and make sure with experience adult instructing.



3. STANDARD EQUIPMENT

 Li-Po battery 3.7V 380mAh	 USB charger	 (2) (1) forward direction blade *1pcs backward direction blade *1pcs
--	--	--

 4. NOMENCLATURE

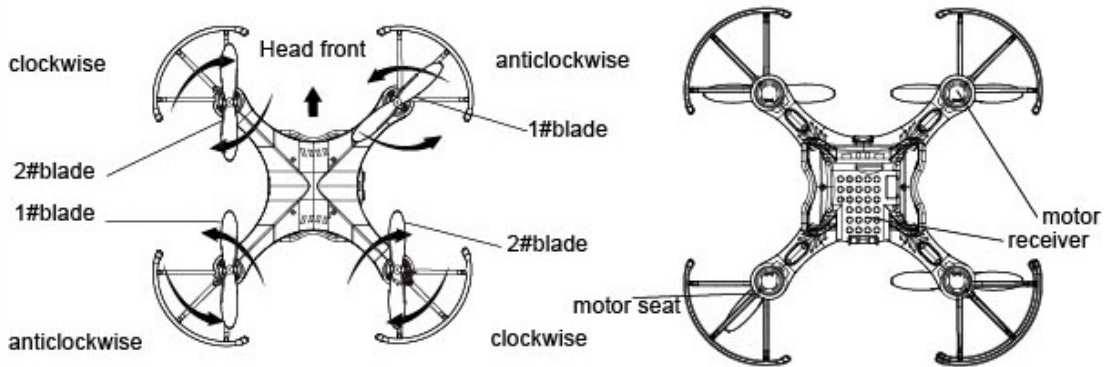

5. Installation and attention of USB charger

1. Suitable for (3.7V) Li-polymer battery pack.

3. Operation steps



3. Charging statuses corresponding to LED

Step	operation	LED status	Charging status
1	Connect the USB cable to the computer	LED is in red solid on	Power on
2	Step 1 + connect the battery pin to USB cable	LED red light is off	Charging
		LED is in red solid on	Saturated

4. matters needing attention

- (1) During charging, the charger should be put in dry and ventilated place and far away from heat source and inflammable and explosive substance.
- (2) Only used to charging 2S Li-ion or Li-polymer battery pack .if not , the charger or battery may be damaged .
- (3) Never leave the charger unsupervised during the process of charging in order to avoid risk of accidents.
- (4) Never immediately charge your battery pack as soon as the flight is finished , or when its temperature doesn't cool down .otherwise the battery will take a risk in swelling , even a fire.
- (5) Ensure the correctness of polarity before connection the battery to charger.
- (6) Avoid drop and violence during the process of charging .drop and violence will result in internal short circuit of the battery.
- (7) For the sake of safety ,please use original charging equipment and battery pack . please change new one in time when the flying time is becoming shorten due to long time usage .
- (8) If it is retained in the charger for a long time after saturated , the battery may automatically discharge. When the charger detects that the voltage of individual cells is lower than the rated voltage, it will re-charge until saturated. Frequently charging and discharging will shorten the lifetime of your battery pack .It is advised that please cut off the power and took off the battery after the charging is saturated.

5. Maintenance of battery pack

 
 
- (1) The battery pack should be put in dry and ventilated place. The storage temperature of environment is ranged from 18°C to 25°C.
- (2) Please avoid frequent charging and excessive discharging the battery pack in order to prolong its life cycle.
- (3) It is a must to maintain the battery pack before long-term storage. That is to charge the battery to the level of 50-60% saturation.
- (4) If the storage term is over 1 month, it is advised to monthly check the voltage of every cell of the battery pack. The voltage of every cell should be not less than 3V. Otherwise, please refer to the above article (3) .
- (5) From the view point of protection, new battery pack should be motivated before usage. That is to charge and discharge 3-5 times, but discharge is not less than the level of 70% saturation. This process will make the battery lifetime longer and voltage more stable.

6. NOMENCLATURE



DO not disassemble

speed switch
(40%/70%/100%)
ascend/descend (↑)
L/R turning
(←→)
trimmer
(L/R turning)
power
indicator light

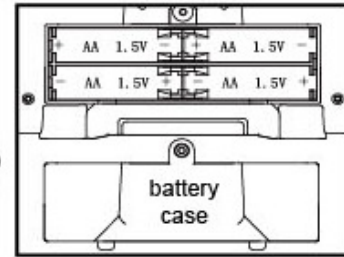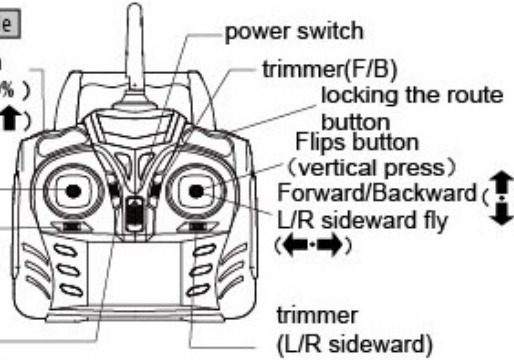

(Power indicator light is red; low power is flashing slowly, and flashing fast when searching the frequency)

 
The model is using the last six-axis gyro system and auto frequency adjusting system, normally the user don't need to adjusting the trimmer. User can use trimmer when failed in auto-adjusting.

7. SPECIAL TIPS BEFORE OPERATING

1. Power on the aircraft: Connecting the power of aircraft, then put the aircraft on a flat ground or table, 3 secs rest.
2. power on the remote: the indicator light is flashing, pull the throttle to the top and back to the lowest. then the remote indicator light is solid lighting, that means the aircraft has succeeded connected with the remote, and you can prepare for your flying action.
3. Notes when flying: Throttle down the throttle stick to the lowest position promptly if the aircraft is crashing or the rotor block down. Otherwise, the received circuit board will be damaged.

8. BINDING OF RADIO TRANSMITTER AND RECEIVER


STEP1
put the aircraft on a flat surface and insert the Li-Po battery as indicated on the drawing into the battery box until it is fixed. Do not move the helicopter and regulate the lever of remote and gyro to their center point

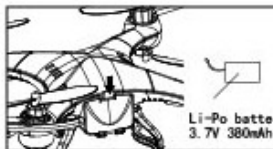

Li-Po battery
3.7V 380mAh

STEP2
push the throttle stick to the lowest point and switch on the remote power

 put power joystick to lower

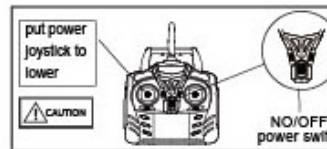

CAUTION

NO/OFF power switch

STEP3
after flight, please remove the battery from the helicopter and please form a habit doing this to keep them well maintained.



Li-Po battery
3.7V 380mAh

WARNING
if not taken out, they may be damaged due to over discharging, which could even cause fire.

STEP4
for long time storage, please remove the batteries and keep them well maintained.



NO/OFF power switch

WARNING
if taken out, they may be damaged due to over discharging, which could even cause fire.

For long time storage, please remove the battery from the remote and keep them well maintained.

9. FLIGHT ADJUSTMENT AND SETTING

PRIOR TO FLIGHT, PLEASE PRACTICE FIRST

Prior to flight, please practice first so as to acquaint yourself with the operations. Before it is well understood how to maneuver the flight, please do not fly the R.C heli. Please read instruction manual and keep practicing until the basic flying skills are mastered.

1. put the R.C heli in an open area with its tail facing the player.
2. practice operating all the controlling sticks on the remote (see detailed operation in below picture) and repeat the practice for throttle sticks, L/R turning trimmer, and F/B flying trimmer.
3. practice for flight is crucial, please keep practicing until all the operations can be done on hearing the orders for each movement without thinking



AUTO FREQUENCY ADJUSTING

Pull the left stick to lower left corner and right stick to lower right corner simultaneously. After 3 seconds LED light on the UFO head will flash, meansthe adjusting is complete.you can control the quadcopter now.



MODE	ILLUSTRATION	MODE	ILLUSTRATION
Aileron		Throttle	
Elevator		Rudder	

TRIMMING ON THE FLYING ACTIONS


Slowly push the throttle stick up till the heli flies off the ground. If the heli tilts, trimmer can be utilized to modify it

1.adjustment on direction

  When the heli takes off, if it flies with turning left/right
 If it turns to the right, turn the trimmer to left
 If it turns to the left, turn the trimmer to right

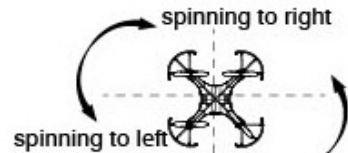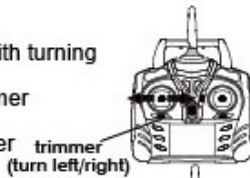

 2.adjustment on flying forward and backward When the heli takes off, if it leans forward/backward
 If it leans forward, turn the trimmer down
 If it leans backward, turn the trimmer up

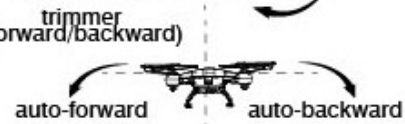

3.adjustments on level turn When the heli takes off, if it leans to the right/left
 If it leans to the right, turn the trimmer to left
 If it leans to the left, turn the trimmer to right







360° flip function operation manual

- 1.slowly raise the throttle stick
- 2.keep the UFO flying smoothly in the air.
- 3.Press the right top button once,after "Beep..." , the UFO is ready to do 4-ways 360° flip.Now you can pull the right direction stick to achieve front,back,left,right side flip.The right direction stick will auto restore to the default status.Repeat above method to continue your flip fun.



Vertical pressing the right top button then"Beep,Beep..."


MODE	ILLUSTRATION	MODE	ILLUSTRATION
Pull to Right side flip		Left side flip	
front flip		Rear flip	

10.TROUBLE SHOOTING DURING FLIGHT

	ISSUES	CAUSE	SUGGESTIONS
1	After the battery is inserted in the heli, indicator light on receiver keeps flashing, no response to operations	Frequency adjusting between remote and receiver not successful	Readjust frequency for remote and receiver. (please refer to P.6 for details)
2	No response after battery is inserted in the heli	1. check if the power for remote and receiver is on 2. check the voltage of the batteries of remote and receive 3. contact on the poles are not good	1. open the transmitter and make sure if the battery is inserted in right position 2. use a fully charged battery 3. reinstall the battery and confirm if the contact for the pole is o
3	Motor does not run when operating the throttle stick and the indicator light on receiver keeps flashing	Power for the Li-Poly batter is not enough	Charge the battery or replace it with a full battery
4	Main motor blade spins but heli won't fly	1. the blade has deformed 2. battery power is not enough	1. replace the main blade 2. charge the battery or replace it with a fully charged battery
5	Heli shakes a lot	1. main blade has deformed 2. main frame has deformed	1. replace the main blade 2. replace the main frame
6	Turning trimmer has been tried but heli still spins, speed to the right and left does not conform	1. main blade has deformed 2. motor does not work wel	1. replace main blade 2. replace main motor
7	Heli leans forward/backward	Center on the gyro is not correct	Turn on the heli and center the climbing and diving trimmer then restart the heli
8	It won't fly after it falls down	1. motor has dropped off 2. gear has loosened	1. reinstall the motor 2. tighten the gear

11.PARTS LIST

NO	NAME	NO	NAME	NO	NAME
1	protected ring	2	propeller A	3	propeller B
4	motor	5	upper housing	6	lower housing
7	PCB	8	camera PCB	9	PCB holder
10	LED board	11	light cover	12	battery
13	battery cover	14	landing feet		

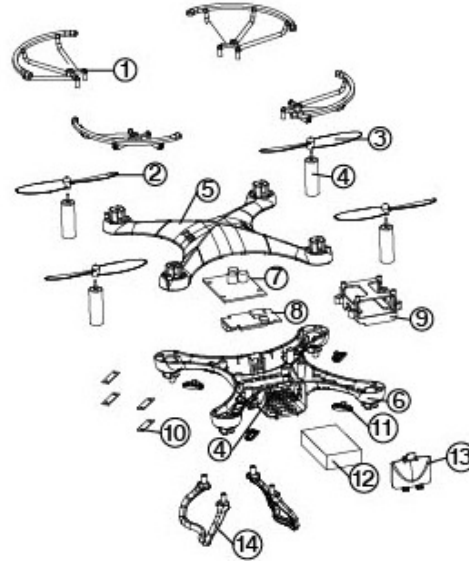 

Materials, specifications for the parts and packing indicated in the instruction manual are only for reference, ATTOP will not be responsible for their changes in future nor could we notify consumers. For any updates and changes, please refer to ATTOP website.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.