

Instruction Manual, 1 Sheet Folded Printed Both Sides

OUTSIDE PRINT




BACK COVER

FRONT COVER

215.6 mm

INSIDE PRINT

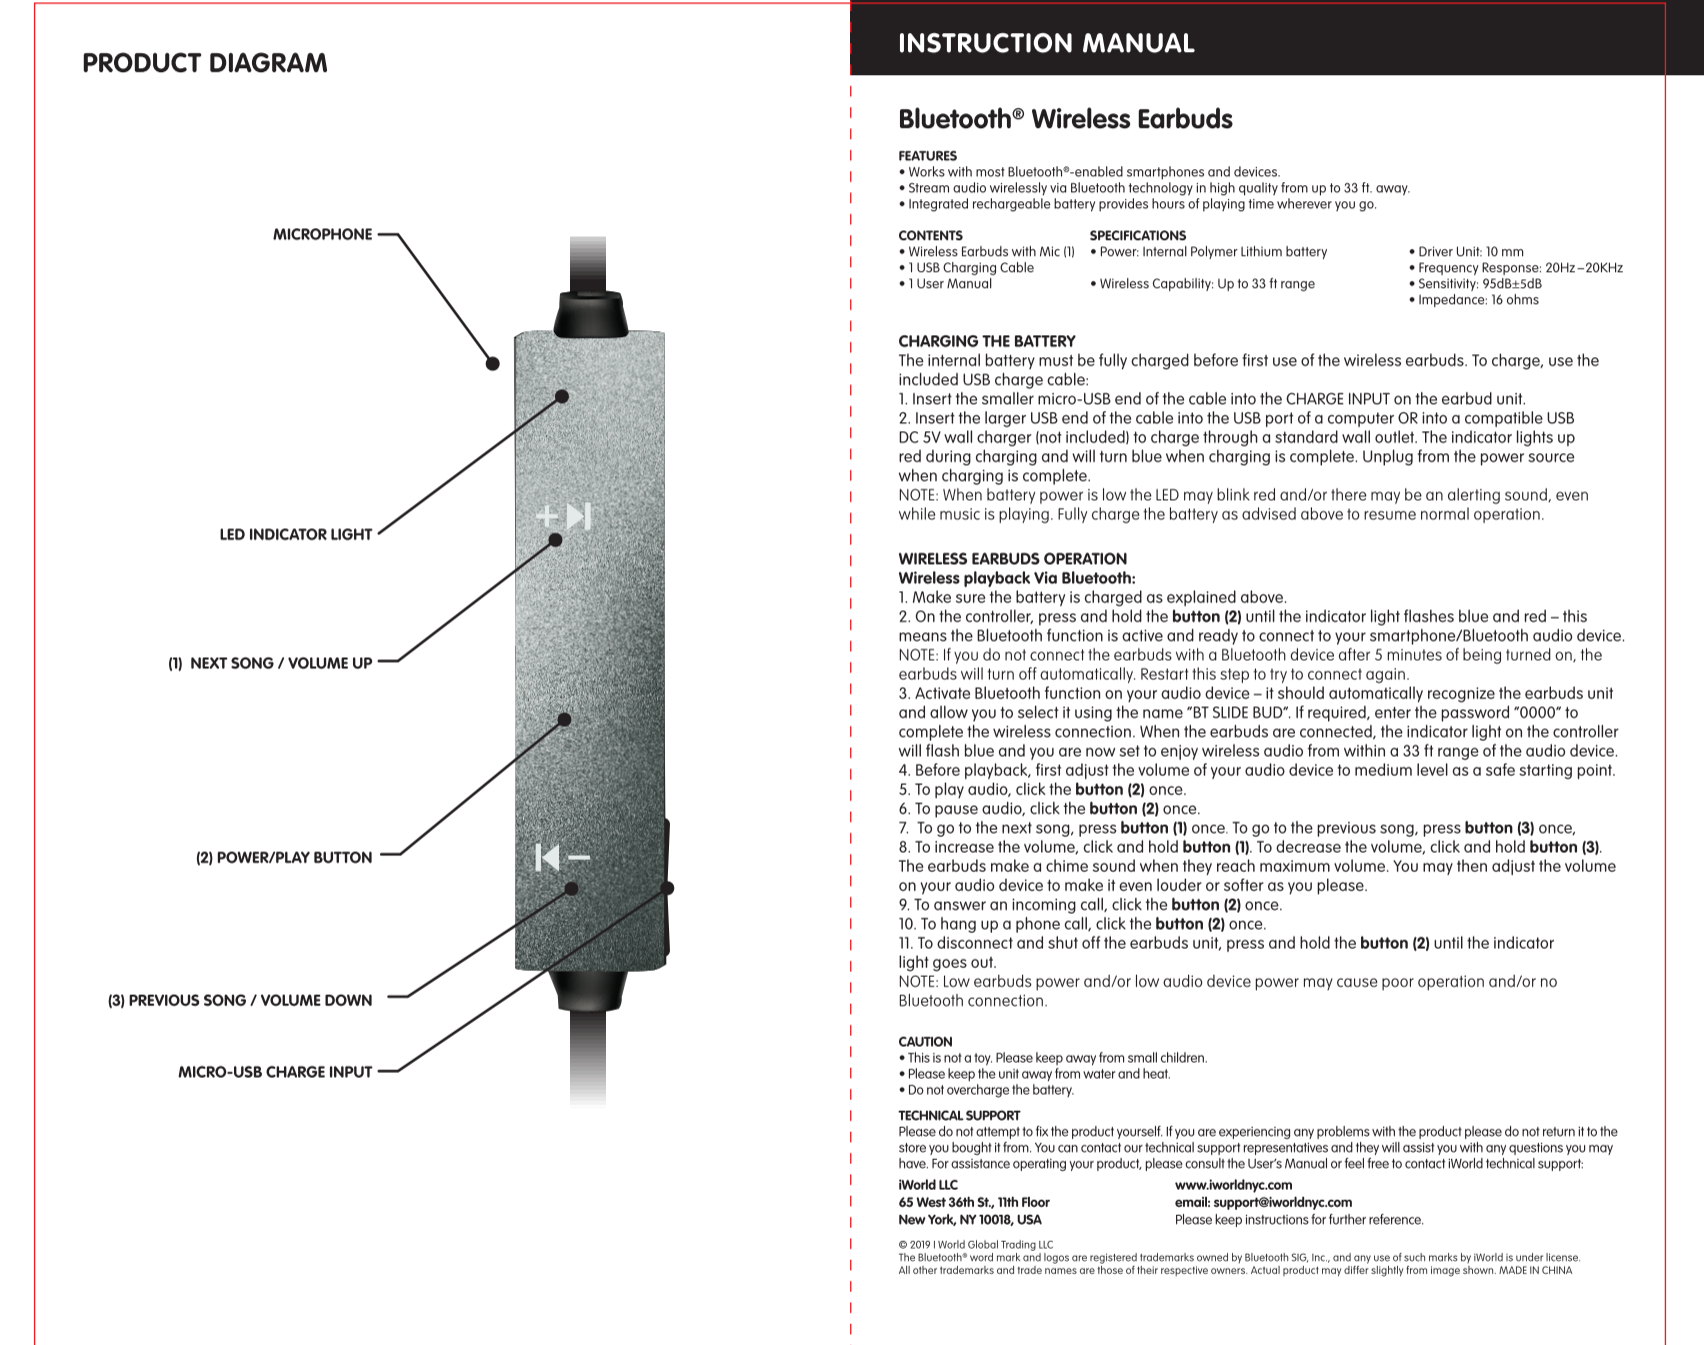

FRONT INSIDE

BACK INSIDE

INSTRUCTION MANUAL

Bluetooth® Wireless Earbuds

FEATURES

- Works with most Bluetooth®-enabled smartphones and devices.
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away.
- Integrated rechargeable battery provides hours of playing time wherever you go.

CONTENTS

- Wireless Earbuds with Mic (1)
- 1 USB Charging Cable
- 1 User Manual

SPECIFICATIONS

- Power: Internal Polymer Lithium battery
- Wireless Capability: Up to 33 ft range

- Driver Unit: 10 mm
- Frequency Response: 20Hz – 20KHz
- Sensitivity: 95dBLS/5dB
- Impedance: 16 ohms

CHARGING THE BATTERY

The internal battery must be fully charged before first use of the wireless earbuds. To charge, use the included USB charge cable.

1. Insert the smaller micro-USB end of the cable into the CHARGE INPUT on the earbud unit.
2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights up red during charging and will turn blue when charging is complete. Unplug from the power source when charging is complete.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as advised above to resume normal operation.

WIRELESS EARBUDS OPERATION

Wireless playback Via Bluetooth:

1. Make sure the battery is charged as explained above.
2. On the controller, press and hold the **button (2)** until the indicator light flashes blue and red – this means the Bluetooth function is active and ready to connect to your smartphone/Bluetooth audio device. NOTE: If you do not connect the earbuds with a Bluetooth device after 5 minutes of being turned on, the earbuds will turn off automatically. Restart this step to try to connect again.
3. Activate Bluetooth function on your audio device – it should automatically recognize the earbuds unit and allow you to select it using the name "BT SLIDE BUD". If required, enter the password "0000" to complete the wireless connection. When the earbuds are connected, the indicator light on the controller will flash blue and you are now set to enjoy wireless audio from within a 33 ft range of the audio device.
4. Before playback, first adjust the volume of your audio device to medium level as a safe starting point.
5. To play audio, click the **button (2)** once.
6. To pause audio, click the **button (2)** once.
7. To go to the next song, press **button (1)** once. To go to the previous song, press **button (3)** once.
8. To increase the volume, click and hold **button (1)**. To decrease the volume, click and hold **button (3)**. The earbuds make a chime sound when they reach maximum volume. You may then adjust the volume on your audio device to make it even louder or softer as you please.
9. To answer an incoming call, click the **button (2)** once.
10. To hang up a phone call, click the **button (2)** once.
11. To disconnect and shut off the earbuds unit, press and hold the **button (2)** until the indicator light goes out.

NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not overcharge the battery.

TECHNICAL SUPPORT

Please do not attempt to fix the product yourself. If you are experiencing any problems with the product please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance operating your product, please consult the User's Manual or feel free to contact World technical support:

World LLC
65 West 36th St., 11th Floor
New York, NY 10018, USA

www.jworldnyc.com
email: support@worldnyc.com
Please keep instructions for further reference.

© 2019 World Global Trading LLC
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by World is under license. All other trademarks and trade names are those of their respective owners. Actual product may differ slightly from image shown. MADE IN CHINA