

Instruction Manual, 1 Sheet Folded Printed Both Sides

OUTSIDE PRINT

**! FOR PRODUCTION PLEASE UPDATE
FCC ID # FOR CUSTOMER FIVE BELOW**

177.8 mm

FC BC FCC ID: 2AEW6-TE2023

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BATTERY SAFETY: This product is fitted with a Li-Polymer battery. Do not damage, open or dismantle the battery and do not use it in damp and/or corrosive conditions. Only use compatible chargers. Never dispose batteries in a fire and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

BATTERY DISPOSAL: The crossed-out wheeled-bin symbol means that you may not dispose of this product together with general household waste; instead, take it to a recycling point for electrical and electronic equipment. For more information about local recycling points, contact your local authority, civic amenity site or the business where you purchased this product. The separate collection and recycling of used items of electrical and electronic equipment prevents any harmful substances they contain from harming human health and polluting the environment.

Please keep this information for later reference.

WARNING!
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.


CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not overcharge the battery.

© 2023 PRIMEAUDIO
240 W. 27TH ST. NEW YORK, NY 10018
THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC., AND ANY USE OF SUCH MARKS BY IWORLD IS UNDER LICENSE.
ALL OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS. ACTUAL PRODUCT MAY DIFFER SLIGHTLY FROM IMAGE SHOWN. MADE IN CHINA.

The Knot

HEADPHONES



Bluetooth

INSTRUCTION MANUAL

BACK COVER

108 mm


FRONT COVER

108 mm

INSIDE PRINT

177.8 mm

PRODUCT DIAGRAM

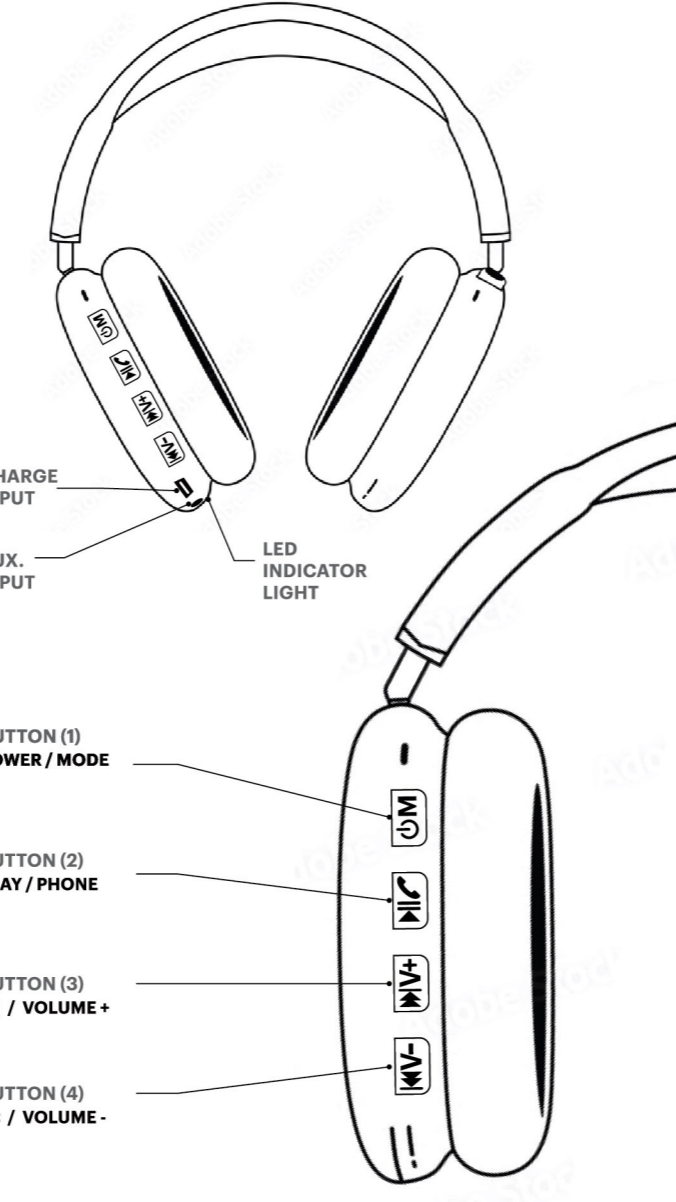

CHARGE INPUT

AUX. INPUT

LED INDICATOR LIGHT

**BUTTON (1)
POWER / MODE**

**BUTTON (2)
PLAY / PHONE**

**BUTTON (3)
>>| / VOLUME +**

**BUTTON (4)
|<< / VOLUME -**

INSTRUCTION MANUAL

WIRELESS HEADPHONES

FEATURES

- Works with most Bluetooth®-enabled audio devices
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away.
- Integrated rechargeable battery provides hours of playing time wherever you go.

CONTENTS

- Wireless Headphones with Mic (1)
- 1 USB Charging Cable
- 1 User Manual

SPECIFICATIONS

- Power: Internal Li-Ion Rechargeable Battery
- Wireless Capability: Up to 33 ft range
- Freq. Response: 20Hz-20KHz
- Sensitivity: 100±5dB
- Impedance: 32 ohms

CHARGING THE BATTERY

The internal battery must be fully charged before first use of the wireless headphones. To charge, use the included USB charge cable:

1. Insert the smaller end of the cable into the CHARGE INPUT on the headphones unit.
2. Insert the larger end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights up red during charging and will automatically turn blue when complete. Unplug from the power source when charging is complete.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as advised above to resume normal operation.

WIRELESS HEADPHONES OPERATION

Wireless playback Via Bluetooth:

1. Make sure the battery is charged as explained above.
2. Press and hold the (1) POWER/MODE BUTTON until the indicator light flashes blue and red - this means the Bluetooth function is active and ready to connect to your smartphone/Bluetooth audio device. *NOTE: If you do not connect the headphones with a Bluetooth device after 5 minutes of being turned on, they will turn off automatically. Restart this step to try to connect again.*
3. Activate Bluetooth function on your audio device - it should automatically recognize the headphones unit and allow you to select it using the name "PrimeAudio". When the headphones are connected, the indicator light will glow blue and you are now set to enjoy wireless audio from within a 33ft range of the audio device.
4. Before playback, first adjust the volume of your audio device to medium level as a safe starting point.
5. To play audio, click the (2) PLAY/PHONE BUTTON once.
6. To pause audio, click the (2) PLAY/PHONE BUTTON once.
7. To increase the volume, click the (3) >>| V+ BUTTON. To decrease the volume, click the (4) |<< V- BUTTON. The headphones make a chime sound when they reach maximum volume. You may then adjust the volume on your audio device to make it even louder or softer as you please.
8. To go to the next song, press and hold the (3) >>| V+ BUTTON. To go to the previous song, press and hold the (4) |<< V- BUTTON once.
9. To answer an incoming call, click the (2) PLAY/PHONE BUTTON.
10. To reject an incoming call, press and hold the (2) PLAY/PHONE BUTTON for 2 seconds
11. To hang up a phone call, click the (2) POWER/PLAY BUTTON once.
12. To disconnect and shut off the headphones, press and hold the (1) POWER/MODE BUTTON until the indicator light goes out.

NOTE: Low headphones power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

HEADPHONES OPERATION VIA AUDIO CABLE

1. Plug one end of a 3.5 mm auxiliary audio cable (not included) into the aux. input of the headphones and plug the other end into the audio output jack of the audio source device.

FM RADIO MODE

1. Press and hold the (1) POWER/MODE BUTTON until the indicator light flashes blue and red to turn the headphones on.
2. Click the (1) POWER/MODE BUTTON to enter FM radio mode.
3. Click the (2) PLAY/PHONE BUTTON to automatically search for stations, the indicator light will flash red. When it turns solid red. Press and hold the (3) >>| V+ BUTTON or (4) |<< V- BUTTON to select from the saved radio stations.
4. Click the (1) POWER/MODE BUTTON to return to Bluetooth mode.

FRONT INSIDE

108 mm

BACK INSIDE

108 mm