

400*140mm

BLUETOOTH STEREO HEADPHONES



Model : 38183

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting started

- Remove the product from the box.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Bluetooth Stereo Headphones
- USB Charging Cable
- Auxiliary Audio Cable
- Instruction Manual

Key Features


- Bluetooth stereo headphones with Micro-SD card slot, FM radio & aux-in
- Built-in Bluetooth connects to any Bluetooth enabled devices
- Listen to music wirelessly
- Built-in mic allows you take phone calls while enjoying music; don't miss any calls!
- Optimized for Google Assist and Siri
- Control buttons on your ear-cups for ease-of-use
- Adjustable & comfortable headband
- Large padded ear-cups for comfort
- Built-in rechargeable battery 300mah provides play time for up to 8 hours at max volume
- Type-C interface, charging cable & aux cable included

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not use the headset at excessive volume levels, as damage to hearing may occur.

2

Description of Parts:

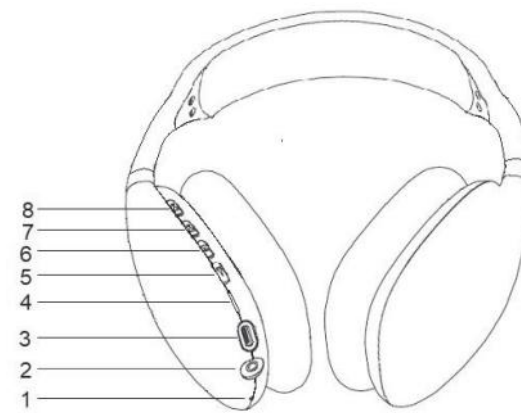

1	LED Light Indicator / Built-in Microphone
2	Aux-in Port
3	Charging Port
4	Micro SD (TF) Card Slot
5	Volume Decrease (V-) / Previous Track
6	Volume Increase (V+) / Next Track
7	Play/Pause/Phone/Scan Button
8	ON/OFF / Mode Button

INSTRUCTIONS FOR USE

Charging Instructions

The Bluetooth Headphones come with a built-in rechargeable battery. Before using it for the first time, we recommend to charge the battery fully. It takes 2-3 hours to fully charge the battery. Only use the supplied USB Cord to charge the Bluetooth Headphones. Connect the USB charging cord to USB power source (5V/2A), and the Type-C plug to the Charging port of the device. The Red LED light turns on while the device is charging. It takes about 2-3 hours for the headphones to fully charge. When the battery is fully charged, the LED light will turn blue.

Switching on/off the device

Long press the ON/OFF button to turn on/off the device.

3

Pairing the device with Bluetooth devices (phone or music device)

Ensure the device is turned off and then long press the ON/OFF button to turn on the device, you will hear an indication tone and the LED will flash red and blue. Place the Bluetooth Headphones and Bluetooth device (phone or music device) so that they are no further than 1m apart. Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions on how to enable Bluetooth on your device. Once you have activated Bluetooth on your device, select the "SL BT HEADPHONE" from the list of available Bluetooth devices. You might be prompted with "Pair with SL BT HEADPHONE?" message on your source device, with "Cancel" and "OK" options. Please click "OK". If required, enter the password '0000' to confirm & finalize pairing. Once paired successfully, you will hear another indication tone, and the LED will flash blue slowly. You can now start to use the device. If pairing is unsuccessful, turn off the device first and then re-pair following the above steps. Once you have paired the Bluetooth Headphones with a device, the Headphones will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices. The Bluetooth Headphones will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above. Once the Bluetooth Headphones are paired with your device, the music will transmit through the Bluetooth Headphones. Please refer to your device's user manual for further information.

Function Summary

Listening to Music

Once the Headphones are paired with your device you can stream music wirelessly through the Bluetooth Headphones. Should you encounter any problems while streaming please refer to your device's user manual for further information.

Control Function

Function	Operation	Button
Increase Volume	Playing music	Press and hold the V+ button will increase the volume
Decrease Volume	Playing music	Press and hold the V- button will decrease the volume
Pause	Playing music	Short press on the Play/Pause button will pause the music
Play	Pausing	Short press on the Play/Pause button will restart the music
Previous track	Playing music	A short press each time on the Previous Track button will return you to the previous track
Next track	Playing music	A short press each time on the Next Track button will take you to the next track

4

An indication tone will alert you when the volume is adjusted to maximum level.

Making a call with the Bluetooth Headphones in Bluetooth mode

Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Press the Phone button once to answer an incoming call
Reject a call	Incoming Call	Long press the Phone button
End a call	Incoming Call	After your phone conversation, short press the Phone button.
Increase Volume	During a call	Press and hold the V+ button will increase the volume
Decrease Volume	During a call	Press and hold the V- button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user manual for further information.
- Certain functions and indication tone may vary depending on your mobile phone.

Listening FM radio

- Turn on the speaker.
- Short press the Mode button repeatedly until it reaches FM radio mode with sound from a FM radio station.
- Short press the Scan button once for searching and recording all radio stations within frequency range 87.5-108MHz.
- Short press the Next Track button or Previous Track button for listening next or previous already saved radio station.

Stream music from Micro SD (TF) Card

- Turn on the speaker.
- Insert the Micro SD (TF) Card preloaded with songs, into the Micro SD (TF) Card Slot.
- Speaker will automatically start playing songs from the Micro SD (TF) Card.
- To Skip Track Forward – Short press the Next Track button.
- To Skip Track Backwards – Short press the Previous Track button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.

Note: Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3, WAV. Micro SD (TF) Card not included.

5

Tips!!

- Short press the Mode button to switch different functions of the speaker. The functions are - Bluetooth / Micro SD (TF) / FM radio.
- When the speaker is not in use, turn OFF the device to save battery power.
- Do not overcharge the speaker.

Voice Assistant Operation

Voice Assistant is a built-in, interactive feature that allows you to start a conversation with Siri or Google Assist; short press the button three times on your device.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some examples.

Note: Google Assist is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assist App is downloaded and is listed as the default Voice Assistant on your mobile device.

While the headphones are paired using Bluetooth, short press the Play/Pause button three times to start a conversation with Siri or Google Assist. An indication tone will sound before you speak into the headphones.

- Example 1: Short press the Play/Pause button three times and then speak into the headphones, how's the weather today?
Voice Assistant will reply with something like: mainly cloudy with a few showers.
- Example 2: Short press the Play/Pause button three times and then speak into the headphones, what's the current time?
Voice Assistant will reply with something like: it is 8pm.
- More examples:
Set an alarm for 7am tomorrow.
Play some music.
What's in the news?

Listening to Music using AUX-In Mode

Insert the 3.5mm auxiliary cable (included) to the Aux input of the Headphones. The other end of the cable connects to the audio device (such as a computer, tablet, etc.). Select your favorite song at the source device and play.

(Note: Using this Aux-in mode, you do not need to turn on the Headphones, and you need to control the volume increase/decrease, play/pause, next/previous track through your source device only.)

6

Troubleshooting

Symptom	Solution
No Sound	<ul style="list-style-type: none"> Power On the headphones and charge the battery Increase the volume on your headphones, your mobile device and music source Move your mobile device closer to the headphones and away from any interference or obstructions User a different music source Connect another mobile device
Poor Sound Quality	<ul style="list-style-type: none"> Use a different music source Connect another mobile device Move your mobile device closer to the headphones and away from any interference or obstructions
Battery Won't Charge	<ul style="list-style-type: none"> Secure the ends of the USB charging cable Try another charging source
Your Google Assist not responding	<ul style="list-style-type: none"> This is only available for Android Mobile Devices Make sure Google Assistant is downloaded on your mobile device and set to default voice assistant Make sure your Android Mobile Device is Bluetooth paired with Headphones Make sure you are in a country where Google Assistant is available For additional support, visit www.support.google.com/assistant
Loud Dial Tone Noise When Activating Google Assist	<ul style="list-style-type: none"> Make sure you have the latest version of the Google Assistant App On your Android mobile device, go to Settings > Apps > Google App > Disable. After that, tap Enable (If you have uninstalled the Google App, please reinstall the app).

Care and Maintenance

Read the following recommendations before using the Bluetooth Headphones. By following these maintenance tips, you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Headphones to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

7

- Do not dispose of the device in a fire, as it will result in an explosion.
- Do not expose the device to contact with sharp objects, as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not a professional.

Specifications

Bluetooth specification	Bluetooth 5.3
Operating distance	10m
Working time	Up To 8 hours
Charging input voltage/current	DC 5V/2A
Charging time	About 2-3 hours
Built-in Battery	300mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Imported by Osiris Inc. L6T 4M6 /
Osiris America Inc. 14020

8