



MVMT and the MVMT logo are trademarks of iWave Sicura Media Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by is under license. All other trademarks and trade names are those of their respective owners. ©2015

New York NY 10018
Support@iwaveaudio.com
www.iwaveaudio.com

This product is not a toy.

Warning:

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Do not expose your speaker to extremely high or low temperatures it can cause malfunction.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

Fall Hazard

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off of the edge.

Warning:

To reduce the risk of electric shock, do not remove cover (or back). Refer servicing to qualified service personnel.

Automobile Accident Hazard

- Do not leave or store the Bluetooth Ear-buds or any of its accessories near or over your automobile's air bag as Serious injury may result when an air bag deploys.

CAUTION:

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the units internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage your speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.

- Turn off your speaker prior to boarding an aircraft. Do not use the speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

FCC Disclaimer:

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including Interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or on experienced radio/TV technician for help or assistance.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



S-1
WIRELESS
IN-EAR HEADPHONES


PACKAGE INCLUDES:

- 1 X BLUETOOTH EARBUDS
- 1 X MICRO USB CABLE

IMPORTANT PLEASE READ BEFORE USING THIS PRODUCT

FEATURES

1. Volume Up & Next Track
2. Volume Down & Last Track
3. Multi-Function Button
4. Micro USB Port
5. LED Indicator

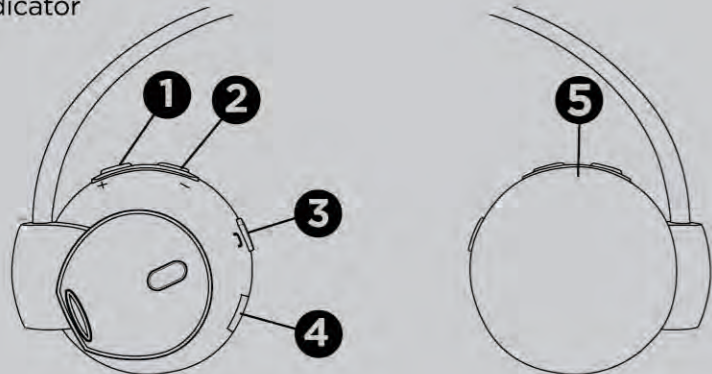

CHARGING THE BLUETOOTH DEVICE

1. Connect the earbuds's Micro USB socket (4) with the power source's USB port through USB cable. The LED indicator will indicate charging in red.
2. Disconnect the USB cable when it is fully charged. The indicator LED will show blue when S-1 is fully charged. A full charge will take 2-3 hours.
3. The LED indicator will flash red when the battery is low.

LED INDICATOR INDEX

EARBUD STATUS

Bluetooth Pairing

Paired

Standby

Talk Mode

Charging

Fully Charged

Battery Capacity Low

LIGHT INDICATOR

Flashes Blue & Red

Flashes Blue

Flashes Blue once every 5 seconds

Flashes Blue once every 4 seconds

Solid Red light

Solid Blue light

Slowly Flashes Red

PAIRING / RECONNECTING THE DEVICE

1. Press and hold the Multi-Function Button (3) for 5 seconds; the device is now turned on and into searching / pairing / reconnect mode will begin. The LED Indicator (3) will flash red and blue alternately (If you release the MFB before the head set goes into pairing mode, it will power on and connect with the last paired device).
2. Now, turn on the Bluetooth function of your device.
3. Search for "S-1" and select it to pair (for the first time pairing or pairing a new mobile device).
4. The Bluetooth device will reconnect automatically if your mobile phone has been paired (Depending on the device, reconnecting manually may be required).
(Note: If you cannot search for the earbuds, this means the last device is reconnecting automatically. Press and hold the Multi-Function button (3) for 5 seconds when you power it on.)
5. If pairing is successful, your device will make a tone to confirm.
6. To power the device off press and hold the Multi-function button (3) for 4 seconds, the LED indicator (5) will flash red and power off.

CONTROLS AND FUNCTIONS

- When playing music, press the Multi-function button (3) to pause and play music.
- Short press the Volume Up button (1) to increase the volume level.
- Short press the Volume Down button (2) to decrease the volume level.
- Press and hold the Volume Up button (1) to play next track.
- Press and hold the Volume Down button (2) to play previous track.

HANDS FREE DIALING AND REDIALING FUNCTIONS

- Press the Multi-function button (3) to pick up the call, the playing music will automatically be paused.
- Long press Multi-Function button (3) to reject the call.
- Press Multi-Function button (3) again to hang up the call when finished. The paused music will resume playing automatically.
- Press Multi-Function button twice (3) to enter into redial function, the music will pause and switch to hands free function for redial.
- When talking on the phone press and hold volume up button (1) or volume down button (2) for 2 seconds to mute your microphone (you will hear a tone every 3 seconds to remind you the mute mode).
- Hold Volume Up button (1) or Volume Down button (2) for 2 seconds to exit mute mode.
- When talking on the phone, press the Volume Up button and Volume Down button concurrently to receive another incoming call, the first call will be placed on hold.
- Press Volume Up button (1) and Volume Down button (2) concurrently again to switch between calls.

TROUBLE SHOOTING

No power

- Recharge your speaker using the micro USB cable. If the problem persists try using another micro USB cable

No Response From the Unit

- Ensure your bluetooth device has an A2DP profile.

- Check if both devices are paired and connected to each other.
- Restart the device and try to reconnect.

Bluetooth device will not reconnect with the device

- From your Devices bluetooth menu select the "S-1" Earbuds and choose "Forget". Now repeat the steps to pair with the speaker with your device.

I can't locate the devices name on the bluetooth menu

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

SPECIFICATIONS:

- Model No.: SP2951 S-1
- Bluetooth: 4.1+ EDR
- Output power: 2.5mw x 2
- Frequency: 20Hz-20KHz
- Working distance: 33ft (Distance may vary)
- Rechargeable Battery: 120 mAh, 6 hrs playback
- Power Supply: Lithium polymer battery / USB charge

Limitation of Liability

In no event, under any cause of action or theory of liability, shall Sicura Media Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the MVMT products, even if the MVMT product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that MVMT has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained inside or outside of the MVMT products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained in the foreign device. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of MVMT and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the MVMT product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under the applicable law.