

## **Gnome Speaker**

*User's Guide for Model No. URBT-1036*

FCC ID:2AEWC-URBT1036



## **FEATURES**

---

- IPX4 water resistant
- Built-in Bluetooth speaker
- Wireless range: 60 feet
- Micro-USB port for battery recharge
- Battery life: approx. 4 hours at 50% volume

## **INCLUDES**

---

- Micro-USB to USB cable

# CONTROLS

**Micro-USB Charging Port (inside)** |

**Bluetooth Pairing Indicator** |

**Battery Charge Indicator** |

**Pair Bluetooth** |


Press and hold to begin pairing.

**Power** |

Press to power on or off.

**Water Cap** |

Lift here to access charging port.

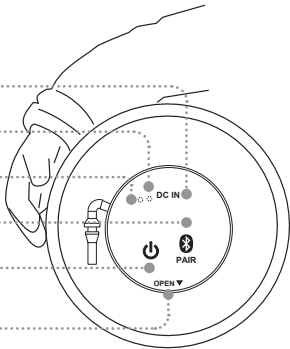

## **WATER RESISTANCE**

This unit has an IPX 4 level of water resistance. This makes it suitable for indoor and outdoor use in the presence of incidental or light exposure to splashing water, rain, or snow. Water splashing against the enclosure from any angle should have no harmful effects. It is not recommend to submerge this speaker in water for any amount of time.

**IMPORTANT:** To ensure your speaker is prepared for use in a wet environment, disconnect and remove any power cables, and tightly close the water cap on the unit. If the water cap is not properly closed, water resistance will be compromised and could result in damage to the speaker or personal injury.

## CHARGING THE BATTERY


---

Requires a Micro-USB to USB cable (included).

**Note:** *Be sure the computer is not in sleep mode.*

1. Using a Micro-USB to USB cable (included), connect the **USB plug** to the **USB port** of a powered on computer or USB power adaptor.
2. Pull back the water cap and connect the **Micro-USB plug** to the **Micro-USB port** of the unit. The unit will now charge.

**WARNING: DO NOT, UNDER ANY CIRCUMSTANCES, CHARGE THE SPEAKER WHILE IT IS IN OR NEAR WATER. ALLOW AMPLE TIME TO DRY BEFORE CHARGING.**

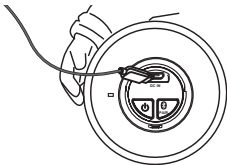

## BATTERY CHARGE INDICATORS

---

STATUS	INDICATOR
Low Battery	Flashing red light
Charging Device	Solid red light
Full Charge	No light

## BLUETOOTH PAIRING INDICATORS

---

STATUS	INDICATOR
Pairing Device	Flashing blue light
Device Paired	Solid blue light

## PAIRING A BLUETOOTH DEVICE

---

1. Press the **Power button** to power on the speaker.
2. Press and hold the **Pair** button to begin pairing.  
*The **Pairing Indicator** will begin flashing quickly. When pairing, remain within 3 feet of the unit.*
3. Using the controls on your Bluetooth device, scan for and select **ISBW216** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0000**.  
*Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
4. When successfully paired, the **Pairing Indicator** will turn solid and an audible chime will sound through the speaker.  
*After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.*

## **PLAYING AUDIO WIRELESSLY**

---

1. Use the connected Bluetooth device to select and start playing audio.
2. Once audio is heard playing through the unit, use the controls on the connected Bluetooth Device or the unit to play, pause, and skip audio tracks.



## WARNINGS AND PRECAUTIONS

- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- **NOTE:** This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead after several attempts to charge, please contact 1-888-999-4215 for support.
- Never disassemble the unit or attempt to remove the battery as that could cause leakage of an electrolytic substance.

## FCC WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.