

⚠️ IMPORTANT SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The graphic symbols on the back cover of the product mean the following:

DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within a triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

ATTENTION:

The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature for the device.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- The device should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the device.
- Make sure any socket or outlet the adapter is plugged into is readily accessible.
- In order to stop charging the device or to remove the device from the socket, the adapter/plug should be disconnected from the socket, i.e., if the device is turned off, it is still charging unless it is completely unplugged.

WARNING: THIS PRODUCT IS NOT A TOY. ADULT SUPERVISION IS REQUIRED.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use the product on your lap for more than 30 minutes, without at least a 5-minute break.
6. Do not use this unit near water.
7. Clean only with a dry cloth.
8. Do not block any ventilation openings.
9. To avoid overheating, do not leave the product in a non-ventilated space (e.g. a schoolbag) when it is turned on.
10. Do not use near any heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
11. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
12. Protect the power cord from being walked on or pinched, particularly the plug and the adapter.

13. Only use attachments/accessories specified by the manufacturer.
14. Unplug this unit during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as the following: the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen on the unit; and/or the unit has been exposed to rain or moisture, does not operate normally, has changed its performance or has been dropped.
16. Do not overload wall outlet. Use power source only as indicated.
17. Use replacement parts as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Keep the device away from metallic objects such as coins and keys. Do not leave it near magnetic fields that could cause data loss or damage the device.
20. Do not drop the device. Do not expose it to mechanical shock, friction or impact. When transporting the device, put it in a protective carrier.
21. Protect the device from humidity and rain. If it gets wet, wipe it off immediately.
22. Do not touch the power cord when your hands are wet and do not pull on the charger to unplug it.
23. In order to prevent data loss, remember to keep a backup (data or paper) of the information recorded on the device.
24. To prevent interference, do not use the device near other electronic devices, artificial pacemakers or near medical equipment.
25. Shut off the device in locations that are susceptible to explosions and when traveling by airplane.
26. Do not use the product near flammable or explosive sources.
27. Keep the device out of prolonged exposure to sunlight and away from other sources of extreme heat or cold.
28. Do not attempt to disassemble the device; it will no longer be covered by the warranty.
29. Do not place sharp objects directly in contact with the surface and do not spray cleaning products directly on the screen.
30. Do not push hard on the screen and do not place objects on top of it. These actions can cause tears in the screen.

EPILEPSY WARNING

Please read prior to any use of a video game by yourself or by your child. Some people are susceptible to epileptic seizures or loss of consciousness when exposed to certain kinds of flashing lights or elements common in our everyday environment. These individuals may suffer a seizure when they watch certain televised images or when they play certain video games. These phenomena can occur even if the person has no previous medical history or has never suffered an epileptic seizure. If you or a family member has ever displayed symptoms related to epilepsy (seizure or loss of consciousness) in the presence of stimulation in the form of light, please consult your physician before using the device. We advise parents to be attentive to their children while they play video games. If you or your child experience the following symptoms: dizziness, altered vision, eye or muscle twitches, loss of consciousness, disorientation, involuntary movements or convulsions, immediately stop playing and consult a physician.

GENERAL PRECAUTIONS WHEN USING VIDEO GAMES

- Do not hold the screen too close to face and eyes.
- It is preferable to play video games on a small screen. Avoid playing when tired or when needing sleep.
- Make sure to play in a well-lit room.
- When in use, take breaks of 10 to 15 minutes every hour.

WARNING: Prolonged use of the device may be harmful to the health of the user.

MAINTENANCE AND WARRANTY

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning. The finish on your unit may be cleaned with a dust cloth and cared for as other electronics. Use a soft, clean cloth moistened with plain, lukewarm water to clean the exterior of the unit. Use caution when cleaning and wiping the plastic parts. Mild soap and a damp cloth may be used on the front panel.

This product is covered by our 3-month warranty.

For any claim under the warranty or after sale service, please contact School Zone. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the literature or from any careless action implemented on this item (e.g. dismantling it or exposing it to heat and humidity). A broken screen as well as any damage caused by using an adapter other than the one provided is not covered by our warranty. It is recommended that you keep the carton for any further reference.

NOTE: Please keep this Quick Start Guide because it contains important information. The contents of this guide may change without notice. No part of this guide may be reproduced without the written consent of the manufacturer.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is below the limit.

IC NOTICE

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CONTACT US

School Zone
1819 Industrial Drive
Grand Haven, MI 49417

Technical Support
616-846-9601 phone
616-846-6181 fax
tech.support@schoolzone.com

Support Hours
Mon-Thurs 8am to 5pm EST
Fridays 8am to 4:30pm EST

For further details and information visit
schoolzone.com/support

Customer Service
616-846-5030 phone
616-846-6181 fax
webmaster@schoolzone.com

www.schoolzone.com



Little Scholar™

 
QUICK START GUIDE



WELCOME

Congratulations on the purchase of Little Scholar®! This guide has everything you need to get started using your new tablet. For additional help, visit www.schoolzone.com/support.

CHARGE YOUR TABLET OVERNIGHT BEFORE 1st USE

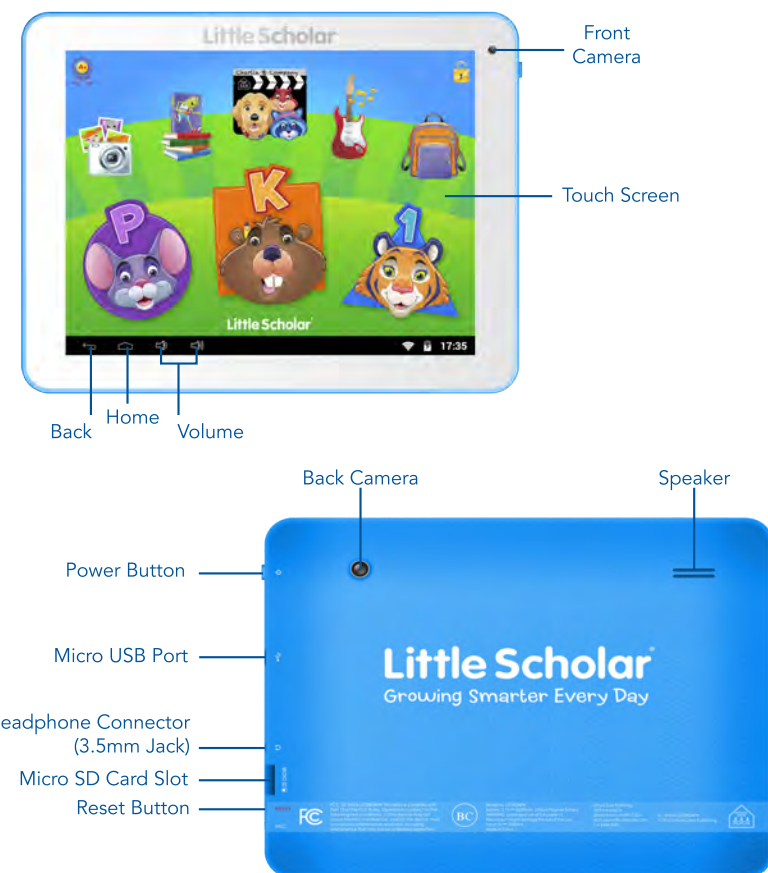

To learn more visit www.schoolzone.com

GETTING STARTED

 
PACKAGE CONTENTS

1. LST0804R Tablet PC (Little Scholar Tablet)
2. Silicone Protective Case
3. Power Adapter
4. Quick Start Guide

TURN LITTLE SCHOLAR ON

1. Turn Little Scholar on by pressing the Power Button for 10 seconds.
2. The School Zone logo will indicate that the tablet is loading correctly.
3. When the lock screen appears, swipe the lock icon to the right to unlock.
4. Little Scholar is ready to play!

(Lock Screen)

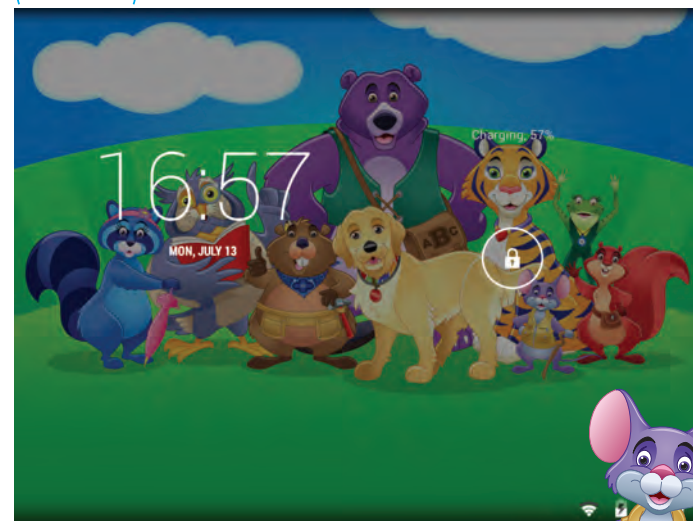


GET TO KNOW PARENTAL CONTROLS

Manage your Little Scholar settings within the password-protected Parental Controls Center.

UNLOCK YOUR PARENTAL CONTROLS

 1. Access Parental Controls by choosing located in the upper right corner on the Home Screen.
2. Enter default password **123** and choose "Submit." The tablet is now unlocked. Reset the password in the Parental Controls Center.

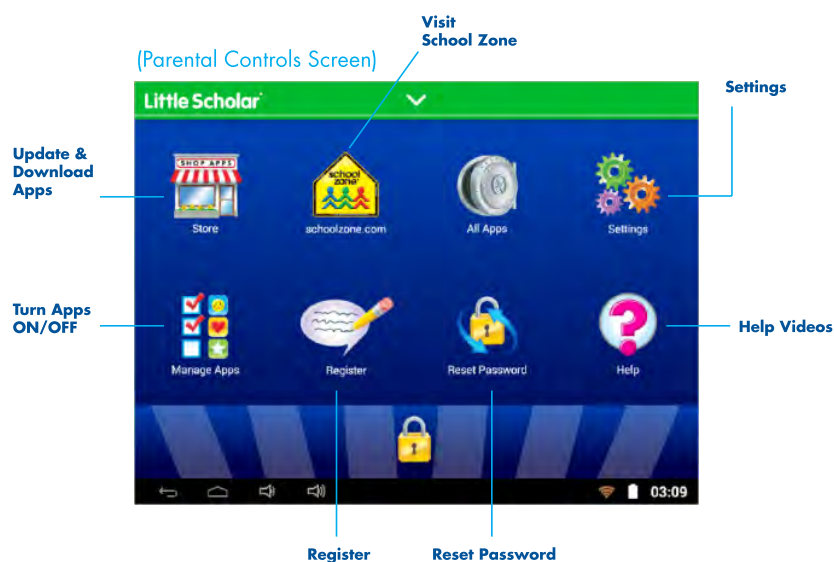

RESET PASSWORD

1. Choose in the Parental Controls Center.
2. Enter new password of your choice.
3. Confirm the password by choosing "Submit."

IMPORTANT: Reset password to ensure that your child cannot access parent-only functions, including the Internet browser.

CONNECT TO Wi-Fi

1. Choose in the Parental Controls Center and slide Wi-Fi switch to "ON."
2. Choose your network and connect with your wireless password.

NOTE: When you have successfully connected to the network, the word "Connected" will appear below the network name, and the Wi-Fi signal icon will turn to white.

IMPORTANT: Once you have a Wi-Fi connection, make the most of your Little Scholar by registering to receive updates, notifications, and special offers.

REGISTER

1. Choose in the Parental Controls Center.
2. Choose "Agree" once you have read the Terms of Use.
3. Fill out contact information and choose "Submit."

DOWNLOAD APPS

Enter the School Zone Store for additional apps, all approved by School Zone. Little Scholar is also compatible with Android-based apps found through the Amazon App Store.

ACCESS INTERNET BROWSER

Choose the icon to access the Internet browser.

UPDATE APPS

1. Choose in the Parental Controls Center.
2. Choose "Updates."
3. Choose "Update All."

IMPORTANT: Check back regularly for app updates.

SYSTEM UPDATES

1. Make sure you're connected to Wi-Fi and the tablet is at least 50% charged.
2. Choose in the Parental Controls Center.
3. Scroll down and choose the "About Tablet" icon.
4. Choose "Wireless Update" found towards the top of the screen.
5. Choose "Check for Updates" to see if there are any updates available.
6. If there are new updates available, choose "Download."
7. Once the download is complete, choose "Update Now."
8. Choose "OK."
9. Once the system update is complete, choose "OK."

HELP VIDEOS

1. Choose in the Parental Controls Center.
2. Choose from the following video options:
Set Up School Zone Market
Learn how to download and purchase additional apps.

How to Manage Apps

Customize your child's learning by choosing which apps can be viewed.

ADDITIONAL SUPPORT

Additional support is available online at www.schoolzone.com/support

