 



BOSMA

Keypad

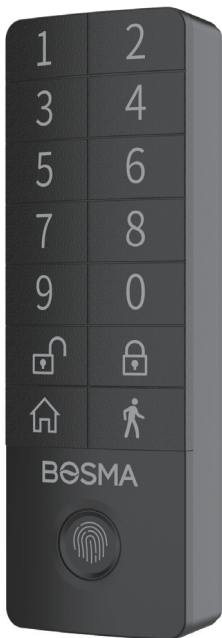


Installation Instruction

 1. Buttons

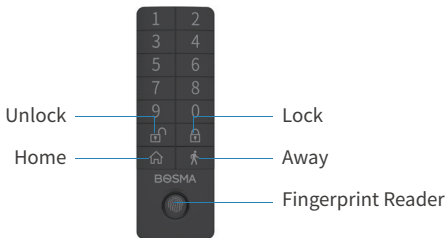

Default Actions:

UNLOCK:

Scan fingerprint to .

LOCK:

Press  to lock.

HOME:

Enter passcode + press  to unlock and switch Security Mode to "Home".

AWAY:

Enter passcode + press  to unlock and switch Security Mode to "Home".

2. In the box



Biometric Keypad x 1



Drill Bit x 1



Mounting Plate x 1



Anchor x 4



Screw x 6



Screwdriver x 1



AAA Battery x 4

3. Tools you may need



Drill



Hammer



Pencil

4. Installation - Keypad

Requirements:

1. Works with a Bosma Aegis Door Lock.
2. Must be paired with an Aegis Wi-Fi Gateway, or a Bosma Home Station series device.
3. It is recommended to place the Gateway or Home Station close to the Keypad, e.g. less than 20ft. The Keypad works with the Gateway or Home Station via Bluetooth, so their connection may become unstable or lost if they are too far apart.

Note: The requirements may change as more products compatible with the Keypad are released.

Visit <https://www.bosmasmarthome.com/faqs/keypad/> for more information.

Helpful Resources:

 
For a video installation guide, and other resources, please visit Keypad's support page:

<https://www.bosmasmarthome.com/support/keypad/>

1. Loosen the screws on the battery compartment cover at the bottom of the keypad.



2. Remove the battery compartment cover, and insert the batteries. Battery orientation is marked at the back of the keypad.

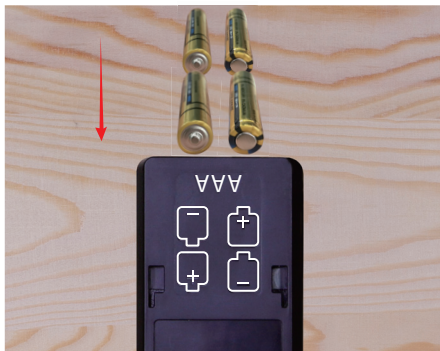

3. Replace the battery compartment cover, and tighten the screws .



(1) Installation Option 1: Double-sided Tape

1. Remove the backing of the adhesive from the mounting plate. Stick the mounting place at where you want to install the keypad.



2. Slide the keypad down on the mounting plate until it is locked in place.



(2) Installation Option 2: Wall Mount

1. Place the mounting plate against the wall at the location you want to install it, and use a pen to mark the two holes on the wall.



2. Use the provided drill bit to drill two holes at the two marked spots.



3. Insert the plastic anchors into the two holes. If necessary, use a hammer to gently tap them in until they are flush with the wall.



4. Place the mounting plate over the two screw holes, and use the provided screws to secure the mounting plate against the wall.



5. Slide the keypad down on the mounting plate until it is locked in place.




Quick Start Guide

1. Follow the Installation Instructions to install the Keypad.
2. Make sure that your Aegis door lock has been set up in the Bosma app and is paired with the Aegis Wi-Fi Gateway or Home Station.
3. Log in to the Bosma app, and tap the "+" button at the top right corner of the home screen.
4. Select "Keypad" and follow the instructions on screen to complete the setup.

Customer Service

 support@bosmasmarthome.com

 1(800)-976-0881

 www.bosmasmarthome.com

* The quick start guide is subject to change without notice, please find the latest version on www.bosmasmarthome.com

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.