 


Wireless speaker

MODEL:M20

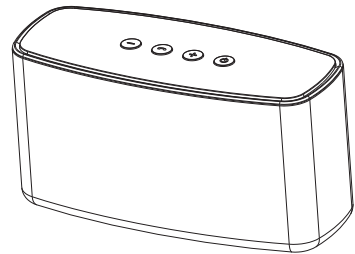

Get beautiful sound wirelessly

 
Precaution

1. It is a normal phenomenon that the speaker will have a bit fever when normally operated or charged.
2. If you need to clean the speaker, please turn off the speaker and disconnect it with all external devices before cleaning.
3. Don't use alcohol, benzene or other chemicals to clean the speaker.
4. Do not drop or trample the speaker.
5. Don't put the speaker near extreme cold or heat objects.
6. Please use the accessories provided by our company.
7. Don't dismantle the speaker by yourself.

Packing List:

- Wireless speaker × 1 USB charging cable × 1
 AUX audio cable × 1 Waterproof bag × 1
 Instruction × 1

Product Diagram

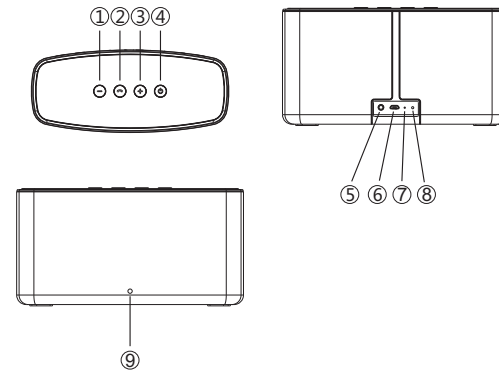

- ① Volume down/previous song
- ② Play/pause
- ③ Volume up/next song
- ④ ON/OFF
- ⑤ AUX port
- ⑥ Charge port
- ⑦ LED indicator light
- ⑧ RESET
- ⑨ MIC

Functions

Pair with Your Phone

1. Pair the Wireless speaker with your device for the first time, the distance between the Wireless speaker and your phone would be better within 1 meter.
2. With the speaker power off, long press power on button about 3 seconds until the blue light starts flashing quickly.
3. Open the "search for the Bluetooth devices" function on your phone.
4. Choose "M20".
5. Repeat above steps if the pairing was unsuccessful.
6. If pairing is successful, you will hear an indicated sound and the blue indicator light will slow down the flashing speed.

Volume Control

- Volume up: Long press , each second will increase one volume.
 Volume down: Long press , each second will decrease one volume.
 Power on/off the speaker
 Power on: Long press until the blue indicator light starts flashing.
 Power off: Long press until the blue indicator light is on and then goes off.

Play/Pause Music

You can short press to play and pause when enjoying music.

Functions

Previous/Next Track

Next track: Next track when short press .
 Previous track: Previous track when short press .

Answering/Ending/Rejecting a Call

Answering a call: Press the "Answer" button on your phone or short press on your speaker.

Ending a call: Press the "End" button on your phone or short press on your speaker.

Rejecting a call: Press the "End" button on your phone or long press on your speaker.

Redialing the Last Called Number

If your phone supports this function, double press at stand-by mode.

Disconnected Bluetooth Device

Long press at standby by mode you can clear the connection of all bluetooth devices

Charging the Speaker

You must charge the speaker fully before using the speaker for the first time.

1. Connect the speaker to the power source with USB charging cable.
2. The indicator light will turn into red when charging.
3. The full charge takes about 2.5 hours via adapter (5V 1A), but

Functions

if you charge it via computer it takes 3-4 hours.

4. The red indicator light goes out when charging completed.

Note:

Considering a long lifespan of the battery, please don't use it when charging.

Product overview:

1. The fashion designed Wireless speaker can offer you endless Enjoyment when you are travelling outside.
2. Bluetooth function makes listening music wirelessly
3. With the Aluminum alloy hook, you can hang this Speaker on the mountaineering bag or other places conveniently.
4. Built-in MIC, you can pick up a call by this speaker in car, at Home or office conveniently.
5. After the speaker is on and without any operation for 10 minutes, it will shut down automatically.

Warranty Agreement

In order to let you enjoy the service better, Please read following agreement:

The validity period of product warranty starts from the date of sale ("three guarantees"). During the validity period of "three guarantees", the malfunction of this product will be resolved according to the provision of "three guarantees":

repair, replacement or return. During validity period of product warranty, the Company provides free maintenance service (exceeds the range of warranty). And, during the "three guarantees" period, the company will implement the paid service for following cases:

1. Cannot show the original warranty and effective invoice
2. The malfunction and damage are caused by irresistible factors and other reasons
3. The damage and failure are caused by your error in

Warranty Agreement

operation(not in accordance with the "manual" of normal operation)

4. The failure and damage are caused by the transportation
5. The failure and damage are caused by the fault disassembly and maintenance without prior authorization of company. As for fault repair, please return the warranty card and sale invoice, and you need to deliver the warranty card and sales invoice together to after-sales service center and afford the transportation fees by yourself.

Check the Charging Port

To prevent the damage caused by ingress of water, please make sure the cover of the charging port is tightly sealed before using.

Specifications

- Bluetooth version: CSR 8635
- Voltage input: DC-5V/1.5A
- Power capacity: 20W RMS
- Battery Specifications: 7.4V/2600mAh
- S/N: ≥85dB
- Size: W210*D88*H107mm
- Net Weight: 1510g

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty Card

When purchasing the product, please immediately fill the card and put it away

| | | | |
|----------------|--------------|--|--|
| Name | Age | | |
| Tel no. | Postcode | | |
| Gender | Purchase | | |
| Date of buying | Product code | | |
| Part no. | Sale No. | | |
| Postal address | | | |

Dealer stamp:

User signature: