 


料号 : 431-0X2614-728

尺寸 : 80*100mm 风琴折 157铜版纸 四色印刷

Wireless speaker

MODEL:comiso-X26

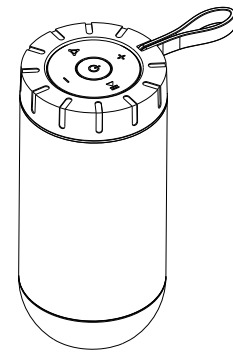

User Instruction

Precaution

 
1. It is normal that the speaker will get hot in playing or charging.
2. Please turn off the speaker and disconnect it with all audio devices before cleaning. Do not use alcohol, benzene or other chemicals to clean the speaker.
3. Do not throw or tread on the speaker. Please place it on a stable surface when in use.
4. Do not place the speaker close to extremely cold or hot objects.
5. Please use the original accessories provided by us.
6. Do not disassemble the speaker without authorization.

Accessories

- Charging Cable x 1
- Instruction x 1
- Hook x 1

Product Overview

- ① Vol-(Previous track)
- ② Vol+(Next track)
- ③ Play/Pause
- ④ Power ON/OFF
- ⑤ TWS pairing
- ⑥ Charging port
- ⑦ Reset
- ⑧ Indicator light
- ⑨ Mic

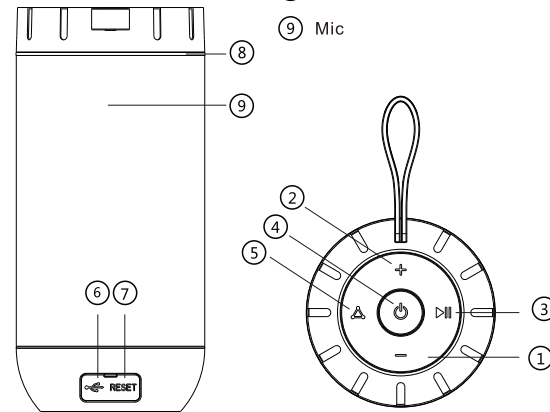

Functions

- 1.Charging: Please fully charge the speaker for about 5 ~6 hours before first use.(The indicator light is red when charging, and it will turn to green after fully charged.) Use the original charging cable to connect to the power adapter (DC 5V/2A) to get charged.
- 2.Power On/Off: Long press the power button "⏻" until the blue indicator light flashes, then release the power button, the speaker turns on with a prompt tone.
- 3.Bluetooth Pairing: After turned on, the blue indicator light keeps flashing quickly. Then open your smartphone's Bluetooth function, search for and choose "comiso-X26". After successful pairing, you will hear the "di-di" prompt tone. Now you can play music in your smartphone with this speaker.
4. Automatic Connection: If you already paired with phone, tablet or other bluetooth devices, when it turns on (not for the first time), the speaker will automatically pair with this smart phone.
5. After paired successfully, the blue light stays lighting, and you can play music or video via it, and you can check the battery level on your phone.
6. When you are playing music via bluetooth, short press "+" to increase the volume, long press "+" to listen next song

Functions

7. When you are playing music via bluetooth, short press "←" to decrease the volume, long press "←" to listen previous song.
8. When the speaker connected with IOS device, the volume control is synchronized.
9. After paired successfully, short press "▶" to play and pause.
10. After paired successfully, when there is a calling, short press "▶" button to pick up the call by this speaker, long press the "▶" button for 2 seconds to reject this call, and when answering the call, short press the "▶" button to end it. Redial: double press the "▶" button, your smartphone will redial your last dialed number.
11. Automatic Power Off: the speaker will turn off in 10 minutes in below situations to save battery power: A. the device is not connected B:the phone is out of transmission range. C:the bluetooth is turned off in your phone.
12. Pair to Another Smartphone: Method A: Turn off the smartphone A's Bluetooth function, you will hear the "di-di" prompt tone and the blue indicator light will turn to flash quickly. Then the smartphone B can search for "comiso-X26" and choose it to pair. Method B: Long press the "▶" button for 3 seconds until you hear the "di-di" prompt tone, the blue indicator light will turn to flash quickly, it

Functions

- means that the smartphone B could search for "comiso-X26" and choose it to pair.
13. Clear Paired Information: The speaker can remember up to 8 device's pairing information, if you need to clear these information, turn on the speaker, and long press the "▶" button for 6 seconds until you hear the "di-di" prompt tone and the pairing information list is cleared.
 14. True wireless stereo connection: Power on the two speakers, do not pair it with your phone, first long press "⚠" button of one of the speakers to set them into the True wireless stereo pairing mode. After the two speakers are successfully paired, the blue light of the host will flash quickly and wait for the connection, and the blue light of the slave will be stay lighting. And then open the bluetooth in your phone to connect one of the comiso-X26 to play music. Under True wireless stereo mode, long press "⚠" of either speaker to disconnect True wireless stereo function.
 15. Low Battery Warning: When the speaker's battery is less than 20%, the red indicator light will flash, then please charge the speaker. When battery is less than 5%, it will turn off automatically.
 16. If the speaker is not to be used for a long time, please fully charge it at least once a month to avoid decreasing the speaker battery life.

Functions

17. Note: When speakers are in True wireless stereo pairing mode, all the control functions are in sync, so please only operate one of them.

Troubleshooting

1. The "comiso-X26" device is in smartphone's Bluetooth device list, but failed to connect.
Reason A: The speaker is not in pairing mode
Solution: Long press the "▶" button for about 3 seconds to set it to pairing mode, when the blue indicator light flashes fast, choose "comiso-X26" to pair.
Reason B: The speaker's paired information has been cleared.
Solution: Delete the device "comiso-X26" in your phone, then search "comiso-X26" and choose it to pair again.
2. The smartphone could not search "comiso-X26".
Reason : The speaker is not in pairing mode.
Solution: Long press the "▶" button for about 3 seconds to set it into pairing mode, when the blue indicator light flashes fast, choose "comiso-X26" to pair.
3. The charging time is too long.
Reason : The adapter's power output is too low, and the charging cable's consumption is too high.
Solution: Please choose the adapter with output not less than DC 5V/2A and use the original charging cable.

Warranty Service

- We provide following warranty services:
1. 12-month warranty for quality-related issues: Within 12 months after the date of purchase, we take care of all quality-related issues with a replacement or full refund.
 2. Within the warranty validity, we provide free after sale service, except for following cases:
 - A. No original warranty card or valid invoice.
 - B. The speaker's malfunction or damage is caused by force majeure, incorrect operation (not as this instruction manual directed) or any man-made factors.
 - C. The speaker is not purchased from authorized dealer and no authorized dealer's stamp on the warranty card.
 - D. The date of purchase on the warranty card has been changed.
 - E. The speaker's malfunction or damage appears during shipment.
 - F. The speaker's malfunction or damage is caused by disassembly or repairing without authorization.

Specifications

Bluetooth Solution	V5.0+TWS
Waterproof level	IP65
Voltage input	DC5V/2A
Out Power	6W*2
Speaker	Φ40*2 4Ω6W
Battery	3.7V/4000 mAh
Product Size	D70mm * H150.5mm
Product Weight	390g

Warranty Card

Please ask the dealer to fill the warranty card immediately after purchasing. We recommend to keep this card for future reference.

Name	Age
Tel Num.	Postcode
Gender	Product
Date of Purchase	Product Code
Part Num.	Sale Num.
Postal Address	

Dealer Stamp:

User Signature:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:-- Reorient or relocate the receiving antenna.-- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer support

To our valued customers,

We want you to be completely satisfied with your purchase. If you have any questions about this product, please email us via support@comiso.com.cn. Our customer support team will handle it for you within 24hours.

Sincerely
COMISO

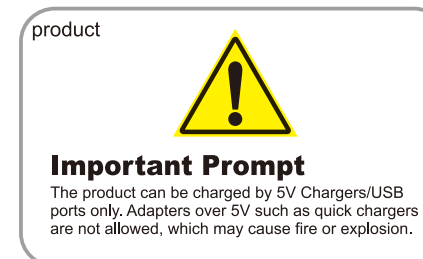

Company:Qing UG (haftungsbeschränkt)
Address:Undinestr. 712203 Berlin
E-Mail:pmdheinrich@gmail.com