料号:431-X26M14-713

尺寸:63*55mm 风琴折 157铜版纸

Wireless Speaker

Model:comiso-X26M



Precaution

1.It is normal that the speaker will get hot in playing or charging. with all audio devices before cleaning.

place it on a stable surface when in use

4.Do not use alcohol, benzene or other

3.Do not throw or tread on the speaker. Please

5.Do not place the speaker close to extremely

6.Please use the original accessories provided

7.Do not disassemble the speaker without

2. Please turn off the speaker and disconnect i

chemicals to clean the speaker.

cold or hot objects.

authorization.

Accessories

Instruction×1

Charging Cable×1

- ② Play/Pause ③ Vol- (Previous Track) ⑧ Charging Port
 - (7) TF Port
 - 4 Pairing/MODE

Product Overview

(1) Vol+ (Next Track) (6) Mic

- (9) Indicator Light
- ⑤ Power ON/OFF
- (10) Reset



Functions

- 1. Charging: Please fully charge the speaker for about 2 hours before use (The indicator light is red when charging, and it will turn off after fully charged). Use the original charging cable to connect the power adaptor (DC5V/ 1A) to get charged.
- 2. Power On/Off: Long press the power button "(1)" until the blue indicator light flashes. then release the power button, the speaker turns on with a prompt tone.
- 3.Bluetooth Pairing: After turned on, the blue indicator light keeps flashing quickly. Then open your smart phone's bluetooth function, search for and choose "comiso-X26M" After successful pairing, you will hear the "di~di" promote tone. Now you can play music in your smart phone with this speaker.

Functions

- 4. Automatic Connection: If you are already paired with phone, tablet or other bluetooth devices, when it turns on (not for the first time), the speaker will automatically pair with this smart phone.
- 5. After paired successfully, the blue light flashes slowly, and you can play music or video via it, and you can check the battery level on your phone.
- When you are playing music via bluetooth, short press "=" to decrease the volume, long press "=" to listen previous song.
- 7. When you are playing music via bluetooth. short press " \(\dagger \)" to increase the volume. long press " & " to listen next song.
- 8. When the speaker connected with IOS

Functions

- device, the volume control is synchronized 9. After paired successfully, short press " ▷ " ' to play or pause.
- 10. After paired successfully, when there is a calling, short press "DN" to pick up the call by this speaker, long press the " > 1 for 2 seconds to reject this call, and when answering the call, short press the " > " " " Redial: Double press the "D", your smart
- phone will redial your last dialed number. 11.Power Off: Long press "" for 3 seconds
- speaker will be turned off. 12. Automatic Power Off: The speaker will turn off in ten minutes below situations to save

battery power: A. The device is not

until you hear the prompt tone and the

Functions

connected. B.The phone is out of transmission range. C. The bluetooth is turned off in your phone.

- 13. Paired Another Smart phone: Method A: Turn off the smart phone A's bluetooth function, you will hear the "di~di" prompt tone and the blue indicator light will turn to flash quickly. Then the smart phone B can card mode. search for "comiso-X26M" and choose it to pair.Method B: Long press " ▷ " for 3 seconds until you hear the "di~di" prompt tone and the blue indicator light will
- L4.Clear Pairing Information: The speaker can remember up to 8 device's pairing information, if you need to clear these

turn to flash quickly, it means that the smart

phone B can search for "comiso-X26M"

and choose it to pair.

Functions

information, then turn on the speaker and long press " | for 5 seconds until you hear the "di~di" prompt tone and the paired information is cleared.

- 15.Mode switching: When you are playing music, short press " 🕭 ", then you can switch between Bluetooth mode and TF
- 16.True wireless stereo Connection:Power on the two speakers, first long press 🙇 " button of one of the speakers to set them in to the True wireless stereo paring mode, then the blue indicator flashes quickly with "di~di" prompt tone. At this time, the two speakers are in the state of interconnection After the speakers is successfully connected. the blue light of the main unit flashes quickly, and the blue light of the auxiliary

Customer support

To our valued customers.

We want you to be completely satisfied with your purchase. If you have any questions about this product, please email us via

support@comiso.com.cn.

Our customer support team will handle it for you within 24hours.

Sincerely COMISÓ



Company:Qing UG (haftungsbeschrankt) Address: Undinestr. 712203 Berlin E-Mail:pmdheinrich@gmail.com

Functions

unit flashes slowly, accompanied by a "di-di" prompt sound. Then open the bluetooth in your phone to connect one of the "comiso-X26M"to play music. Then if you want to disconnected the True wireless stereo, long press "A" of either speaker to disconnect True wireless stereo function.

- . When you first connect the True wireless stereo, please long press ">III" for 5 seconds to clear the pairing information list;
- . When the speakers are in the True wireless stereo pairing state, all control functions are synchronized, so just operate any of them.
- 17.Low Battery Warning: When the speaker's battery is less than 20%, there will a low battery warning sound, then please charge the speaker. When the speaker's battery is less than 5%, it will turn off automatically.

Functions

Hook×1

- 18.Charging Time: Please use the Charging cable provided by us to charging. The adapter specification needs to select an adapter with an output capability of not less than DC 5V/1A for charging, otherwise it will increase the charging time. (The full charging time of DC 5V/1A is about 2 hours, and the indicator light is red when charging, the indicator light is off when charging is completed.)
- 19.If the speaker is not to be used for a long time, please fully charge it at least once a month to avoid decreasing the speaker battery life.

Troubleshooting

1. The "comiso-X26M" device is in smartphone's Bluetooth device list, but fail to connect. Reason A: The speaker is not in pairing mode Solution: Long press the Play/Pause button for about 3 seconds to set it to pairing mode, when the blue indicator light flashes fast. choose "comiso-X26M" to pair.

Reason B: The speaker's paired information has been cleared. Solution: Delete the device "comiso-X26M" in your phone, then search "comiso-X26M" and choose it to pair again .

The smart phone could not search comiso-X26M" Reason: The speaker is not in pairing mode. Solution: Long press the "Play/Pause" button for about 5 seconds to set it into paring mode, when the blue indicator light flashes fast, choose "comiso-X26M" to pair.

Troubleshooting

3. The charging time is too long. Reason: The adapter's power output is too low and the charging cable's consumption is too high. Solution: Please choose the adapter with output not less than DC 5V/1A and use the original charging cable.

product

Important Prompt

The product can be charged by 5V Chargers/USB ports only. Adapters over 5V such as quick chargers are not allowed, which may cause fire or explosion.

Warranty Service

We provide following warranty services:

- 1. 12-month warranty for quality-related issues: Within 12 months after the date of purchase, we take care of all quality-related issues with a replacement or
- 2. Within the warranty validity, we provide free after sale service, except for following cases:
- A. No original warranty card or valid invoice. B. The speaker's malfunction or damage is caused by force majeure, incorrect operation (not as this instruction manual directed) or any man-made
- C. The speaker is not purchased from authorized dealer and no authorized dealer's stamp on the warranty card. D. The date of purchase on the warranty card has
- been changed. E. The speaker's malfunction or damage appears during shipment.
- F. The speaker's malfunction or damage is caused by disassembly or repairing without authorization.

Specifications

Bluetooth Solution	JL 5.0
Waterproof level	IPX4
Voltage Input	DC5V/1A
Out Power	5W
Battery	3.7V 600mAh
Product Size	Φ56mm * H82mm
Product Weight	154g

Warranty Card

Tel Num. Postcode Gender Product Product Code Date of Purchase Sale Num. Part Num. Postal Address

Dealer Stamp: User Signature:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

antenna .-- Increase the separation between the

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving

equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .-- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's

authority to operate the equipment.