

# HB6588说明书 (hellobaby)

说明书为折叠式

尺寸: 540\*120MM

材质: 100g双胶纸 (彩色)


版本: V1.3

类型: 环保

版本	修改内容	日期
Ver: 1.2	地址和认证图标有更新。	2022/03/26
Ver: 1.3	FCC内容更新。	2022/04/02

设计	审核	审批
王勇		
2022/04/02		

540.00 mm



Model: HB6588

www.hellobaby.net.cn  
service@hellobaby.net.cn

Thank you for purchasing the HB6588 Baby Monitor. With our baby monitor, you could see and hear your baby sleeping or playing in their room anytime.

Please retain your original dated sales receipt for your records. For warranty service of your product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

**Please make sure the following included in your package:**

- Parent unit x 1
- Camera unit x 1
- Power Adapter x 2
- User manual x 1
- Wall-mounting kit x 1

**1. SAFETY INSTRUCTIONS**

**CAUTION:** Keep the device away from children.

**Strangulation Hazard:** Children have STRANGLED in cords. Keep this cord out of the reach of children more than 3ft (0.9m) away. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

**Choking hazard:** This product contains small parts, please be careful when unpacked and assembled the product.

**Read and keep to instructions:** All the safety and operating instructions should be read before the video baby monitor is operated. This product cannot replace responsible adult supervision.

**Water and moisture:** This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or inside the product, such as a glass or vase. This item should not be used near water.

**DO NOT:** Use the appliance if the cord or plug is damaged. If your baby monitor is not operating properly or has suffered any damage, contact "AfterSales" service center to request inspection and repair of the appliance in order to avoid any possible risk.

**DO NOT:** Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit. Otherwise, the guarantee will be voided.

**Warning:** The baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area such as a bookcase or drawer that may impede or fail.

**Keep away from sources of heat:** This unit should not be exposed to direct heat sources such as a candle, radiator, heat register, stove or other appliance that emits heat. The unit should be kept in direct sunlight.

**Power source:** This unit should only be used with the AC power adapters included in this package (rated 5V, DC 1.2A).

**Danger requiring service:** This unit should be serviced by qualified personnel only when: OBJECTS have fallen or liquid has been spilled into the product; The units have been exposed to rain;

3. Select stop icon to stop.

4. Press the RETURN key to exit.

**Note:** The baby default settings are OFF.

**8.1 VOX SETTING**

This option in the parent unit menu allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what noise level the baby unit pick up, e.g. you would like to hear your baby cry, but you may not be too interested in his babbling.

1. Press the MENU key and the menu will pop up.

2. Press the key until the Vox icon is selected by blue box.

3. Select icon and press to confirm. The icon shows on the LCD screen.

4. Press the to select desired level.

5. Press the MENU key and the menu will pop up.

6. Press the key until the Vox icon is selected by blue box.

7. Select icon and press to confirm. The icon shows on the LCD screen.

**Note:** The noise level icon is high sensitivity level.

**8.2 FEEDING TIME SETTING**

1. Press the MENU key and the menu will pop up.

2. Press the key until the Feeding Time icon is selected by blue box.

3. Press the to confirm. The Feeding Time icon shows on the LCD screen.

**Note:** The maximum setting is 0.5 hours, and the maximum setting is 6 hours (5 levels).

**Note 2:** The feeding alarm default setting is OFF.

4. Press the to confirm. When select Zoom x2, x3, the Zoom icon shows on the LCD screen.

**8.3 ROOM SETTING**

1. Press the MENU key and the menu will pop up.

2. Press the key until the Room icon is selected by blue box.

3. Press the to confirm. When select Zoom x2, x3, the Zoom icon shows on the LCD screen.

**Note:** The Zoom setting has 3 levels.

**8.4 TIME SETTING**

1. Press the MENU key and the menu will pop up.

2. Press the key until the Time icon is selected by blue box.

3. Press the to select the timing method 12H or 24H.

4. Press the to enter sub-menu.

5. Press the key to select hour or Minute.

6. Press the key until the Time hour and minute.

7. Press the RETURN key and the menu will pop up.

8. Press the RETURN key and the menu will pop up.

9. Press the key until the room icon is selected by blue box.

2. Press the key to select the Degree Centigrade (°C) or Degree Fahrenheit (°F).

4. Press the RETURN key to confirm, the corresponding temperature shows on the LCD screen.

**8.7 ADD CAMERA**

1. Press the MENU key and the menu will pop up.

2. Press the key until the camera adding icon is selected by blue box.

3. Press the key to select your desired add camera.

4. When the "Add" is displayed 30 seconds countdown on the LCD screen, press PAIR button on the back of the camera.

5. Once paired, along with blue the paired camera icon shows on the LCD screen.

6. It will begin adding steps.

**Note:** means it is well registered.

**8.8 DELETE CAMERA**

1. Press the MENU key and the menu will pop up.

2. Press the key until the camera deleting icon is selected by blue box.

3. Press the key to select your desired delete camera.

4. Press the key until the icon and will appear.

5. Select and press to delete the camera.

**8.9 CHOOSE CAMERA**

1. Press the MENU key and the menu will pop up.

2. Press the key until the camera choosing icon is selected by blue box.

3. Press the key to select your desired camera or video source, the camera icon will appear.

4. Press the to confirm it.

**8.10 CONTACT**

1. Press the MENU key and the menu will pop up.

2. Press the key until the icon is selected by blue box. You can see our brand "HelloBaby" our email address and Website.

3. Press the RETURN key to exit.

**9. TECHNICAL DATA**

Frequency	2410MHz-2427MHz
Power: Parent Unit	Input: 100-240VAC 50/60Hz Output: 5V DC 1.2A
Power: Adaptor	Input: 100-240VAC 50/60Hz Output: 5V DC 1.2A
Displaying Range	Up to 1000ft (300m) outdoor / line of sight Up to 100ft (30m) indoor
Display	5" 720P TFT LCD

120.00 mm

The units do not appear to operate normally or exhibit a distinct change in performance; The units have been dropped or the enclosure is damaged.

**2. WARRANTY TERMS**

We offer one year warranty from the original purchase date against defects in workmanship and materials. If you have warranty or support issues, please contact our after-sales service via email.

### 3. INSTALLATION GUIDELINES

- \* To use your parent unit and camera unit together, you have to establish a radio link between them, and the range will be affected by environmental conditions.
- \* Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the baby and parent unit will block the radio signal.
- \* The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- \* Use of other 2.4GHz products, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from such products, or turn them off if they cause interference.

### 4. PLACEMENT OF THE BABY MONITOR

The camera can be placed on the desktop or mounted on the wall. Don't place baby monitor on soft wall blankets or in the corner of cupboards, shelves, etc. Keep the baby monitor away from heat sources such as radiators, chimneys, cookers and direct sunlight. Keep the baby unit away from TV sets, microwave ovens and radios. Interference occurs, move the camera elsewhere.

### 5. GETTING STARTED

#### 5.1 TURN ON THE BABY UNIT:

- Insert the DC plug of the power adapter into the DC Jack in the rear of the Baby Unit;
- Insert the other end of power adapter into a suitable electrical outlet;
- Once the adaptor is connected, the power LED will light up.

#### 5.2 TURN ON THE PARENT UNIT:

- Insert the DC plug of the power adapter into the DC Jack in the side of the parent unit;
- Insert the other end of the power adapter into a suitable electrical outlet;
- Press and hold the power key 3 seconds on the side of the parent unit;
- Once parent unit is on, the power LED will light up and the image will display on the LCD.

### 5.3 INFRARED NIGHT VISION (AUTOMATIC)

The infrared night vision function allows the camera to pick up images in dark or low light conditions. In this mode, only black and white images will be displayed on the monitor. The optimum image is in where baby sits 6ft (2m) away from object. The camera is in night vision mode, the icon will be displayed on the top of screen.

### 6. PRODUCT OVERVIEW

 
#### 6.1 ICONS OVERVIEW:



#### 6.2 PARENT UNIT OVERVIEW:



#### 6.3 BABY UNIT OVERVIEW:

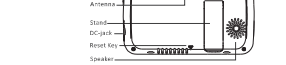

#### 6.4 KEY OPERATION

##### 7.1 TURN ON/OFF

Press and hold the power key for 3 seconds to turn on / off the parent unit.

##### 7.2 VOLUME ADJUSTMENT

Press the to increase the volume. Press the to decrease the volume.

##### 7.3 DISPLAY BRIGHTNESS ADJUSTMENT

Press the key to increase the brightness. Press the key to decrease the brightness.

##### 7.4 REMOTE PAINTER

You can remote pan tilt the camera.

Press and hold the key, the direction arrow icon will display on the LCD screen.

##### 7.5 Two Way Talk

Press and hold the key to enter two way talk mode. A microphone icon will be displayed in the corner of the LCD screen. Release the key to stop.

**Note:** When you are in the two way talk mode, the parent unit speaker is muted.

### 6. MENU OPERATION

#### 8.1 LULLABY SETTING

You can enable the lullaby to help in playing a gentle lullaby from the baby unit.

1. Press the MENU key and the menu will pop up.

2. Press the key until the lullaby icon is selected by blue box.

3. Press the to select one of available lullabies or set (3 lullabies) playback.

4. Press the to confirm.

### 6.5 MENU OPERATION

#### 8.1 LULLABY SETTING

You can enable the lullaby to help in playing a gentle lullaby from the baby unit.

1. Press the MENU key and the menu will pop up.

2. Press the key until the lullaby icon is selected by blue box.

3. Press the to select one of available lullabies or set (3 lullabies) playback.

4. Press the to confirm.

#### 8.2 FEEDING TIME SETTING

1. Press the MENU key and the menu will pop up.

2. Press the key until the Feeding Time icon is selected by blue box.

3. Press the to confirm. The Feeding Time icon shows on the LCD screen.

**Note:** The maximum setting is 0.5 hours, and the maximum setting is 6 hours (5 levels).

**Note 2:** The feeding alarm default setting is OFF.

#### 8.3 ROOM SETTING

1. Press the MENU key and the menu will pop up.

2. Press the key until the Room icon is selected by blue box.

3. Press the to confirm. When select Zoom x2, x3, the Zoom icon shows on the LCD screen.

**Note:** The Zoom setting has 3 levels.

#### 8.4 TIME SETTING

1. Press the MENU key and the menu will pop up.

2. Press the key until the Time icon is selected by blue box.

3. Press the to select the timing method 12H or 24H.

4. Press the to enter sub-menu.

5. Press the key to select hour or Minute.

6. Press the key until the Time hour and minute.

7. Press the RETURN key and the menu will pop up.

8. Press the RETURN key and the menu will pop up.

9. Press the key until the room icon is selected by blue box.

**Note:** The maximum setting is 0.5 hours, and the maximum setting is 6 hours (5 levels).

**Note 2:** The feeding alarm default setting is OFF.

#### 8.5 CONTACT

1. Press the MENU key and the menu will pop up.

2. Press the key until the icon is selected by blue box. You can see our brand "HelloBaby" our email address and Website.

3. Press the RETURN key to exit.

### 9. TECHNICAL DATA

Frequency: 2410MHz-2427MHz

Power: Parent Unit: Input: 100-240VAC 50/60Hz  
Output: 5V DC 1.2A

Power: Adaptor: Input: 100-240VAC 50/60Hz  
Output: 5V DC 1.2A

Displaying Range: Up to 1000ft (300m) outdoor / line of sight  
Up to 100ft (30m) indoor

Display: 5" 720P TFT LCD

Dimensions: 5.4" x 12.0" x 1.2"

Weight: 1.5 lbs (0.7 kg)

Material: ABS Plastic

Color: Black

Country of Origin: China

Warranty: 1 Year

CE Marking: CE

FCC Marking: FCC

RoHS Marking: RoHS

REACH Marking: REACH

WEEE Marking: WEEE

Energy Star Marking: Energy Star

UL Marking: UL

ETL Marking: ETL

CSA Marking: CSA

ULC Marking: ULC

UL ENEC Marking: UL ENEC

UL ENEC ENEC Marking: UL ENEC ENEC

UL ENEC ENEC Marking: UL ENEC ENEC

UL ENEC ENEC Marking: UL ENEC ENEC

UL ENEC ENEC Marking: UL ENEC ENEC

UL ENEC ENEC Marking: UL ENEC ENEC

UL ENEC ENEC Marking: UL ENEC ENEC

### 6.6 RADIATION EXPOSURE STATEMENT FOR CAMERA

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Get equipment stop use immediately and discontinue use immediately if you experience any of the following symptoms:

- Head or neck pain

- Tingling, numbness, or weakness in the hands or feet

- Fatigue or loss of energy

- Irritation or redness of the skin

- Burning sensation on the skin

- Hair loss or thinning of the hair

- Changes in appetite or weight

- Changes in menstrual cycles

- Changes in pregnancy outcomes

- Changes in fertility

- Changes in blood pressure

- Changes in heart rate

- Changes in breathing

- Changes in vision

- Changes in hearing

- Changes in taste

- Changes in smell

- Changes in touch

- Changes in pain

- Changes in temperature

- Changes in humidity

- Changes in air quality

- Changes in water quality

- Changes in soil quality

- Changes in vegetation

- Changes in animal behavior

- Changes in human behavior

- Changes in social interaction

- Changes in economic activity

- Changes in political activity

- Changes in cultural activity

- Changes in religious activity

- Changes in artistic activity

- Changes in scientific activity

- Changes in technological activity

- Changes in environmental activity

- Changes in social activity

- Changes in economic activity

- Changes in political activity

- Changes in cultural activity

- Changes in religious activity

- Changes in artistic activity

- Changes in scientific activity

- Changes in technological activity

- Changes in environmental activity

- Changes in social activity

- Changes in economic activity

- Changes in political activity

- Changes in cultural activity

- Changes in religious activity

- Changes in artistic activity

- Changes in scientific activity

- Changes in technological activity

- Changes in environmental activity

- Changes in social activity

- Changes in economic activity

- Changes in political activity

- Changes in cultural activity

- Changes in religious activity

- Changes in artistic activity



Made in China