

## Phoneographer P1 OPERATING INSTRUCTIONS

请根据手机系统版本选择不同的二维码进行扫描安装APP  
Please scan the QR code according to the system of your mobile phone.



Android 应用宝



Android google




Apple Store

Thank you for making BENRO your choice for professional photographic equipment. Your BENRO gear is manufactured to provide years of dependable service. In order to obtain optimum satisfaction and performance, we suggest that you carefully read these instructions.

感谢您选用百诺专业摄影器材，百诺产品提供值得您信赖的售后服务。为了让您对百诺产品的使用更加满意，我们建议您仔细阅读下面的使用说明。

### 部件名称 Name of Components

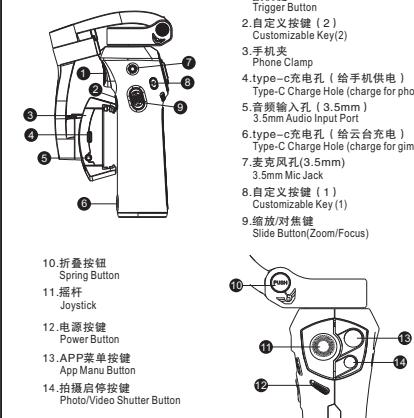

### P1 使用视频二维码 QR codes for P1 operation videos




中文视频

English Video

### 包装清单: Package Contents

|  |     |
|--|-----|
| P1 主机<br>P1 Gimbal   | 1PC |
| Type-c 接口A n d r o i d 手机充电线<br>Type-c port Android phone charging cable | 1PC |
| iPhone手机充电线<br>iPhone charging cable                                     | 1PC |
| 说明书<br>Instruction manual  | 1PC |

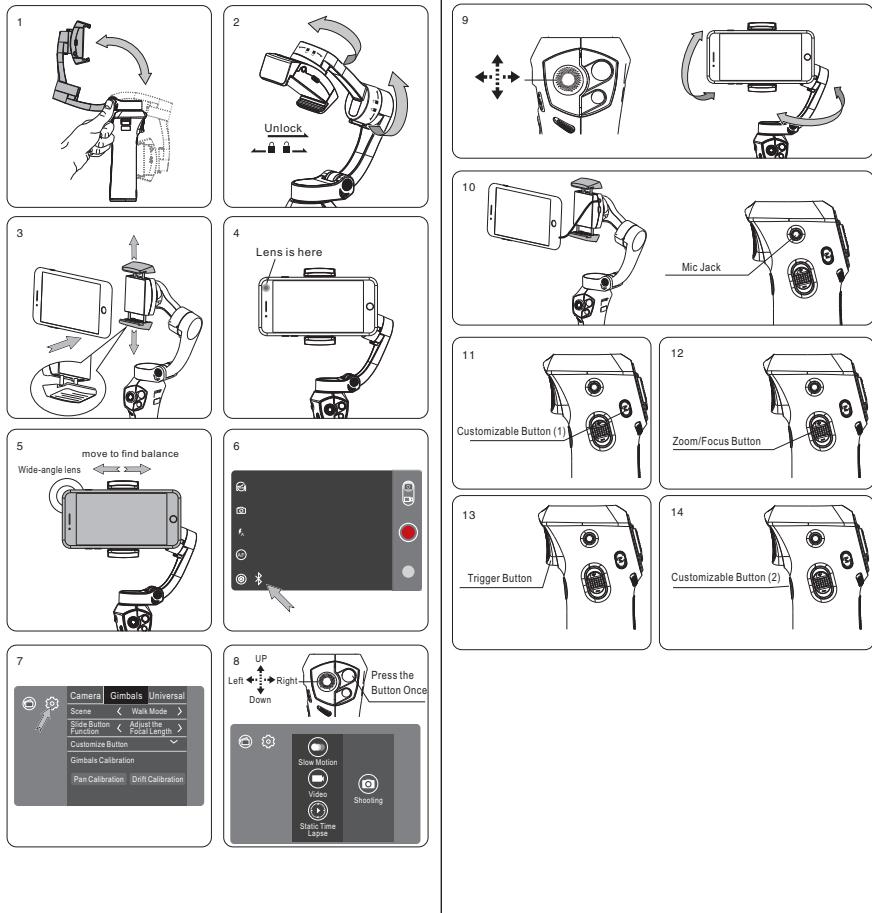

## OPERATING INSTRUCTIONS

### Open the Gimbal (Figure 1, 2)

1. Press the spring button to unlock the rotatable arm, and then pull upwards the rotatable arm to open the gimbals.

2. Rotate the tilt motor and roll motor according to the unlock signs direction. The gimbals can be rotated freely to fully open the gimbals.

### Mount and Adjust the Mobile Phone (Figure 3, 4, 5)

1. Hold the phone clamp with the sticker downwards, and then extend the clamp to mount the mobile phone. Please remind to center the mobile phone.

Note: the phone camera should be at the left side of the gimbals so that the camera cannot be hidden.

2. If the third party wide angle lens is mounted, the mobile phone needs to be adjusted left and right to center the phones in between the motors.

### Bluetooth Connection (Figure 6)

1. Download the APP of the gimbals to make sure both phone Bluetooth and shared location open. Open the operation interface of the APP, and then click the Bluetooth icon on the operation interface to connect with the gimbals.

### Gimbal Calibration (Figure 7)

1. Calibrate the gimbals when you firstly use the gimbals or the mobile is not balanced after mount the phone.

2. Put the gimbals on the flatable. Click "setting" on APP interface, and then block "Gimbals". The "pan calibration" and "drift calibration" are shown on the screen. Firstly perform "drift calibration", and then "pan calibration".

Note: please do not move the gimbals when calibrate the gimbals, or it will affect calibration function.

### APP Menu Button (Figure 8)

1. Click the APP menu button once to show the photo and video selection menu. Stir the joystick left and right to select photo or video. Stir the joystick up and down to select different functions of photo or video. Press the "Shooting on/off" button to start shooting.

### The Joystick (Figure 9)

1. Stir the joystick left and right when shooting to adjust the pan angle of the gimbals. Stir the joystick up and down to adjust the tilt angle.

### External Microphone (Figure 10)

1. Use the audio cable to connect the phone earphone hole and the audio input hole on the phone clamp. And then install the microphone into the mic jack of the gimbals to finish installation.

### Customizable Button (1) (Figure 11)

1. At the factory default status, when press the button shortly, the phone can be changed to 90 degree vertical shooting. Long press the button to perform 180 degree pan exchange.

### Zoom/Focus Button (Figure 12)

1. This button can control the zoom and focus of the phone camera. The two functions can be exchanged by click "setting" to select "gimbals" and then "customize button".

### Trigger Button (Figure 13)

1. Quickly press the trigger button twice to return to the original status.

2. Press long to lock mode to fix the lens direction.

3. Quickly press it twice and do not free your hand. The gimbals can be the quick follow status.

### Customizable Button (2) (Figure 14)

1. Press long to change the mode. Green light: all follow mode; Blue light: pan follow mode.

## 使用方法(简体中文)

### 打开稳定器: (如图 1, 2 所示)

1. 首先按下折叠按钮, 将旋转臂解锁, 然后将旋转臂往上提, 即可以打开稳定器。反之即折合稳定器。

2. 按丝印图标所示, 向解锁图标方向分别转动俯仰电机与横滚电机, 将锁扣解开, 此时云台可以自由转动, 稳定器完全打开。

### 手机的安装与调节: (如图 3、4、5 所示)

1. 将手机支架有铭板贴的一面朝下, 然后拉伸手机支架, 将手机装入手机支架并居中。

注: 安装时将手机摄像头置于云台的左侧, 以免摄像头被遮挡。

2. 如有安装第三方手机广角镜头, 需左右移动手机, 将手机重心尽量位于电机中心。

### 蓝牙连接: (如图 6 所示)

1. 先下载稳定的手机APP, 确保手机的蓝牙与共享位置处于打开状态, 打开软件的操作界面, 点击操作界面的蓝牙图标即可与稳定器链接。

### 云台校准: (如图 7 所示)

1. 第一次使用云台或当安装手机后手机与地面不平衡时请进行云台校准。

2. 先将云台放置于水平桌面, 点击手机APP界面上的“设置”再点“云台”选项, 这时我们可以看到“水平校准”与“漂移校准”, 先执行“漂移校准”再执行“水平校准”。

注: 当云台进行校准时, 请勿移动云台, 这样会影响校准功能。

### APP菜单按键: (如图 8 所示)

1. 单击APP菜单按键, 即可以调出摄影与摄像选择菜单, 左右拨动摇杆可以选择摄影或摄像, 上下拨动摇杆可以选择摄影或摄像的各项功能, 选择完毕按“拍摄快门键”确认即可进行拍摄。

### 摇杆的使用: (如图 9 所示)

1. 在拍摄时摇杆的左右拨动, 可以调节云台的水平角度。摇杆的上下拨动, 可以调节云台的仰俯角度。

### 外接麦克风: (如图 10 所示)

1. 先将手机的耳机孔与手机支架的音频输入孔用音频线链接。然后再把麦克风装入稳定的麦克风孔上, 即安装完成。

### 自定义按键 (1) 的使用: (如图 11 所示)

1. 出厂默认设置, 短按按键, 手机可以进行横拍与90° 坚拍的切换, 长按按键, 可以进行水平180° 切换。

### 缩放/对焦按键的使用: (如图 12 所示)

1. 此按键可以控制手机镜头的对焦, 也可以控制手机画面的缩放。此两项功能可以在“设置”里选择“云台”选项在“按键自定义”里进行切换设置。

### 扳机键的使用: (如图 13 所示)

1. 快速按两次扳机键为返回开机时的初始位置。

2. 长按为锁定模式, 即锁定镜头的方向。

3. 快按两次不松手, 稳定器可以进行快速跟随。

### 自定义按键 (2) 的使用: (如图 14 所示)

1. 长按, 模式的切换, 绿灯: 全跟随模式。蓝灯: 水平跟随模式。

## 参数 Specifications

| 云台<br>Gimbal                                   |  |
|--|--|
| 续航时间<br>Working time                           | 24小时<br>24 h   |
| 工作电压<br>Working Voltage                        | 标准 7.4V<br>Standard 7.4V   |
| 工作电流<br>Working Electric Flow                  | 90mA (重心平衡状态)<br>90mA (center of gravity is under balance status)                            |
| 工作温度<br>Working Temperature:                   | -10° ~ 45°   |
| 产品尺寸 (W*D*H)<br>Product Size (W*D*H)           | 展开: 123*73*297(mm)<br>Extended:123*73*297(mm)<br>收纳: 50*106*178(mm)<br>Closed:50*106*178(mm) |
| 机体重量<br>Product Weight                         | 440g<br>440g   |
| 俯仰轴机械活动范围<br>Tilt Axis Mechanical Moving Range | 330°<br>330 degree   |
| 横滚轴机械活动范围<br>Roll Axis Mechanical Moving Range | 330°<br>330 degree   |
| 水平轴机械活动范围<br>Pan Axis Mechanical Moving Range  | 360° 无限转动<br>360 degree unlimited rotation   |
| 静止姿态跟踪误差<br>Follow Tolerance at Static Status  | ±0.05<br>±0.05   |
| 运动姿态跟踪误差<br>Follow Tolerance at Motion Status  | ±0.2<br>±0.2   |
| 最大负载重量<br>The Maximum Payload                  | 310g ( 0.68 lb )   |
| 适用手机宽度<br>Compatible Phone Width               | 55-90mm  |
| 适用手机厚度<br>Compatible Phone Thickness           | ≤ 9mm  |
| 麦克风接口类型<br>Mic Jack Type                       | 3.5mm TRRS   |
| 电池<br>Battery                                  |  |
| 电池类型<br>Battery Type                           | 锂离子电池<br>Lithium Battery   |
| 电池型号<br>Battery Model                          | SP26350  |
| 电池容量<br>Battery Capacity                       | 2000mAh  |
| 充电时长<br>Charging Time                          | 3h (充电功率10W)<br>3h (Charging Power 10W)  |

百诺保留随时变更设计及说明书内资料权利, 不另行通知。

## 注意事项:

● 使用此产品时, 请不要超过规定的最大承重 (详细参数请参考产品吊卡或者百诺官网。)

● 使用此产品时, 为了避免意外损坏设备, 在安装设备之前, 请务必确认产品的各个锁紧系统处于安全状态。

● 请勿在零下10度或高于零上45度的温度下使用本产品。

● 在潮湿, 泥沙, 风尘等环境使用过后, 一定要把微有泥沙的部分清除干净, 可使用无水酒精, 消毒酒精处理。

● 请勿长时间将产品放置在太阳下, 避免长时间将产品放置在高温下, 例如靠近汽车玻璃数小时。

● 为了人身安全, 使用本产品时, 请勿靠近高电压区域, 或与强效化学接触。Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult a dealer or an experienced radio/TV technician for help. Consideration of an experienced radio/TV technician for help. Consideration of an experienced radio/TV technician for help. Consideration of an experienced radio/TV technician for help.

质量保修可以联系您所在地的经销商, 海外代理商详细信息可登陆 www.benro.com 查询。

## USER NOTICE

● Do not exceed the maximum specified load capacity (see specifications on the package label or visit [www.benro.com](http://www.benro.com)).

● Always ensure the gimbal locks are tightly engaged before mount any gear on your gimbal.

● Do not use any Tripod below temperatures of 14°F or above +113°F(-10°C / +45°C).

● Always clean and dry any gimbal after has been exposed to wet, dusty, sandy or salty conditions. Your gimbals are not recommended for use in water. If required, clean the gimbals using a soft cloth with some no water alcohol.

● Do not leave any Tripod in the sun for prolonged periods and avoid high temperature exposure.

● For your safety, don't let your BENRO gear come in contact with any electrical power source.

## LIMITED WARRANTY COVERAGE

Your Benro product has been carefully manufactured, has passed many quality assurance checks and has been thoroughly tested before shipment. It is warranted in the country from which you purchased it based on the date of purchase to the original owner, against defects in materials and workmanship. The warranty does not apply to damages caused by mishandling, dropping, or leaking batteries, nor modification or servicing performed by others.

Please contact your local Benro dealer for further information and details about your warranty. To find the Benro distributor in your country, please check the distributor information at Benro official website [www.benro.com](http://www.benro.com).

Specifications and design are subject to change without notice.

## 低功率无线电辐射性发射机管理办法第12、14條

—低型式部認證之低功率射頻電機, 非經許可, 公司、商號或使用者均不得擅自變更频率、加大功率或變更設計及功能。

—低功率射頻電機之使用不得影響飛航安全及幹擾合法通信; 當發現有幹擾現象時, 該立即停止使用, 并改善至無幹擾時方得繼續使用。經發現有幹擾現象時, 該立即停止使用, 并改善至無幹擾時方得繼續使用。

—低功率射頻電機需符合無線電通信設備之規範。

## FCC INFORMATION

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, then user is encouraged to try to correct the interference by one or more of the following measures.

Reorient or relocate the receiving antenna.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult a dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1 This device may not cause harmful interference, and 2 this device must accept any interference received, including interference that may cause undesired operation.

Bluetooth Version V4.1 (BLE mode)

Frequency Range 2402-2480MHz