



MERKURY INNOVATIONS **CONFIDENTIAL**

FILE INFORMATION
DATE:03/24/16
MODEL NUMBER:
MI-SPB47-Series (MANUAL)

PRINTER SPECIFICATIONS

FILE NAME: MI-SPB47_Manual_032416.ai
SCALE: 100%
SIZE: Trim: W 210mm x H 155mm
PAPER STOCK: 80g Art Paper
INKS: 1/1
Greyscale

PRESS WORK / NOTES: Trim to size, score, fold, & glue in specified areas.

----- Trim
----- Score

DO NOT print Comments or Dielines.
Physical sample according to specs must be approved by MERKURY before proceeding to production.

CONTACT
MERKURY CHINA:
Perry
perry@merkuryinnovations.com.cn
King
king@merkuryinnovations.com.cn

COMMENTS (Internal reference only)
File created by Richard
- Please include this manual in all packaging for MI-SPB43
- Greyscale
- Double sided printing
(PACKING INSTRUCTIONS BELOW)

PACKING INSTRUCTIONS

1 2 3

Speaker Specifications:
Output Power: 3W (1 channel)
Frequency Response: 280Hz to 16KHz
Dimensions (WxHxD): 75mm x 85mm x 100mm
Weight: 243g

Battery Information:
Built-in Battery: Lithium
Input: DC 5V/200mA
Battery Capacity: 800mAh
Music playing time: Up to 4 Hours
*Approximate playback time. Battery life depends on individual use and may be slightly more or less than the time specified.

Bluetooth Information:
Bluetooth Specification: V3.0
Operating Distance: 10 Meters (Class II)
System Requirements: Bluetooth-capable device

Additional Connection Sources:
Power Source: Built-in rechargeable battery via Micro USB to USB cable

Technical Support:
Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you might have.

For assistance operating your product, please consult the User's Manual first, then feel free to contact Merkury Innovations technical support:

Merkury Innovations
39 Broadway, 15th Floor
New York, New York 10006
www.merkuryinnovations.com
E-mail: support@merkuryinnovations.com

©2016 Merkury Innovations, LLC.
To explore our full selection of products, visit us at: www.merkuryinnovations.com

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The illustrated product and specifications may differ slightly from those supplied. All other trademarks and trade names are those of their respective owners.


Made in China

Works wirelessly with these devices:

Computers Tablets Smartphones MP3 Players

IMPORTANT

PLEASE READ BEFORE USING THIS PRODUCT

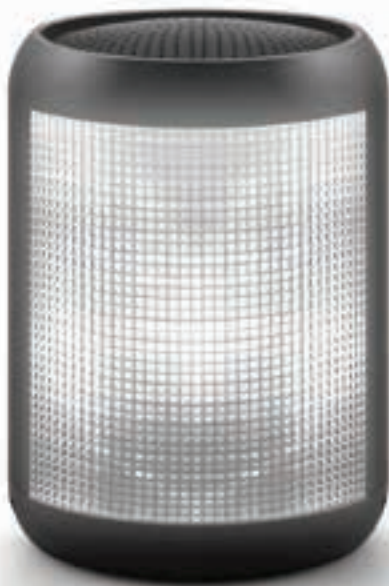

User's manual for MI-SPB47

MOSEY

Portable LED Wireless Speaker

Package Includes:
(1) Mosey Speaker
(1) USB to Micro USB Cable
(1) 3.5 mm Auxiliary Cable

BLUETOOTH® WIRELESS

Features:
• LED Lightshow
• Built-in Controls & Mic
• Up to 30ft wireless range

Charge It

- Plug the micro USB cable into the micro USB port on the side of the speaker, and connect the other end of the cable to either a computer USB port or to a USB-compatible car or wall charger.
- Solid red LED light will appear on the back of the speaker to indicate when the speaker is charging, even while speaker is turned off.
- When charging is complete, the red LED light will turn off.
- Charging time is approximately 2 hours.

Turn It On/Off

- To power on the MOSEY, slide the On/Off switch on the side of the speaker to the "ON" position.
- The MOSEY will emit a tone, and the LED lights will turn on.
- To power off, slide the On/Off switch on the side of the speaker to the "OFF" position.

Pair & Connect

- Power the MOSEY on (refer to the "Turn It On/Off" section).
- The LED lights built into the speaker will start to flash blue. Your speaker is now ready to be paired. *NOTE: LED lights will go out if no Bluetooth device is detected within 5 minutes.*
- On your Bluetooth-enabled smartphone, tablet or media player, navigate to the Bluetooth settings menu, turn on the Bluetooth feature, and search for new devices.
- After a few seconds you will see "MERKURY SPB47" listed.
- Tap this model to select it, the speaker will emit a beep and the LED lights will begin to rapidly change colors to indicate that it has been successfully paired with your device. *NOTE: If your device asks for a pin code, enter "0000".*
- If using AUX, connect the included AUX cable to the port on the side of the MOSEY. Then connect the 3.5mm auxillary jack at the other end of the cable to your device's audio jack. *NOTE: On-speaker controls only work over Bluetooth, and will not work when your device is connected via an AUX cable.*

Play

- Connect your device to the MOSEY via Bluetooth (refer to the "Pair & Connect" section) or via the included micro USB to AUX cable.
- Open your favorite music app and press play.
- Control the music, track and volume from your mobile device or the speaker.
- All audio (including music, games, videos, & notifications) will be routed through the MOSEY.


Reconnect to Bluetooth

- You only need to pair your Bluetooth device with the MOSEY once.
- With your previously paired device's Bluetooth turned on and in range, power on the MOSEY.
- The speaker will automatically reconnect to the last Bluetooth device it was connected to.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth settings menu on your device, turn on the Bluetooth feature, and select "MERKURY SPB47" from your list of paired Bluetooth devices.

Troubleshooting

No power	Recharge your MOSEY using the included micro-USB cable.
Music is not playing over Bluetooth	Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the MOSEY to reconnect your Bluetooth device.
Bluetooth device will not reconnect with the speaker	Navigate to your Bluetooth settings menu on your Bluetooth device, tap "MERKURY SPB47", and select "Forget". Now follow the steps to pair your device again.

Ports and Features

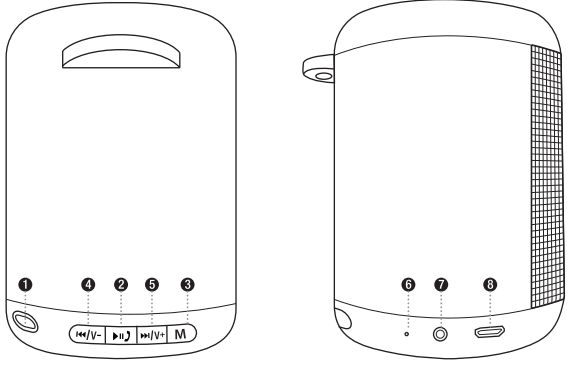

Back of the Speaker

1 On/Off Switch
Power On/Power Off

2 Play/Pause Music
Short Press: Play/Pause Music
Answer a Phone Call
Hang Up a Phone Call

3 "M" Button
Switch between modes

4 Previous/Next Track
Press: Skip to Previous Track
Press & Hold: Decrease Volume

5 Microphone

6 3.5mm AUX Port

7 Micro USB Charging Port

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.