



## GameSir T4 Wireless Controller

### User Manual



We hope this manual answered any questions you may have. If you have any further questions, please contact us:

GameSir Facebook: <https://www.facebook.com/myGamesir>

Twitter: <https://twitter.com/mygamesir>

Customer Service: [cs@gamesir.hk](mailto:cs@gamesir.hk)

**NOTICE:** Please read this Precautions carefully before using the product.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

## PRODUCT DESCRIPTION

GameSir T4 wireless controller is designed for a strengthened gaming experience. It is compatible with Windows 7 or above through wired and 2.4 GHz low delay transmission wireless connection. GameSir T4 has LB & RB buttons, D-pad, silicone anti-skid 3D joystick and sensitive triggers. Key configurations of M1-M4 buttons at the backside are customizable and can be freely combined. Dual motors bring strong vibration feedback. Ergonomic handles are unevenly engraved and designed for anti-skid handhold. The product has translucent design with LED ABXY buttons on the right.

## PACKAGE CONTENTS

GameSir T4 Wireless Controller  
2.4 GHz Wireless Receiver  
Type-C charging cable  
Instruction Manual

## SYSTEM REQUIREMENT

Windows 7/8/10

 
## REGISTRATION

Register your GameSir ID at <https://gamesir.hk/> to get real-time information on your product's warranty status and series of GameSir exclusive benefits.


## WHAT YOU'LL GET

- \* 12 months limited manufacturer's warranty
- \* Free online technical support at <https://gamesir.hk/> (Supports English and Japanese)

## DEVICE LAYOUT

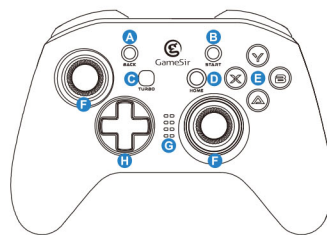

 - A** BACK Button
- B** START Button
- C** Turbo Button
- D** HOME Button
- E** A/B/X/Y buttons
- F** Backlight loop
- G** LED light indicators
- H** D-Pad

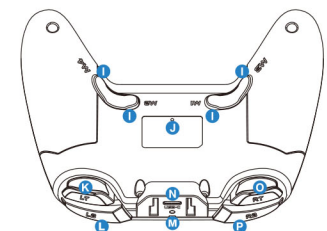

- I** Configurable buttons(M1/M2/M3/M4)
- J** Reset
- K** LT Button
- L** LB Button
- M** Charging light indicator
- N** Type-C connector
- O** RT Button
- P** RB Button
- Q** 2.4Ghz Dongle
- R** USB Cable

## CONNECTION

### Connect to PC via 2.4 GHz receiver (Xinput Mode)

- Click Home button to turn on GameSir T4 Wireless Controller, LED indicator lights scroll up and down, the controller can be connected.
- Plug 2.4 GHz receiver into PC's USB port.
- When 2.4 GHz receiver indicator lights up and LED1+LED4 of GameSir T4 Wireless Controller stay on, Xinput Mode is connected successfully. GameSir T4 Wireless Controller can be used normally.

\* Hold Home button for 5 seconds, GameSir T4 Wireless Controller can switch between Xinput Mode and Dinput Mode.

Xinput Mode: LED1+LED4 indicators stay on

Dinput Mode: LED1+LED3 indicators stay on.

 
### Connect to PC via Type-C charging cable (Xinput Mode)

- Connect GameSir T4 Wireless Controller to PC's USB port via Type-C charging cable.
- When LED1+LED4 of GameSir T4 Wireless Controller stay on, Xinput Mode is connected successfully.
- The corresponding driver will be automatically installed on PC. GameSir T4 Wireless Controller can be used normally.


\* Hold Home button for 5 seconds, GameSir T4 Wireless Controller can switch between Xinput Mode and Dinput Mode.

Xinput Mode: LED1+LED4 indicators stay on

Dinput Mode: LED1+LED3 indicators stay on.



## CONFIGURABLE M BUTTONS

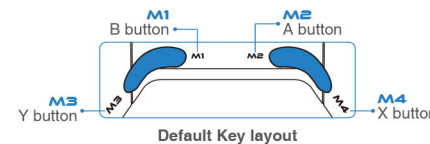 

- Hold M1 then START or BACK, the backlight loop turns red and blue simultaneously to be set up.
- Hold the keys you want to combine.
- Press M1 again, the red backlight loop turns off. Combination is successfully set.
- These keys can be set up as combination buttons: A, B, X, Y, L1, L2, L3, R1, R2, R3. They can be freely combined, either combination keys or single button.
- M2, M3, M4 have the same settings as M1. This function can be set up only when the controller is successfully connected.

## TURBO FUNCTION

- Press the key where you want to set turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully set.
- Press the key that is successfully set for Turbo function, press TURBO key simultaneously, then back light turns into red and Turbo function is successfully canceled.

\* The following buttons can be used to set for Turbo function: A, B, X, Y, LB, RB, LT, RT.

## AUTOMATIC POWER OFF

When GameSir T4 Wireless Controller is connected, it will automatically power off within 180 seconds under no operation. When GameSir T4 Wireless Controller is disconnected, it will automatically power off within 30 seconds under no operation.

## CHARGING

It takes 1.5 to 2 hours to full charge GameSir T4 Wireless Controller. The charging indicator light keeps steady red during charging. When fully charged, the charging indicator light goes off. Please unplug the Type-C charging cable.

## LIGHTING ADJUSTMENT AND MOTOR VIBRATION INTENSITY ADJUSTMENT

### Lighting adjustment:

Hold LT, RT, R3 simultaneously then press up or down of D-pad to adjust lighting. The lowest level is light off among 5 levels of lighting.

### ABXY backlight adjustment:

Hold LB+RB for 5 seconds to switch backlight on/off.

### Motor vibration intensity adjustment:

Hold Turbo then press up or down of D-pad to adjust vibration. The lowest level is vibration off among 5 levels of vibration.

## LOW BATTERY ALERT

GameSir T4 Wireless Controller shows low power condition (less than 10%) when:

- Battery voltage is less than 3.5V;
- LED indicator light flashes;
- Vibration is off.

## RESET

Stick a slender pin into the Reset button on the back of GameSir T4 Wireless Controller to reset. The controller will turn off and reboot.

## FCC Caution.

§ 15.19 Labelling requirements.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GameSir • Gaming is Winning.™

© 2018 GameSir Inc. All rights reserved.  
Product may vary slightly from those pictures.