

# GAMESIR T1


## WIRELESS CONTROLLER

We hope this manual answered any questions you may have had.

If you have any further questions, please contact us:

 Gamesir Facebook: <https://www.facebook.com/myGamesir>

 Customer Service: [cs@gamesir.hk](mailto:cs@gamesir.hk)

 For More Support: <http://www.gamesir.hk>

 


Model No: GameSir-T1


QUICK REVIEW GUIDE FOR USER MANUAL

PRODUCT OVERVIEW

1. Check and charge your controller :

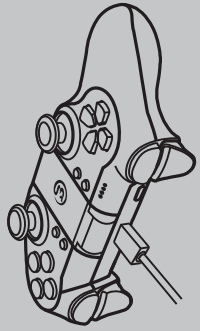


 2. Connecting the controller to your devices :

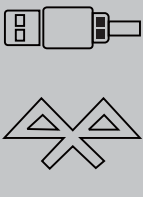


Bluetooth 4.0    Wired

 3. Download T1 supported games :

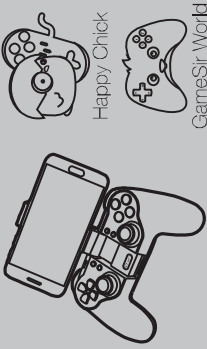


Happy Chick  
GameSir World

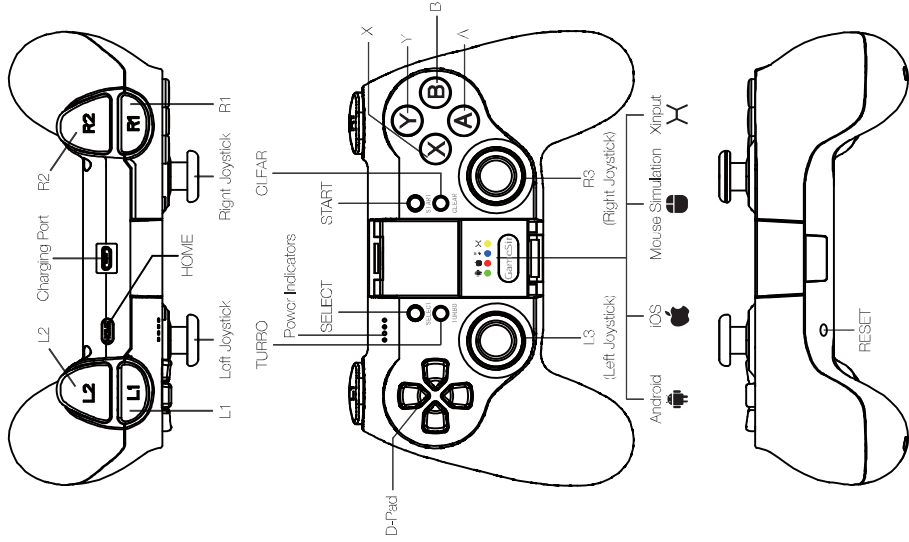 

PACKAGE CONTENTS

 MORE INFORMATION



Micro-USB Cable







Controller

**System Requirements:** Android 4.0 or later ,Windows 7 or later

**Hardware compatibility:** Android Smartphone / Android Tablet / NVIDIA Tablet / Android TV box  
Windows PC / Samsung Gear VR / PlayStation 3

**Connections:**  Bluetooth 4.0  Wired


-  [GameSir.hk](http://GameSir.hk) - Support
-  [Facebook - Mygamesir](https://www.facebook.com/mygamesir)
-  [GameSir.hk](http://GameSir.hk)-Where to buy
-  [GameSir.hk](http://GameSir.hk)-Product-Manual

**Warning**

 
1. Avoid strong vibration, do not disassemble, reit or repair on your own.
2. Do not keep in humid, high temperature or soot place.
3. Avoid water or other liquid in gamepad, it may affect the performance of the gamepac.
4. Keeping away from fire, the built-in battery has danger of explosion.
5. Charging voltage is USB 3.7-5.5V DC supply ( normal Android smart phone charging power can be used)
6. Children should be under adult's supervision to use this product.

## CHECKING AND CHARGING THE CONTROLLER

Before getting started, check the remaining power of your T1: at first, press the "Home" button next to the L2, the four blue LED lights will flash in turn and each LED light represents 25% of the power. If your T1 is not fully charged, we recommend to charge your T1 to full at first.

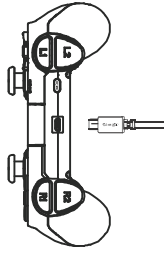

 
It is recommended to charge the controller for 2 hours by plugging in the USB cable (provided in the box) - plug one end of the cable in your T1 and plug the other end into a powered USB port. Remember, you can use your T1 while it's charging, but it is not recommended.

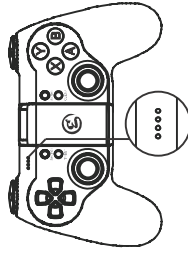

Your T1 controller is built with a lithium ion rechargeable battery. During charging, four LED indicators will give you the charging status:

While the T1 controller is charging, the four blue lights will flash in turn.

 When the T1 is fully charged, the four blue lights will stay on.

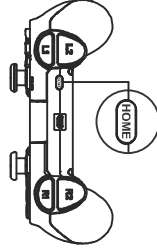

If you want to turn off the gamepad, press the "Home" button for 5 seconds.

## T1 HIGHLIGHT FEATURES

### Brightness adjustment of "XYAB" button lights

 
When your T1 is connected successfully to any of your devices, hold down "L2+R2+R3" simultaneously, and press UP/DOWN button of D-Pad to increase/decrease the brightness of "XYAB" buttons. There are 4 levels of brightness degree in total.

### Auto fire function

TURBO is semi-automatic, it creates one or more continuous button press.

## CONNECTING ON ANDROID ( TABLETS / PHONES )

If this is your first time turning on your T1, hold down the "A" button and "HOME" button simultaneously for 2 seconds, the "H" button will start flashing in green. To pair the controller, go to your Android devices and follow the User Interface flow below: Settings>Turn on Bluetooth>Search for new devices>GameSir-T1 will display on the screen. Click to connect via Bluetooth. If your T1 is paired and connected, the T1 will shock slightly and the "H" button will stay on green. The "H" button will start flashing in red, when you hold down "SELECT" and "X", the mouse icon will appear on your screen, and the "H" button will stay on. Hold down "SELECT" and "X" button again to exit Mouse Mode.

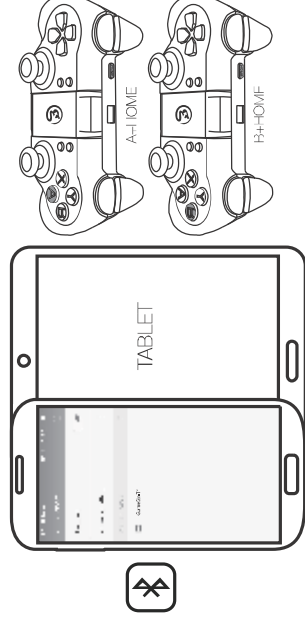

The Android devices can also be connected if you press "B" and "HOME" button simultaneously.


The function of "A" + "HOME" and "B" + "HOME" mode is totally the same and can be recognized by most Android smartphones. But if you want to get the icon of mouse appears on your screen, you need to press "A" + "HOME" at first, press "SELECT" + "X" after that. You can not get the icon of mouse after you press "B" + "HOME".

Please note that the controller will remember your last connection. If this is your second time to connect T1 to the same Android Phones without connections on other devices, hold down the "HOME" button of your T1 for 3 seconds, the controller will be paired automatically.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu. If you do not know if the game is controller compatible, go to [www.gamosir.com](http://www.gamosir.com) and find "GameSir World" column.

## CONNECTING ON ANDROID TV BOX

 You can connect your T1 on Android TV BOX via Bluetooth 4.0 and USB cables as follows:

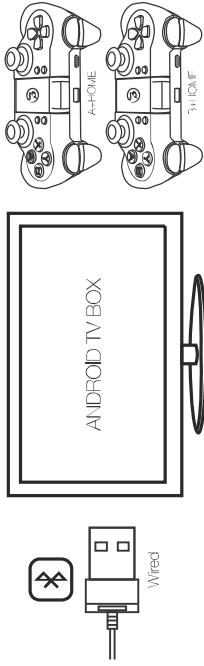

**Connecting via Bluetooth 4.0:** If this is your first time to connect your T1 to Android TV box, hold down the "A" button and "HOME" button simultaneously for 2 seconds or hold down the "B" button and "HOME" button simultaneously for 2 seconds. The "HOME" button will start flashing in green. To pair the controller, go to your Android TV to open the Bluetooth and search, "GameSir-T1" will display on TV screen, click to connect via Bluetooth. If your T1 is paired and connected, the "I" will shock slightly and the "Android" button will stay on. The "HOME" button will start flashing in red, when you hold down "Select" and "A", the mouse icon will appear on your screen, and the Mouse button will stay on. Hold down "SELECT" and "A" button again to exit Mouse Mode.

You can also hold down "B" and "HOME" button for 2 seconds to connect your T1 to Android TV box, all the connection steps are totally the same with "A" and "HOME" buttons, the only difference is that the Mouse button will not flash any more in this mode.


**Wired Connection:** The controller can also be connected successfully via USB cable. Hold down Turbo and "HOME" button for 2 seconds simultaneously, the "HOME" button and "B" button will start flashing, take out the USB cable included in your package, plug one end of the cable in your T1 and plug the other end into a USB port of the Android TV box. Your T1 will be connected easily and quickly in that way. The "HOME" button and "B" button will stay on.

Please note that the controller will remember your last connection, if this is your second time to connect the same TV box Bluetooth 4.0, and your T1 is not been connected to other devices after last connection, you can hold down the "HOME" button of your T1 for 3 seconds, the controller will be paired to your TV box automatically.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu. If you do not know if the game is controller compatible, go to [www.gamesirch.com](http://www.gamesirch.com) and find "GameSir World" column.

## CONNECTING ON WINDOWS PC

 The Windows PC can be connected via USB cable.

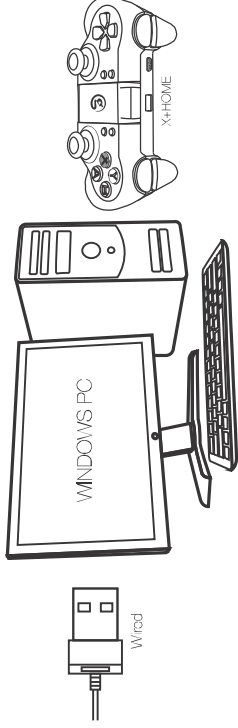


**Connecting via USB cable:** If this is your first time to connect your T1 to your Windows PC, hold down "X" and "HOME" button of your T1 simultaneously for 2 seconds, the "X" button will start flashing. Connect T1 to PC's USB port via the cable. Your T1 will be connected easily and quickly in that way. The "X" button light of your T1 will stay on.

Open up a compatible game, navigate to the in-game controller settings menu and select the Gamepad/Controller option (Exact name varies from game to game). If the game supports remapping, feel free to do so from the in-game controller settings menu.

## CONNECTING ON PLAYSTATION 3

 
The PlayStation 3 can be connected via USB cable.

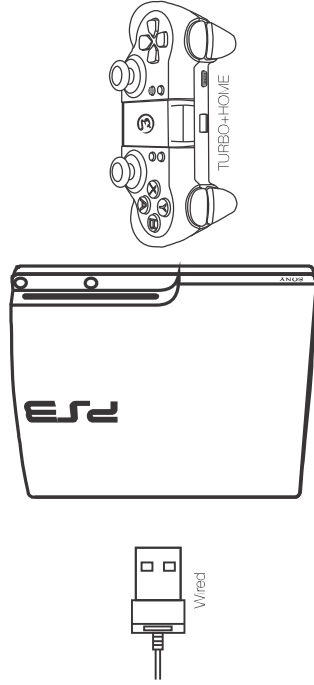

**Wired Connection:** If this is your first time to connect your T1 to your PlayStation 3, hold down "TURBO" and "HOME" button simultaneously for 2 seconds, the "PS" button and "X" button will stay on. Connect T1 to PlayStation's USB port via the cable. Your T1 will be connected easily and quickly in that way.

## AUTO FIRE FUNCTION

 **TURBO:** Auto Fire function

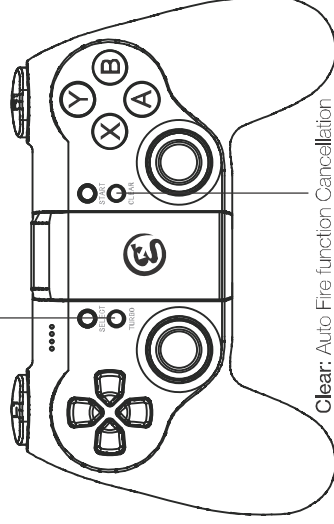

TURBO is used more in shooting games. Your fingers would easily get tired if you continuously press the same button (shooting button). With the TURBO, you can continuously shoot by holding the shooting button.

### Setting Method

 
Press one or more buttons, (excluding D-pad, joysticks, SELECT, START button), and then press the "TURBO" button, to set TURBO function.

### Clear TURBO

Press one or more buttons, and then click the "CLEAR" button to clear the TURBO.

## DOWNLOAD T1 SUPPORTED GAMES


"GameSir World" is the best app for your T1 and it's free! "GameSir World" catalogues thousands of Android games from Google Play market, which natively supports GameSir Gamepads. Every Android gamer can discover their favorite mobile game easily now. The perfect combination of GameSir hardware and GameSir software brings the ultimate gaming experience to every user. Compare to the retro gaming app "Happy Chick Emulator", it put emphasis on popular smartphone games for gamer's wide choice.

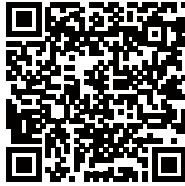

Scan the QR code or visit [www.gamesir.hk/gsw](http://www.gamesir.hk/gsw) to download GameSir World App.



 On Android Tablet, Smartphone, and Android TV, you can download "Happy Chick" to play thousands of retro games. Go to <http://www.happychick.hk> to download "Happy Chick Emulator" on the homepage. You can also scan the QR code below to download the App on Android Tablet, Smartphone,

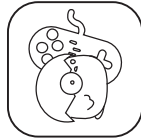

For iOS users, scan the QR code on the manuals cover to download Happy Chick Emulator. For Android users, scan the QR code on the manuals cover or visit <http://www.gamesir.hk/happychick> to download Happy Chick Emulator.

Connect game controller to Happy Chick emulator to play games freely.

- Download "Happy Chick" from user manual or <http://www.gamesir.hk/happychick> in your Smartphone.
- Open the Bluetooth in your Smartphone.
- Open "Happy Chick emulator" and click the controller icon on the right top
- Wait until two signals appear "Speed connection" and "Common connection". Choose "Speed connection".
- The game controller will get a vibration when it is connected.
- Downloading the retro games from "Happy Chick Emulator", T1 can match all the games perfectly.

## FREQUENTLY ASKED QUESTIONS

- Q: What devices can GameSir T1 work with?
- A: Android Smartphone / Android Tablet / NVIDIA Tablet / Android TV box / Windows PC Samsung Gear VR / PlayStation 3
- Q: What is the system compatibility requirements for T1?
- A: Android 4.0 or later or Windows 7.0 or later.
- Q: What is the connections of GameSir T1?
- A: USB cable, Bluetooth 4.0
- Q: What games will work with the GameSir T1 controller on my device?
- A: For Windows PC and PlayStation 3, T1 supports most of gamepad enabled games. For Android Smartphone and Tablet, you can find a list of compatible games using the following links: <http://www.gamesir.hk/---GameSir-World>.
- Q: Do I need to install Driver when I connect to GameSir T1 to Windows PC?
- A: When you connect the T1 to your windows PC, if the GameSir T1 can not recognize the driver of your computer system, the T1 will be recognized as XBOX 360 Driver. To solve the problem, we recommend that you follow those four steps here:
1. Connect your T1 to your Windows PC via USB cable provided in T1 package.
  2. Download intelligent PC drivers manager "Drive the file" to your computer, this drivers manager will check and recommend the compatible driver needed to download for your GameSir T1.
  3. Installing the driver recommended by "Drive the file" when your GameSir T1 is recognized by your computer successfully, you can connect T1 to your PC through USB cable next time.
  4. If the 3 steps above can not solve your problem, please try to install X360 gamepad software for systems below WinXP (including XP).
- Q: Why the gamepad does not vibrate?
- A: Check out whether the game support vibration, if the game support vibration, please check whether the vibration function is started in the game settings.
- Q: What should I do when the gamepad can not be turned on or frozen?
- A: When the gamepad can not be turned on or frozen, press the "Home" button to check the remaining power, if the gamepad is not out of battery, you can make the factory reset settings for the gamepad: There is a small reset hole at the back of the gamepad, pressing the reset hole using a needle for 1 second to reset the gamepad. Then turn on your gamepad again.
- Q: Does the gamepad support my games?
- A: If you do not know if the game is controller compatible, go to [www.happychick.hk](http://www.happychick.hk) to download "Happy Chick" app to find thousands of free PC games list, or go to [www.gamesir.hk](http://www.gamesir.hk) and find "GameSir World" column. The game list in GameSir world is updated frequently, your game is controller compatible if it is included in the game list.

## FCC CAUTION STATEMENT

**(1) § 15.119 Labeling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**(2) § 15.21 Changes or modification warning**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**(3) § 15.105 Information to the user.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.