 
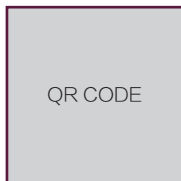 


Game Controllers

Instruction Manual

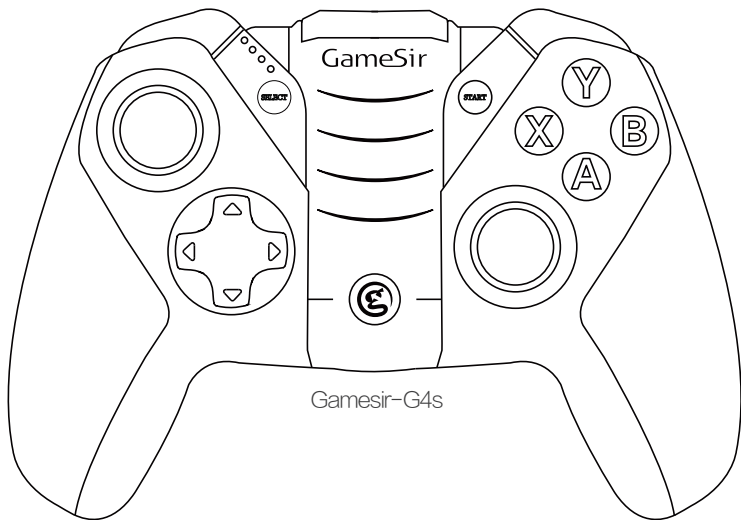

FREE GAME
Platform Download




※Product Introduction

The Gamesir-G4s has Bluetooth connection mode. it applies to the android device(above version4.0) and PC. This gamepad can identify all the devices automatically, no need driver installation, button mapping setting or root.

※Product Specifications

Product Name	Gamesir Gamepad 4th Generation - Enhanced Edition	Model No.	Gamesir-G4s
Working Platforms	Android / PC	Working Temp.	-20°C ~ 65°C
		Working Humidity	20 ~ 80%
Working Modes	android standard / GCM / Xinput / Dinput	Connection Types	Bluetooth
Charging Voltage	5V	battery capacity	800mAh
Charging Current	800mA	Working Distance	within 8m
Gift Box Size	178 X 128 X 89 mm	working current	approx. 66 mA
Product Size	155 X 102 X 65.5 mm	Net Weight	264g(gamepad+receiver+cable)

   ※Product Overview

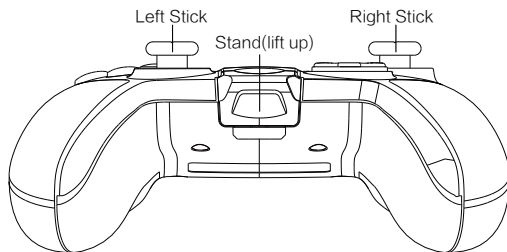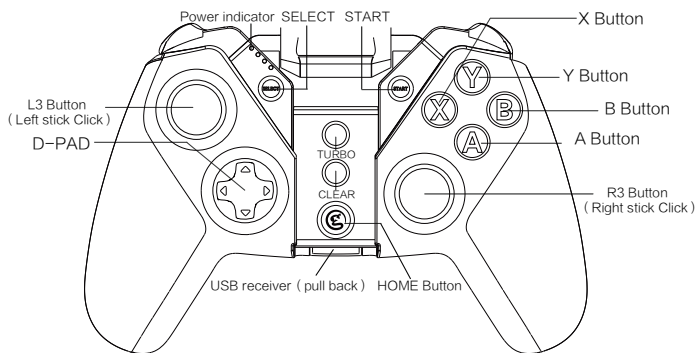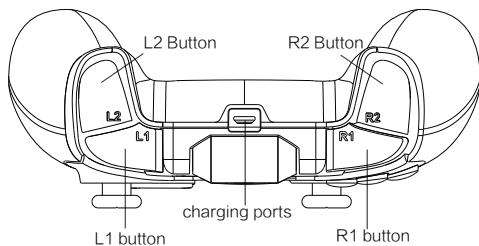

※Product Functions

Power On / Off

Power On

Press HOME button for 2 seconds to start.

Power Off

Long press HOME button for 5 seconds to power off.

Battery Indication

LED1-4 lights on: Above 75% remaining battery

LED1-3 lights on: 50%-75% remaining battery

LED1-2 lights on: 25%-50% remaining battery

Only LED1 light on: 10%-25% remaining battery

LED1 light flashes: Less than 10% remaining battery

Charging Tips

Charge under connection state

When connect the charging cable, LED1-4 flashes in turn, and all lights keep on when fully charged.

Sleeping Function

- 1.The gamepad enters sleep state after 1-minute disconnection.
- 2.The gamepad enters sleep state after 5-minute no action.

Adjust / Turn off the button lights

Pressing L2+R2+R3, and then press D-Pad Up/Down buttons to adjust the button lights brightness.

Adjust gamepad vibration strength

Pressing turbo button, then press D-Pad Up/Down buttons to adjust the vibration strength.

※ Gamepad Connection

Android Platform

Bluetooth GCM connection(Use for Happy Chick on smart phone, Android tablet and smart TV)

- a. Press HOME button for 2 seconds to start the gamepad.
- b. Open the Bluetooth on Android device.
- c. Install and launch the Happy Chick, click **gamepad icon** to enter gamepad pairing interface.
- d. Choose "Fast connect". When "HOME" keeps **blue** light on means connect successfully.

Bluetooth HID connection(Mainly use for playing android game on smart phone, Android tablet and smart TV)

- a. Open the Bluetooth on Android device.
- b. Press A+HOME button for 2 seconds to start the gamepad.
- c. HOME indicator light turn **green** and flashes.
- d. You can find "Gamesir-G4s" on the Bluetooth matching list of your Android device.
- e. When "HOME" keeps **green** light on means connect successfully.

※ Auto Reconnection

When device Bluetooth on and gamepad off

Press HOME button for 2 seconds to start gamepad, the gamepad will reconnect with device automatically.

When device Bluetooth off and gamepad on

Open the Bluetooth on device, the gamepad will reconnect with device.

When device Bluetooth off and gamepad off

Open the Bluetooth on device, press HOME button for 2 seconds to start the gamepad, the gamepad will reconnect with device automatically.

※Wired connection method

Connect the gamepad according to above instructions, the gamepad enters wireless pairing mode first, and connect with device by USB cable. (Android device should support OTG function if you want to use wired connection)

※TURBO Function Introduction

TURBO is semi-automatic, it can create one or more continuous button press.

Setting Method

Press one or more buttons (excluding D-pad, joysticks, SELECT, or START buttons), and then press " TURBO " button to set TURBO function.

Clear TURBO

press the " CLEAR " button to clear the TURBO.

Function

TURBO is used more in shooting games. Your fingers would easily get tired if you continuously press the same button (shooting button). With the TURBO, you can continuous shoot by holding the shooting button.

※Possible Problems

Why the gamepad can not be identified on computer?

1. Make sure your computer USB port is working.
2. USB voltage is not stable because of short power supply of computer.
3. Try another USB port.
4. Need to install X360 gamepad software for systems below WinXP (including XP).

Why the gamepad does not work in games?

1. The game does not support gamepad.
2. Set the gamepad mode in the game before using.

Why the gamepad does not vibrate?

1. The game does not support vibration
2. Vibration function is not open in game setting.

Other

1. When the gamepad can not be turned on, it may be because of no battery, please use USB cable to charge the gamepad.
2. When the gamepad was crashed or disconnected, please keep the device at effective distance, or reconnect.
3. Factory settings reset: There is a small hole at the back of gamepad, press the hole by using a needle to reset the factory settings.

※Attention

1. Avoid strong vibration, do not disassemble, refit or repair on your own.
2. Do not keep in humid, high temperature or soot place.
3. Avoid water or other liquid in gamepad, it may affect the performance of gamepad.
4. Keep away from fire, the built-in battery has danger of explosion.
5. Charging voltage is USB 3.7-5.5V DC supply (normal Android smart phone charging power can be used)
6. Children should be under adult's supervision to use this product.
7. Please contact the distributor or our after-sale service staff if you have any quality problem or suggestions.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.