

Notes

1. Devices safety operations

- Please do not disassemble the device. Otherwise it may cause damage for the device.
- Please do not use this device in the lightning weather. Otherwise it may bring you some harms.
- Please do not use the device in heavy dust or smoke areas. Otherwise it may cause damage or malfunction.
- Please do not beat this device and its accessories. Otherwise it may cause serious damage or malfunction.
- Please do not clean this device with Chemical solvent or detergents. Otherwise it may cause damages.
- Please do not let this device close to strong magnetic material. Otherwise it may cause serious damage or malfunction.
- Please do not place heavy things on the device. Otherwise it may cause damage or malfunction.
- Please use this device in excessive moisture environment. Otherwise it may cause damage to the circuit.

2. Battery safety operations

- Please do not place the battery in fire or heat the battery. Otherwise the battery may explode.
- If there is a high temperature heating phenomenon on the battery, please stop using it immediately. Otherwise it may bring you damages.

Made in China



Beijing Infomedia Electronic Technology Co., Ltd.

FL4, B Building, Print Academy, No 2, Cuiwei Road, Haidian District, Beijing, China

 
Customer Service Tel: 4006538168

Lotoo website: www.lotoo.cn




Assembly of arm belt for sport

1. As showing below, let the arm belt's large area of Velcro side outwards, penetrating from left side, piercing from the right side;

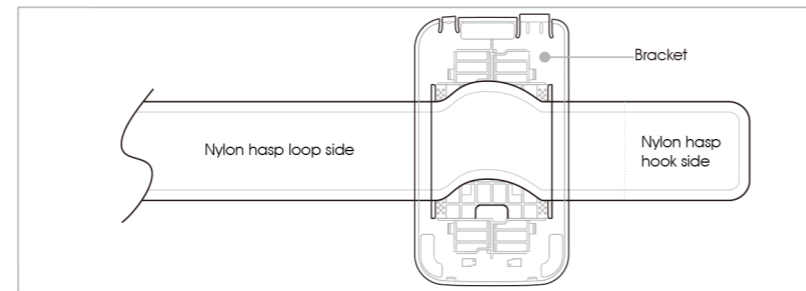

 
2. As showing below, pull out the arm belt (from the right side) to the nylon hasp loop side and show the bracket's right side. Then arrange the arm belt below the bracket;

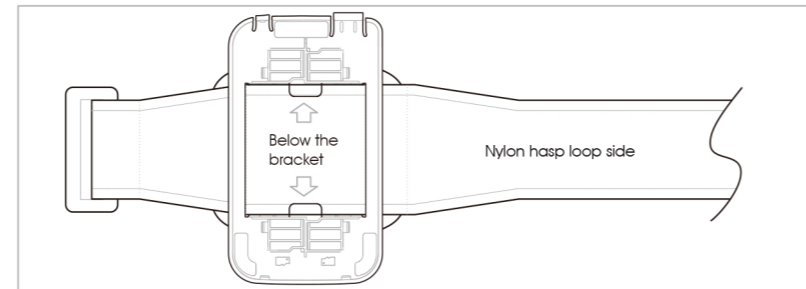

3. Please insert obliquely this device's bottom into the end of the bracket. And snap two card hook below the bracket into the groove of device's bottom. Then snap the upper end of this device into card hook.

Firmware update

 1. To update, please make sure that the battery is higher than 15%. If not, please charge it first
2. Please visit the Lotoo official website www.lotoo.cn, enter the download page. Download the latest firmware, and copy the "PAW5000APP.COE" file inside the compressed package to the root of TF card;
3. Enter the settings, click **【Menu>System settings>System update】**. Then wait for the completion of update. The correct update will perform the following process:

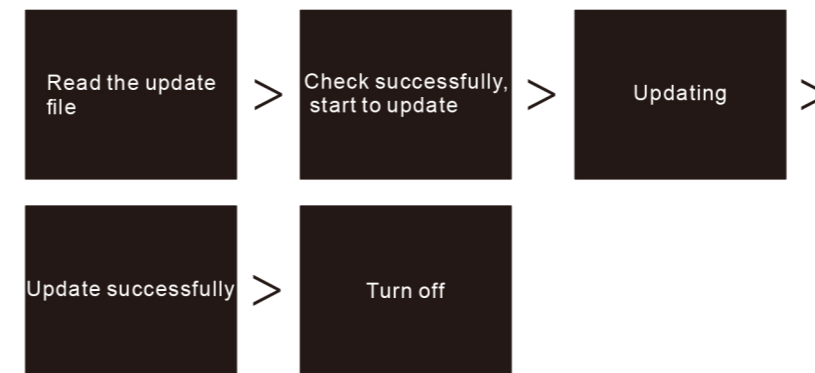

4. After the correct update, the machine will turn off automatically. turn it on again, you can check the latest software version number at **【Menu>System settings >System information】**.



PAW 5000
Hi-Fi Music Player



Quick guide


Package content

  The package includes following accessories (The quantity for each accessory is one). Please carefully verify when purchasing. If anything absent, please contact with the device supplier timely.

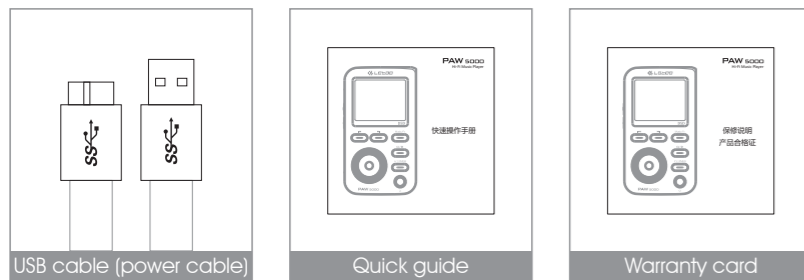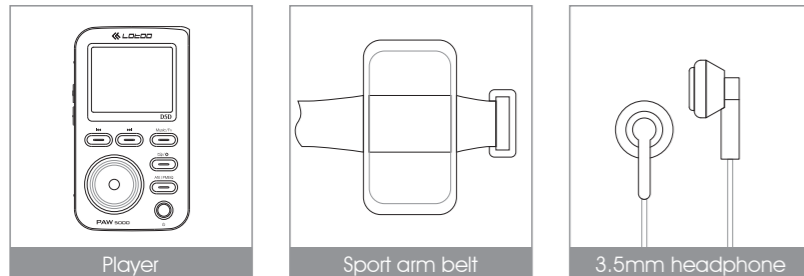

Notes : lotoo official website supply electronic version of the User manual book and fast setup. Please visit www.lotoo.cn and download.

 Key functions

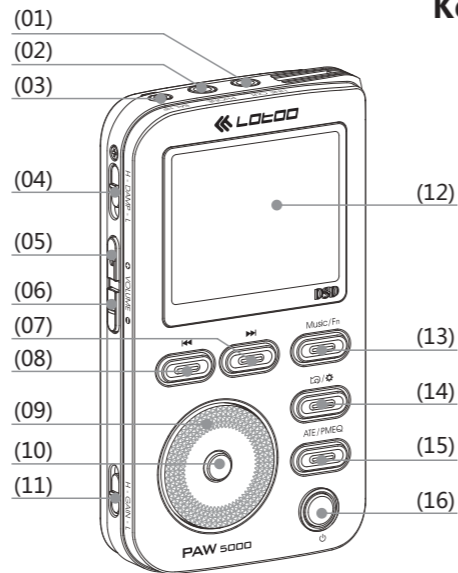


(01) Line output /SPDIF Optical fiber output	(09) Jogdial
(02) Headphone output	(10) Play/ OK
(03) Balance type headphone output(2.5mm)	(11) Gain (high/low)
(04) damp (high/low)	(12) Liquid crystal display
(05) Volume up	(13) Music/Fn (long press)
(06) Volume down	(14) Return/Setup (Long press)
(07) Next/Fast forward	(15) ATE/PMEQ music effects
(08) Previous/Fast reverse	(16) Power/lock Screen

Install the TF card

1. Inserting the TF card (As shown in figure1)

 Insert the TF card into the slot according to the shell logo direction, push to hear "beep" sound and release. Then the TF Card is installed.

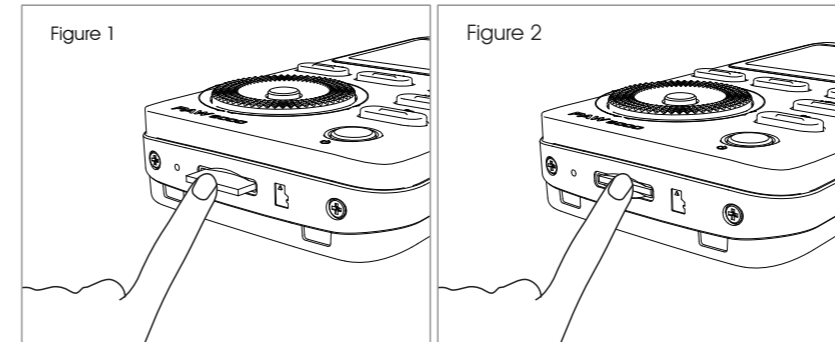

2. Pull out the TF card (As shown in figure 2)

Gently push the TF card bottom to hear "Di" sound, then slowly let go. You can see TF Card pops up about 3mm. then you can directly take the card.

Instruction:

- 1) The device will turn on normally when the TF card is inserted. The device if self hasn't memory capacity.
- 2) Theoretically, the device can support TF card with 2T capacity maximum.
- 3) The device can support the TF card with FAT32 format. So we advise: When inserting the TF card, please format it first before use.
- 4) When inserting or pulling out the TF card, please be gentle, otherwise it may cause damage to the TF card.
- 5) You can place four TF cards into the moving arm belt's bracket . Please follow the direction of identification.

Power

1. Power on

When powered off, long press "POWER" to turn on the device.

When powered on, short press "POWER" to activate or turn off the screen. When the screen is turned off, you can only operate the "POWER", "Volume+", and "Volume-" button.

Advice: when you play music long time, please turn off the screen to improve this player's endurance performance.

2. Power off

1) The player is turned on and the screen is lighted, long press "POWER". And it will turn off.

 
2) The player is turned on and the screen is out, firstly press "POWER" to activate the screen. Then long press "POWER", you can turn off the device.

3. Recharge

This device will recharge automatically when connect to 220V power supply with the power adapter. When the player is off, long press <power > to turn on the device.

· Playing while charging : The externally connected power adapter can supply power to the device while charging the Lithium battery. Therefore, you can choose to play music when charging the Lithium battery, which has no influence on the charging performance.

Notes: you need buy the power adapter separately.

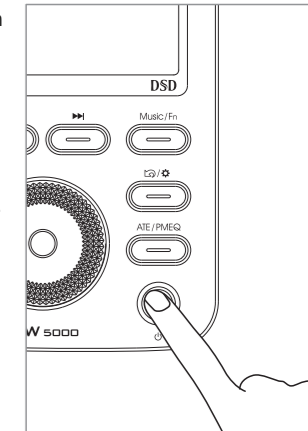

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or

modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment.

(Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.