

## SPEAKER

- 1 Speaker
- 2 Mode  
Play/Pause  
VOL-/PREV  
VOL+/NEXT
- 3 DC 5V Jack
- 4 AUX in Jack  
/Antenna
- 5 USB Slot
- 6 Micro SD Slot
- 7 ON / OFF
- 8 Microphone



MODEL:SC-1445BT

# Bluetooth® Speaker

With USB / Micro SD



Please keep this manual in a safe place for future reference.

## Features

- Bluetooth® connectivity
- FM Radio
- USB/Micro SD (TF) slot Plays MP3 Files
- AUX IN to connect to External Audio Players (ipod®/iphone®/ipad®/smartphones etc.)
- Built in rechargeable battery
- Built in Mic for hands free talking
- Charging & Aux cable included

## Specifications

- Bluetooth: 2.1+ EDR, A2DP. Range up to 30 Feet
- Handsfree Mic: Range : 30cm
- FM Frequency Response: 150-18KHz
- Built in rechargeable battery: 300mAh. Charging time: 1hour, Play time: up to 2 hours at max 75% Volume
- Speaker Driver: 40mm, 3w, 4Ω. Signal Noise Ratio: ≥ 80dB
- USB/Micro SD – support up 32GB
- Charging Voltage: DC 5V

## Power supply for Unit

- Connect the supplied cable to DC 5v jack and other end to USB power outlet (5V adaptor not included) to charge the built in battery.
- Please make sure battery is fully charged. For best results (or to charge faster) don't use the unit while charging. Charging time : 1 Hour, Play time: up to 2 hours at 75% volume.

## Operating Bluetooth®

- To switch between signals, "PRESS IN" and hold position "▶||" wheel and hold. It will switch between BT/ USB / TF /FM / AUX, once Bluetooth® is selected, you will hear voice prompt "Bluetooth device is ready to pair"
- Turn "On" your Bluetooth® on smartphone and select "SC-1445BT" to connect. A successful connection will hear voice prompt; "Bluetooth® device is connected successfully"
- Sound quality will depend on quality of your media file or distance of Smartphone from speaker (Distance should NOT be more than 30ft) or there should be no obstruction in Bluetooth signal.
- To control volume, turn "▶||" wheel and hold towards position "◀◀/V-" (volume down) or "▶▶/V+" (volume up). Please turn and hold the "▶||" wheel longer to adjust. Or can also control from your Smartphone.
- Turn "▶||" wheel once to the (Left) "◀◀/V-" (volume down) for previous track or turn it (Right) "▶▶/V+" and release to listen to the next track. To pause a track "PRESS IN" "▶||" wheel, or can also control from your Smartphone

## Operating USB / Micro SD (TF)

- Plug in your USB Disk and/or Micro SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY.
- "PRESS IN" and hold at position "▶||" to switch between Bluetooth® / USB / TF /FM / AUX. On selecting USB or Micro SD (TF) will hear voice prompt "MUSIC" and media should start playing. Please ensure that your speaker is fully charged & that your files are MP3 format, or correct source has been selected.
- To control volume turn "▶||" wheel and hold towards position "◀◀/V-" (volume down) or "▶▶/V+" (volume up). Please turn and hold the "▶||" wheel longer to adjust. The sound output quality off the speakers will depend on the quality of the MP3 files.
- Turn wheel to position "◀◀/V-" and release for previous track or turn wheel to position "▶▶/V+" and release to listen to the next track. To pause a track, "PRESS IN" at position "▶||". "PRESS IN" again to continue playing track.
- Please remember to power OFF the Speaker before removing the USB Disk or SD Card.

## Playing FM Radio

- "PRESS IN" and hold wheel at position "▶||" to select FM. You will hear voice prompt "FM TUNER"
- To auto scan available FM frequencies – "PRESS IN" once "▶||", and it will start to scan FM stations and auto preset frequencies with clear signal.
- To control volume turn "▶||" wheel and hold towards position "◀◀/V-" (volume down) or "▶▶/V+" (volume up). Please turn and hold the "▶||" wheel longer to adjust.
- To select stored frequency turn wheel to position "◀◀/V-" and release or turn wheel to position "▶▶/V+" and release.
- For better FM reception use supplied AUX cable, connect to Aux jack on unit. Cable works as external antenna.

## Using Aux

- Plug in external device to Aux Input Jack, using supplied cable, to listen to audio through Speaker.
- "PRESS IN" and hold at position "▶||" will switch to AUX, when AUX is selected you will hear voice prompt "LINE IN"
- To control volume turn "▶||" wheel and hold towards position "◀◀/V-" (volume down) or "▶▶/V+" (volume up). Please turn and hold the "▶||" wheel longer to adjust.

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc.

This product is not Designed, Manufactured or Distributed by Apple Computer Inc.

Bluetooth® is a trademark or registered trademark of Bluetooth SIG Inc.

All other Trademarks & Trade Names belong to their respective owners.

Please keep this manual in a safe place for future reference

## Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.