


BLUETOOTH SPEAKER

LI-S20152BT

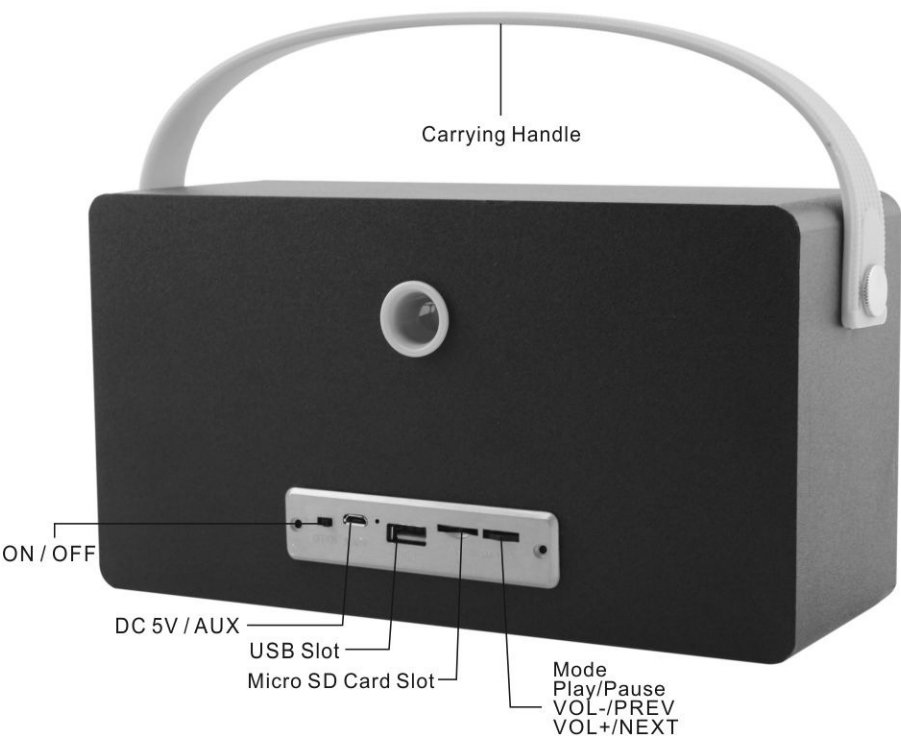

Please keep this manual in a safe place for future reference.

Features

- Bluetooth® connectivity
- FM Radio
- USB/Micro SD (TF) slot Plays MP3 Files stored in your SD Card or USB Disk Drive
- AUX IN to connect to External Audio Players (ipod®/iphone®/ipad®/smartphones etc.)
- Built in rechargeable battery
- Charge & Aux - 2 in 1 cable included

Power supply for Unit

- Connect the supplied cable to DC 5v jack and other end to USB power outlet (5V adaptor not included) to charge the built in battery (Built-In battery included).
- Please make sure battery is fully charged. For best results (or to charge faster) don't use the unit while charging.

Bluetooth® Operation

- Switch on the unit, long press button at position "▶||" to switch between BLUETOOTH / USB / TF / FM / AUX, once Bluetooth is selected, will hear message "Bluetooth Device is ready to Pair"
- On your Bluetooth enabled smartphone, scan and select "LI-S20152BT" to connect, once connected, will hear message "Bluetooth Device connected successfully"
- Sound quality will depend on quality of your media file or distance of smartphone from speaker (Distance should NOT be more than 30Ft) or There should be no object blocking the Bluetooth signal
- To control volume turn button towards position "◀◀" (volume down) or "▶▶" (volume up). Please turn and hold the button longer to adjust. Or volume can also be controlled from connected smartphone.

Operating USB / Micro SD (TF)

- Plug in your USB Disk and/or Micro SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY.
- Long press button at position "▶||" to switch between BLUETOOTH / USB / TF / FM / AUX. On selecting USB or Micro SD (TF) will hear message "MUSIC" and media should start playing. Please ensure that your speaker is fully charged & that your files are MP3 format, or correct source has been selected.
- To control volume turn button towards position "◀◀" (volume down) or "▶▶" (volume up). Please turn and hold the button longer to adjust. The sound output quality off the speakers will depend on the quality of the MP3 files.
- Turn button to position "◀◀" and release for previous track or turn button to position "▶▶" and release to listen to the next track. To pause a track, short press button at position "▶||".
- Please remember to turn off the power of the Speaker before removing the USB Disk or SD Card.

Playing FM Radio

- Long press button at position "▶||" button to select FM, On selecting FM will hear message "FM TUNER" and your pre stored frequency will start playing.
- To control volume turn button towards position "◀◀" (volume down) or "▶▶" (volume up). Please turn and hold the button longer to adjust.
- To auto scan frequencies short press button at position "▶||", to select stored frequency turn button to position "◀◀" and release or turn button to position "▶▶" and release.
- For better reception of FM use supplied cable, connect to unit. Cable works as external antenna.
- Do not charge unit while playing FM.

Using Aux

1. Plug in external device to Aux jack using supplied cable to listen audio through unit.
2. Long press button at position "▶||" button to select AUX, On selecting AUX will hear message "LINE IN"
3. To control volume turn button towards position "◀◀" (volume down) or "▶▶" (volume up). Please turn and hold the button longer to adjust.
4. Do not charge unit while using AUX

iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc. Bluetooth® is a trademark or registered trademark of Bluetooth SIG Inc. All other Trademarks & Trade Names belong to their respective owners. Certain Models of SanDisk® USB drives are not compatible to this unit. Please keep this manual in a safe place for future reference.

Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please keep this manual in a safe place for future reference.