

## SPEAKER



Copyright © Lakshmi International, Inc., 2016-2017

All Rights Reserved

This publication is protected by copyright and all its rights reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Lakshmi International, Inc.

The information in this publication has been carefully checked and is believed to be accurate. However Lakshmi International Inc., assumes no responsibility for any inaccuracies, errors, or omissions that may be contained in this document.

In the interest of continued product development, Lakshmi International, Inc. reserves the right to make improvements in its documentation and the products it describes at any time, without notice or obligation.

# LAX-MAX<sup>®</sup>

## NEW GENERATION

## Bluetooth speaker

MODEL : LI-S20119BT



Congratulations on purchasing the Lax-Max Bazooka Wireless Speaker  
Please read this Instruction manual prior to using this unit.

## Features

- Wireless, FM, AUX, USB, SD functions
- LED Flashing Light
- Charging & Aux cable included
- LED Display
- Built in rechargeable Battery
- Shoulder Strap
- Karaoke Jack (Mic Not Included)

### Power supply for Unit

- Connect the supplied cable to DC jack and other end to USB power outlet (5V adaptor not included) to charge the built in battery.
- Please make sure battery is fully charged. For best results (or to charge faster) don't use the unit while charging.

### Wireless Mode

- Press mode "M" to select Wireless connection.
- Scan from your smartphone for "LI-S20119BT" and pair it. After pairing is done speaker is ready for use with your device.
- To control volume long press "◀◀/V+" (volume up) or "▶▶/V-" (volume down). The sound output quality off the speaker will depend on the quality of the MP3 files and distance of speaker from device.
- When using Bluetooth enabled device short press button "◀◀/V+" for previous track or "▶▶/V-" for next track on speaker to change track on your device.
- To pause a track or release pause, press "|||" on speaker.

### Playing MP3 Files through the Speaker using the SD Card or the USB Stick

- Plug in your USB Disk and/or SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY.
- Turn on the power switch; the LED display will come on. Press "M" mode to select USB or SD. The files from your media should start playing, if it does not play, ensure that your speaker is fully charged & that your files are MP3 format, or that the mode button is on the correct source.
- Adjust volume to the desired level by long pressing "◀◀/V-" for Volume Down or "▶▶/V+" for Volume up. The sound output quality of the speakers will depend on the quality of the MP3 files.
- Short Press the "◀◀/V-" to listen to the previous track or "▶▶/V+" to skip to the next track.
- To pause a track or release pause, press "|||" on speaker

### Using Aux

- Plug in external device to Aux jack using supplied cable to listen audio through unit.
- Press the "M" mode button to select Aux (Line in)
- To control volume long press "◀◀/V-" (volume up) or "▶▶/V+" (volume down). Volume can also be controlled through external device.
- Do not charge unit while using AUX function

### Listening to the FM Radio from the Speaker

- Press "M" mode button to select FM. Display will show frequency information.
- To control volume long press "◀◀/V-" (volume up) or "▶▶/V+" (volume down).
- Short Press "|||" button to auto scan and the unit will store the frequencies with strong signal. Use "◀◀/V-" / "▶▶/V+" buttons to switch between preset stations.

### Using Karaoke

- Plug in microphone (microphone not included) to microphone jack, to sing-along.
  - Mic Volume can be adjusted to preset level through "MIC. VOL." Button.
- iPod®, iPhone® & iPad®, are registered Trademarks of Apple Computer Inc. This product is not Designed, Manufactured or Distributed by Apple Computer Inc.
- All other Trademarks & Trade Names belong to their respective owners.
- Certain Models of SanDisk® USB drives are not compatible to this unit.

### Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.