


SPEAKER



LAX-MAX®
NEW GENERATION

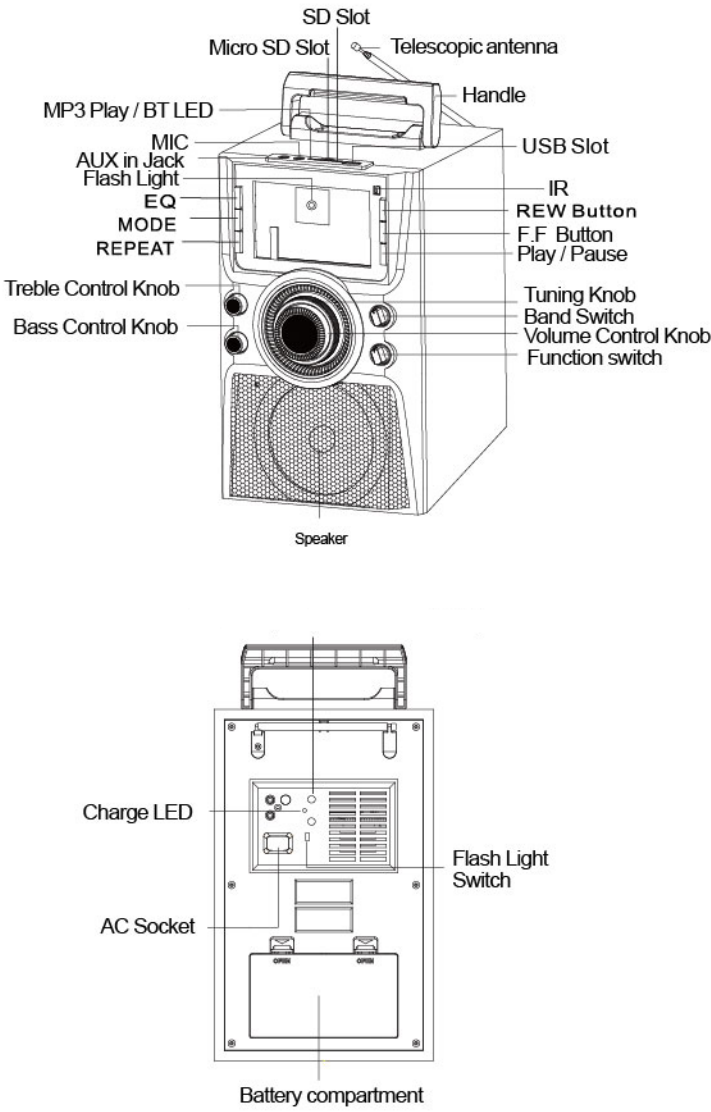

Bluetooth® SPEAKER

Built in Micro SD/USB/SD

MODEL : LI-S460BT



Carefully read operate manual to use this unit properly,
and keep this manual handy for future reference.

Features

- Portable multi-function Bluetooth speaker
- AM/FM/SW1/SW2 4Band Radio
- 3 Way Power – AC / Built in Rechargeable Battery / “D” size battery
- Plays MP3 Files stored in your SD Card, Micro SD card or USB Disk Drive*
- Max Capacity 16 GB
- Infrared Remote Control for Bluetooth , USB/SD & Micro SD
- Microphone Jack – Mic not included
- AUX IN to connect to External Audio Players (ipods®/iphones®/ipads®/smartphones® etc.)

Power supply for Unit

- Your unit comes with a built in rechargeable battery.To charge this, plug the supplied cord to your unit then to an AC wall outlet . It is suggested not to use your unit while charging as it will take longer to fully charge.
- “D” size 6 batteries can be used optionally if no AC power source is available and built in rechargeable battery is discharged.

Playing MP3 Files through the Speaker using the SD Card Micro sd card or the USB Stick

- The control panel is located in front top of the Speaker Unit.
1. Plug in your USB Disk and/Micro SD or SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY.
 2. Switch the function button to “MP3/BT”, the LED display will come on. Press the “MODE” button on the Remote or from unit to switch between USB, SD & BT or USB, MICRO SD & BT. The files from your media should start playing, If it does not play, press the PLAY/PAUSE. Please ensure that your speaker is fully charged & that your files are MP3 format, or that the Mode button is on the correct source.
 3. Volume can be controlled through remote or from unit. On unit turn Volume knob to control volume and on remote by long pressing ▴ for Volume Down or ▾ for Volume up. The Sound Output Quality off the speakers will depend on the quality of the MP3 files.
 4. Short Press the ◀ to listen to the previous track or ▶ to skip to the next track on Unit control panel or Remote control.
 5. To PLAY/PAUSE a track, press the ▶|| button from the Control Panel or the Remote Control.
 6. To listen to specific track, press track number from remote than press ▶|| button to play that track.
 7. Press “EQ” button on control panel or remote control to adjust sound effect to preset level or use EQ button on control panel for adjusting sound effect to desired levels.
 8. Press “REPEAT” on control panel to repeat, or press ♻ on remote control to repeat.
 9. Please remember to turn off the power of the Speaker before removing the USB Disk or SD Card –
 10. When using the features BLUETOOTH, Micro SD, SD card, USB drive or Radio make sure AUX cable is not connected.

Bluetooth

- Switch the function knob to your MP3 /BT level
- After you adjust the function knob on MP3/BT level you will see the blue color light top side of unit then you will be able to scan for “Bluetooth” from your Bluetooth enabled device and pair with your Radio speaker.
- Volume can be controlled through the remote, your connected external device or from unit. On unit turn Volume knob to control volume and on remote by long pressing ▴ for Volume Down or ▾ for Volume up. The Sound Output Quality off the speakers will depend on the quality of the MP3 files.
- To control the volume from unit volume control knob & remote control The sound quality of the speaker will depend on the MP3 files stored in your external device.
- To change tracks, short press “◀”/“▶” for previous track and short press “▶|”/“|▶” for next track or you also can change from remote control
- To pause or release pause, press the button at position “PLAY/ PAUSE” or you can play/pause from remote control by pressing button “▶||”
- Please remember to turn OFF the power of the speaker before removing the USB Drive or SD Card.

Playing multi-band Radio

1. Switch the function knob to Radio, select the band by switching the band knob AM/FM /SW1/SW2 and use tuning knob to listen to desired channel.
2. Volume can be adjusted from control panel only.
3. Use telescopic antenna at back side of unit for better reception.
4. When using the features BLUETOOTH, Micro SD, SD card, USB drive or Radio make sure AUX cable is not connected.

Using Aux

1. Plug in 3.5mm cable from external device to Aux jack to listen audio through speaker.
2. Volume can be controlled through unit control panel & from your external connected Device only
3. To PLAY/PAUSE a track, press the ▶|| button from your external connected device only
4. Volume can be controlled from your connected device or from unit volume knob. From external connected device can turn volume maximum only to level where maximum level set on unit. The Sound Output Quality off the speakers will depend on the quality of the MP3 files.

Using Microphone

1. Switch the function knob to “ok”
2. Plug your microphone in to the microphone jacks on the top & use the unit as loudspeaker
3. Use the volume knob to control the volume level

Warnings

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.