





Features & Instructions

Charging and using the headset

The headset contains a rechargeable Li-ion battery. Prior to using the headset for the first time, it is strongly recommend to fully charge the battery for 3 hours.

To charge:

- 1) Connect the USB cable to your PS3®
- 2) Connect the mini USB to the headset's charging socket
- 3) LED lights Green whilst charging, green put out when charged

Note: Do not try to pair the headset to the console, when the headset is charging. If it is charging it will not pair with the PS3®

Operating your headset:

- 1) To power on your headset, press and hold the power button for 1 second until you see a BLUE & Green LED flash
- 2) To fit your headset comfortably, lift the earhook and loop it around your ear. Position the speaker in your ear for optimal audio performace.
- 3) Adjust the volume using the + / buttons
- 4) To mute, press the power button briefly (less than 1 second), and repeat the process to un-mute
- 5) To power off your headset, press and hold the power button for 3 seconds, the LED will turn Green and then dissapear, your device is now

Note: to reconnect your headset to your PS3® at any time, just press the power button

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installation. If this equipment generates uses and can radiate radio frequency energy and, if not installation. If this equipment

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.