



**T2702**  
**7" Tablet**



**Instruction Manual**


## **A. Precautions**

1. Please read the manual before use the device.
2. Do not put the device at any high temperature, high humidity or dusty place. Do not use this device where electronics is forbidden, such as on the airplane. Do not use this device while walking and driving to avoid traffic accident.
3. Do not drop or crash the device. Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene. Never use sharp object to click the screen to avoid damage. Any unauthorized dismantling of the device will make the warranty null and void.
4. Use the supplied AC adapter and USB cable only. When charging, the device may become warm (not too hot), this is normal. If you do not use this set for a long time, please charge and release it once a month to avoid deep discharge. The damage caused by battery over-consuming is not included in the warranty.
5. Do not disconnect the device while formatting, downloading or uploading, because it may make the error.
6. Our company won't bear the duty for the loss of the memory erasing on account of the damage, repair or some other reason. Please backup the important data in time.
7. Users are solely responsible for the Apps they download. Our company is not liable for any shape or form should the tablet be damaged for download.
8. Virus can damage this device. So please use proper computer antivirus and keep it updated.
9. Please choose the suitable volume. If you feel uncomfortable, please turn down the volume or stop playback.
10. The spec and design are subject to change without notice.

## B. Contents

1. Device
2. AC adapter
3. USB cable
4. Instruction Manual


## C. Controls/Connectors/Indicators

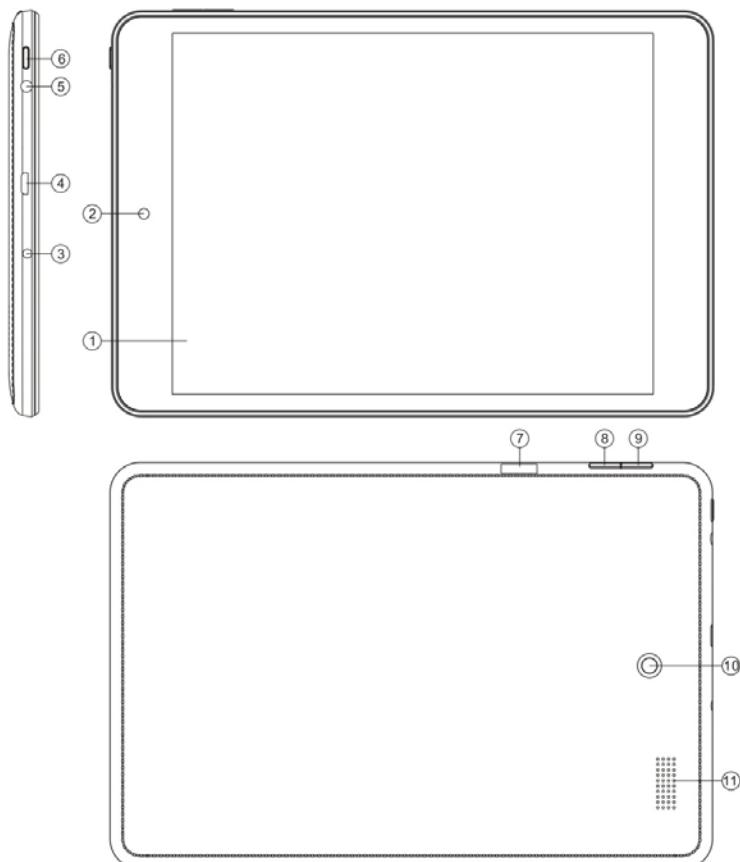

1. **Touch screen** - Click and drag here for operation.
2. **Front camera** - Take photo or video from the face of screen
3. **MIC**: Receive voice.
4.  **Micro USB jack** – Input the USB cable to supply power and charge the device.
5.  **Earphone jack** - Input the earphone cable.
6. **Power button** - Press and hold the button over 2 seconds to turn on the device with the screen on, Android OS will activate automatically and enter the home page.  
Press the button once to go to the sleep mode, and the screen is standby under low battery consumption.  
Press the button once again to wake up the screen.  
Press and hold the button again, the screen will display “shut down”. Select “Yes” to turn off the unit completely.  
**Note**: If shut down the device illegally, when you restart, because device need scan and repair the disk, the screen will stay with a progress bar for long time.
7. **Micro SD/TF card slot** - Input the micro SD/TF card and read.
8. **Volume- button** - Turn down the volume.
9. **Volume+ button** - Turn up the volume.
10. **Rear camera** - Take photo or video from the back of screen.
11. **Speaker** - Output sounds.
12. **Reset hole** – reset all settings to factory default.

## D. Hookups

### 1. Power supply and charge

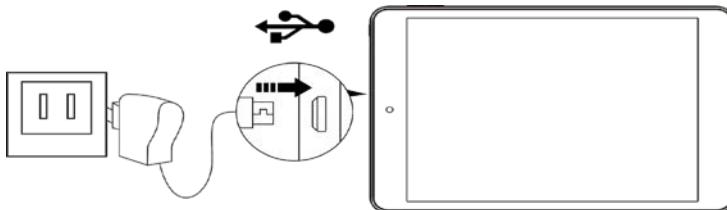





Input the USB plug of supplied cable into the socket of supplied AC adapter, input the micro-USB plug into the socket of micro-USB jack of tablet, and input the AC plug into the AC receptacle. The device will be charged automatically till the battery power is full.

**Note:** For first use need charge for 10 hours. When the battery power is too low, the device will turn off automatically. Please charge if low battery icon appears. **Battery Saving:** Go to the sleep mode, shut down some Apps, turn off WLAN, shut off Apps sync, set a short time for display backlight, and reduce brightness of display.


### 2. Transfer data

Connect the device with the supplied USB cable to PC or USB disc, or insert micro SD card, or search and connect to WiFi network, so you can transfer data between them.

**Note:** Assure no accessing data before disconnect.

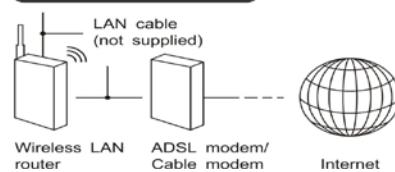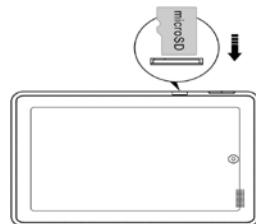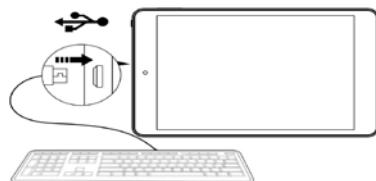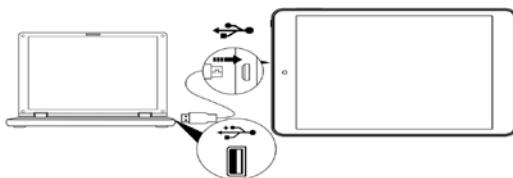


## E. Touch Panel

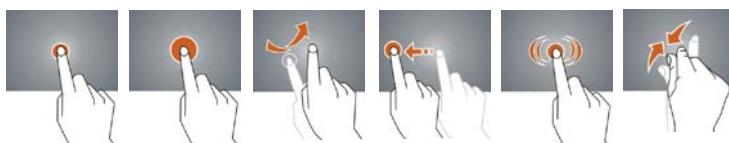

1. **Click** -- Select or activate
2. **Tap and hold** – Open an option list
3. **Slide** -- Fast scrolling browsing page or display screen
4. **Drag** – Relocate the position
5. **Double Click** – Enlarge or shrink the display size
6. **Shut** – Enlarge or to shrink the display scale.

## F. Home Screen

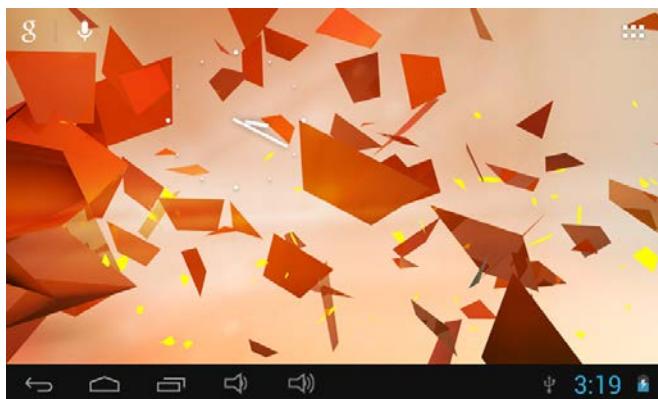

1. Google search box
2. Voice search touch (assure WiFi on )
3. Apps page access
4. Return touch
5. Home touch
6. Last Apps touch
7. Volume down/up

**Slide left/ right to switch to any of 5 screens.**

1. **Change wallpaper:** Press and hold the screen to pop-up the wallpaper selection. Select preloaded wallpaper or picture and click “Setup” to confirm.
2. **Add shortcut:** Tag the App icon in the application page. Locate it to the designated position or in another screen.
3. **Add widget:** Slide to the Widget page. Slide left/right to select the widget, tag and locate it in home screen.  
**Note:** Some widgets linked to internet service may occur data cost. Some widgets may only be used in certain countries or under assigned providers.
4. **Relocate shortcut:** Tag the App icon and move it to the designated position.
5. **Cancel shortcut:** Tag the App icon and drag it into the recycle bin on upper screen.
6. **Notification screen:**

Icon	Meaning	Showing
	WiFi signal	WiFi connection and how strong of signal
	Battery power	Power balance of battery and if charging or not
	USB Connect	If USB port is connected
	SD Card	If SD card is inserted
	Time	Current time


## G. Setup

Press the setup icon to enter the setting page.


1. **WiFi:** Click “Wireless & Networks”, and then Click “ON”/“OFF” to open/close WiFi. When WiFi is on, the device will search and show the networks nearby, for you to select and join.




2. **Sound:** Click “Device”, then press “Sound”. Tick or not “Touch sounds” and “Screen lock sound” to turn on or off the sound.

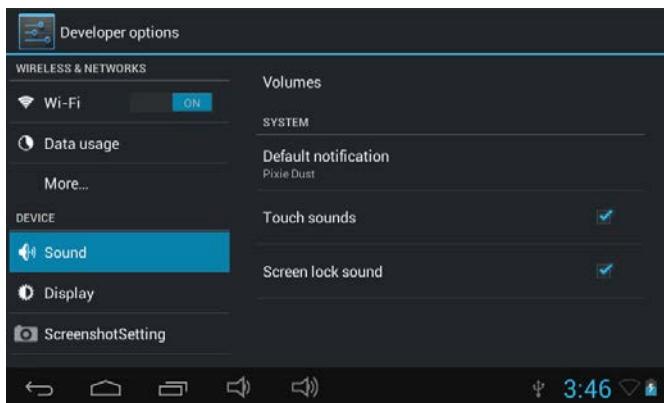


3. **Display:** Click “Device”, then press “Display” to show Brightness, Wallpaper, Auto-rotate screen, Sleep, and Font size. Select one and set the parameters.

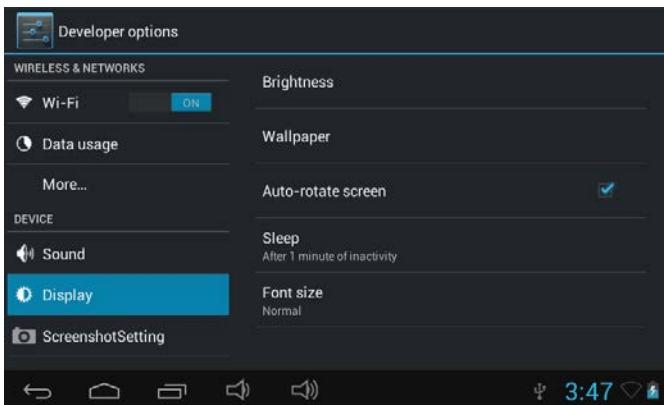


4. **Apps:** Click “Apps”, then press “Manage application” to show the program list. Select to install or uninstall an application.

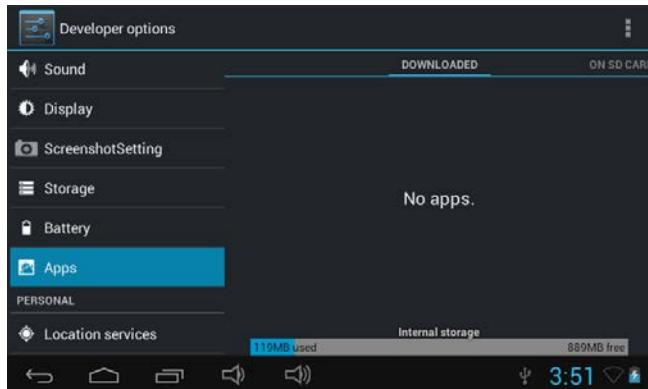


5. **Language & input:** Click “Language & Input” to show the list and click the language you desire for OSD. Click the language you desire for “Keyboard & Input Method”. You can switch the input method.

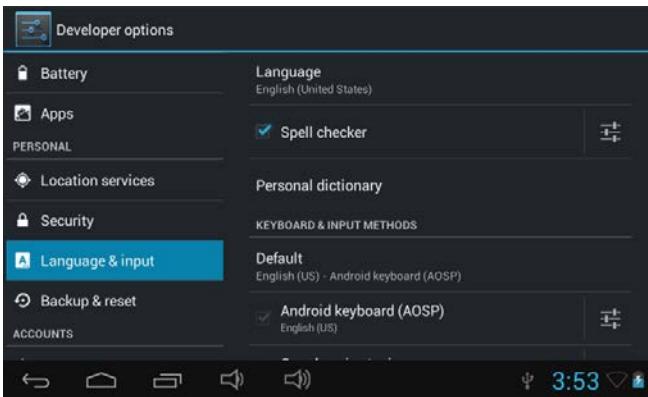

6. **Backup & reset:** Click “Backup & reset”, tick the backup options, and select if reset to factory default.

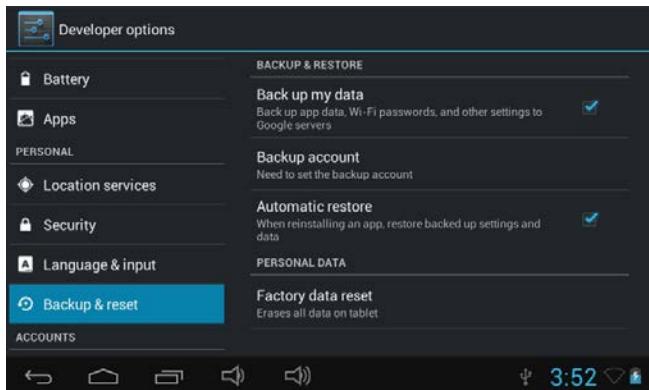

7. **Date & time**: Click Date & Time to show the synchronized date and time. If incorrect, set your time zone and it will display correct date and time.

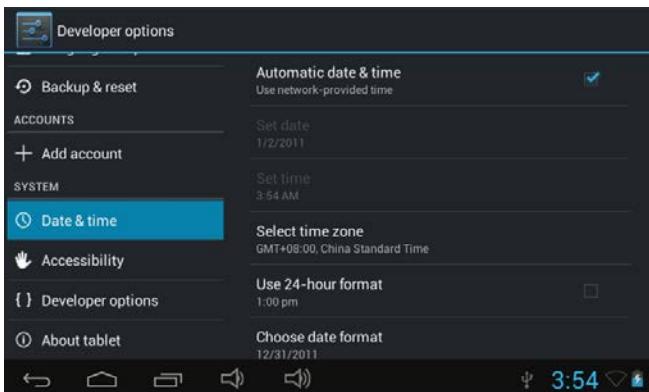

## H. Apps

1. **Internet Browsing:** Click “Browser” in the application page to open the webpage. Input the website address and select “confirm”.



- ① Open new window
- ② Close
- ③ Previous/Next webpage
- ④ Refresh/Close
- ⑤ Message of webpage
- ⑥ Input field
- ⑦ Bookmark
- ⑧ Search
- ⑨ Bookmark/history
- ⑩ List of browser

2. **Email**

Set email account: Click “Email” on in the application page and click Email. Input your email address and password, select next step for personal account or Manual Setting for commercial account. Input your server respectively for sending and receiving. Repeat the process to set more email accounts. You can write, send and receive emails with attachments using different accounts, and can check email messages.

### **3. Audio Player**

Click “Play Music” in application page. Music is categorized by artists, album, and playlist inside “Songs”. Click the song name for playback.

### **4. Video player**

Click “Video” in the application page. All video files will be displayed and click the video name for playback.

### **5. Camera**

Click  to open the camera and click  to take picture.

Click  to open the camcorder, click  to start recording video, and click again to stop.

In the camera/camcorder mode, click  for set up and click to select option.

### **6. File Explorer**

Click “Explorer” in the application page to check files in the internal memory, SD card, or USB device connected with OTG cable (not supplied).

To operate files, select the file or file path, press file or folder over 2 seconds, select Multi, file/folder, Editor, and perform function in the list.

### **7. Management of application files**

In Android OS all files are in APK format. Download APK file from PC, APK market or the 3<sup>rd</sup> party, save it in TF card or in the device through OTG cable (not supplied), click the APK file under “Apk Install” in the application page. After complete installation, the application icon will be shown in the application page.

To uninstall the file, click “Apk Installer” in the application page, select “Manage” and click it.

## I. Spec

LCD	7" 1024*600 TN LED backlit
CPU	RK3126B Quad Core Cortex-A7 ARM 1.2GHz
OS	Android 5.1
RAM	512MB DDR3
Flash	8GB eMMC
Cam	0.3 megapixel front, 2.0 megapixel rear
Touch Panel	G+P 5 points Capacitive touch screen
WiFi	802.11 b/g/n
Gravity	3D gravity sensor
Music format	MP3, WMA, OGG, APE, FLAC, AAC, WAV
Video format	MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP, VP8, RV, WMV, AVS, H.263HP
Picture format	JPG, JPEG, BMP, GIF
Ebook format	TXT, LRC, PDF, Html, Htm, EPUB (Max 20M)
Record format	WAV
Speaker	Mono
Battery	Lithium polymer 3.7V/2500mAh, approximate 4 hours playback
AC adapter	Input: AC 100-240V 50/60Hz max 0.4A Output: 5.0V == 1.5A 

## **J. Trouble shooting**

1. **Can't power on:** Charge the device
2. **Serious noise:** Check if the music file is damaged.
3. **Can't download/copy:** Check if connect correctly, if memory is not full
4. **USB connect failed:** Check if connect correctly, if USB device/cable is damaged,
5. **Can't connect to LAN router:** Check if router on, move closer to router, keep away from devices of 2.4GHz frequency band.

## **FCC Statement:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.