

Model: SK-M36

AUKEY

User Manual Radius Wireless Speaker

Contents

| | |
|----------|-------|
| English | 01-06 |
| Deutsch | 07-11 |
| Français | 12-16 |
| Español | 17-21 |
| Italiano | 22-26 |
| 日本語 | 27-31 |

AUKEY International Ltd.
 www.aukey.com | support@aukey.com
 No.102, Building P09, Electronics Trade Center
 Huanan City, Pinghu Town, Longgang District
 Shenzhen, Guangdong, 518111, CN



材质: 105g铜版纸

尺寸: 100x100 mm

印刷: 单黑双面印刷

装订方式: 骑马钉装


请不要把目录页放在封面的背面

Thank you for purchasing the AUKEY SK-M36 Radius Wireless Speaker. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

- Radius Wireless Speaker
- Micro-USB Cable
- 3.5mm Audio Cable
- User Manual
- Warranty Card

Product Diagram

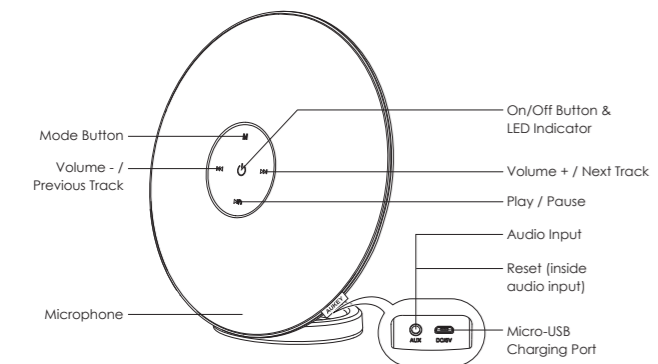


Specifications

| | |
|------------------------|--|
| Model | SK-M36 |
| Technology | BT 4.1, A2DP, AVRCP, HSP, HFP |
| Audio Output Power | 10W |
| Frequency Response | 180Hz - 20kHz |
| Signal-to-Noise Ratio | >70dB |
| Microphone Sensitivity | 42dB ±3dB |
| Input | DC 5V |
| Charging Time | 4 hours |
| Play Time | 10 hours (at 50% volume) |
| Talk Time | 8 hours |
| Battery Type | Li-ion (2200mAh 7.4V) |
| Operating Range | Up to 10m / 33ft |
| Operating Temperature | -10°C - 50°C / 14°F - 122°F |
| Dimensions | 218 × 212 × 83mm / 8.58" × 8.34" × 3.27" |
| Weight | 750g / 26.45oz |

Charging

Please fully charge this speaker before first use. Connect it to a USB charger or charging port with the included micro-USB cable to charge. When the red LED indicator turns off, your speaker is fully charged and ready for use. Charging takes around 4 hours.

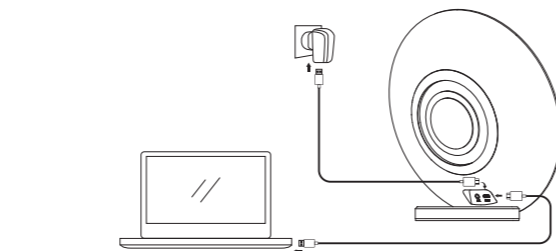

Powering On / Off

- To power on/off, press and hold the on/off button for 2 seconds, and the LED indicator will turn blue / turn off

Pairing

- When you turn on the speaker, it will automatically enter pairing mode and the LED indicator will start to flash blue rapidly
- Activate the pairing function on your phone or other compatible device and select "AUKEY SK-M36"
- If a code or pin is required for pairing, enter "0000"
- When successfully paired, you will hear a tone and the LED indicator will stay on

Notes

- To reset the speaker (to clear program errors), use a straightened paper clip or a toothpick to carefully short-press the reset button (towards the top at the back, furthest inside the 3.5mm audio input jack)
- The speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired

- If your paired device is switched off or manually disconnected, the speaker will enter pairing mode and automatically shut down after 10 minutes
- If the speaker or connected device exceeds the operating range, the speaker will disconnect. The connection to the last successfully connected device will be re-established once you re-enter wireless range within 10 minutes. To connect to other devices, repeat the previous "Pairing" steps

Playing Audio via Audio Input Connection

Connect the SK-M36 to your PC, laptop, or other device with audio output port using the included 3.5mm audio cable. Press the on/off button to turn on, and the LED indicator will flash blue once every 2 seconds.

Notes

- The speaker will disconnect from your phone or other paired devices when an audio cable is plugged into the audio input jack. Short-press the mode button to switch back to BT mode
- When playing audio using the audio input jack, short-press the volume + / - to adjust the volume and short press play/pause to pause or resume. Next / previous track control on the speaker is disabled in audio input mode
- For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device

Controls & LED Indicator

| Functions | Instructions |
|---------------------------|---|
| Cancel pairing | When connected, press and hold play/pause for more than two seconds |
| Answer / End a call | Short-press play/pause |
| Reject an incoming call | Press and hold play/pause for more than 3 seconds |
| Redial last-called number | Double-press play/pause in standby |
| Adjust volume | Short-press volume + / - |
| Next / Previous track | Long-press volume + / - |
| Pause / Resume | Press play/pause once |

| LED Indicator | Status |
|------------------------------------|--|
| Blue flashing rapidly | Pairing mode / Disconnected |
| Solid blue | Connected |
| Blue flashing once every 2 seconds | Playing music / In call / Audio input mode |
| Red on | Charging |
| Red off (after charging) | Fully charged |

Product Care & Use

- Keep away from liquids, extreme heat, and strong magnetic fields
- Do not use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders: support.us@aukey.com

Amazon EU orders: support.eu@aukey.com

Amazon CA orders: support.ca@aukey.com

Amazon JP orders: support.jp@aukey.com

*Please note, AUKEY can only provide after sales service for products purchased directly from AUKEY. If you have purchased from a different seller, please contact them directly for service or warranty issues.

Notice for US

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation

FCC Rules

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution

Changes or modifications made to this device not expressly approved by AUKEY may void the FCC authorization to operate this equipment.