

Internal Photographs

EUT - Open View

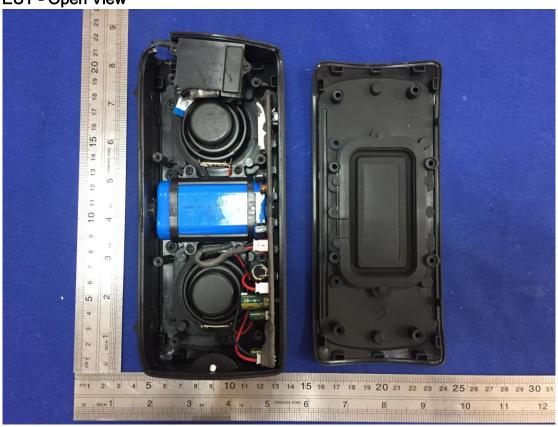


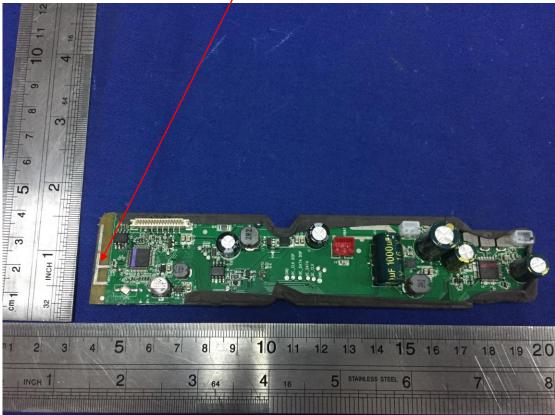

Antenna location



EUT-PCB View 2

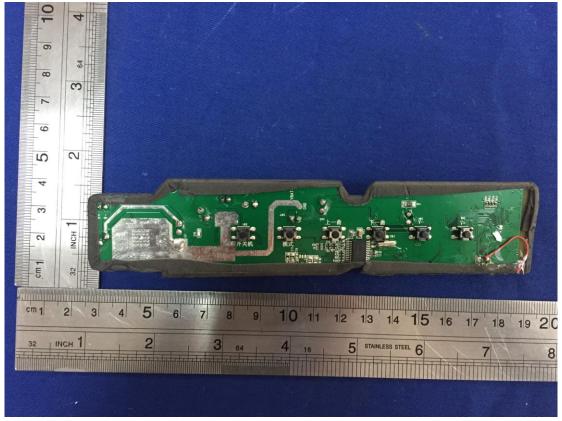

EUT - battery View



EUT-Battery View

