

尺寸 : 143*210mm+/-2mm, 正反面黑白印刷

VICTROLA



VBB-25
MINI BLUETOOTH BOOMBOX



The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

**CAUTION: TO PREVENT
RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

WARNING: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions –The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




15.



-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

-Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

-The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

16.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

17. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

18. WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.

19. The use of the equipment in moderate climate.

20. The ventilation should not be impeded by covering the ventilation openings with items such as, newspapers, tablecloths, curtains, etc.

21. No naked flame sources, such as lighted candles, should be placed on the apparatus.

22. The symbol with  Indication AC voltage.

23. The symbol with  indicate DC voltage.

24. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.




25. Attention should be drawn to the environmental aspects of battery disposal.

26. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

ACCESSORIES INCLUDED:

- INSTRUCTION MANUAL
- WARRANTY (BACK OF MANUAL)
- AC CABLE

   PRODUCT OVERVIEW

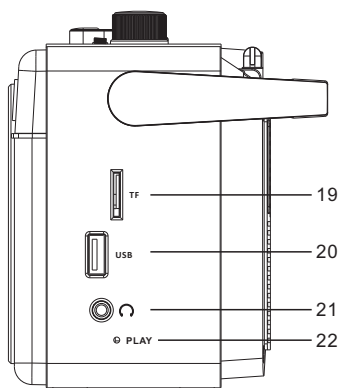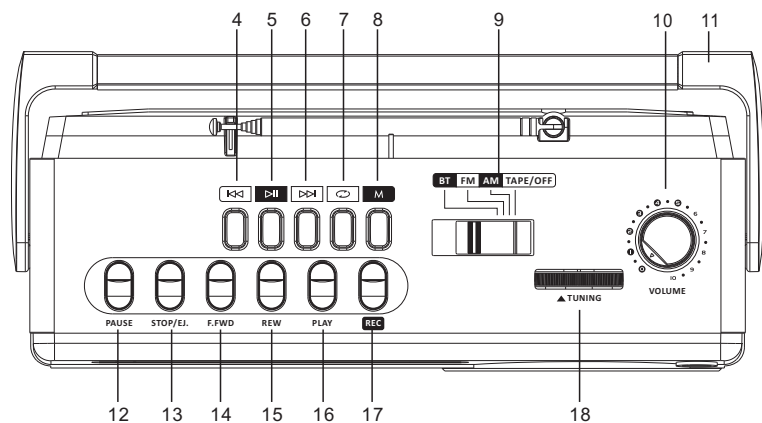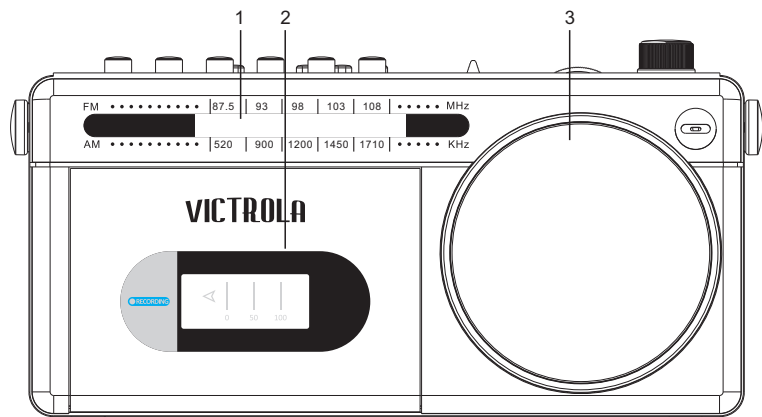

- | | |
|-------------------------|--------------------|
| 1. Dial Scale | 17. Record Button |
| 2. Tape Silo | 18. Tuning Control |
| 3. Speaker | 19. TF |
| 4. Prev/Rewind | 20. USB |
| 5. Play/Pause | 21. Earphone Jack |
| 6. Next/Fast Forward | 22. Play Indicator |
| 7. Repeat | |
| 8. Mode | |
| 9. Band Switch | |
| 10. Volume | |
| 11. folding handle | |
| 12. Pause Button | |
| 13. Stop/Eject Button | |
| 14. Fast Forward Button | |
| 15. Rewind Button | |
| 16. Play Button | |

USAGE

AUDIO PLAY

Move function button to TAPE, put cassette into cassette cabin and close the door, press PLAY to play. Press F.FWD to speed or REW to fast reverse. Press PAUSE to pause, press one more time to re-play.

RECORD FUNCTION

- a. Radio record: In Radio mode, put into cassette, press REC to record radio program.
- b. Bluetooth/USB Record: In Bluetooth/USB mode, put into cassette, press REC to record songs of Bluetooth/USB
- c. Mic record: Move function button to TAPE, put into cassette, press REC to record voice program.

RADIO FUNCTION

- a. Move function button to AM, adjust the volume to moderate volume, you can choose any radio station within AM 520-1710KHz. While signal is not good, adjust the unit direction to gain more favorable reception effect.
- b. Move function button to FM, adjust the volume to moderate volume, you can choose any radio station within FM 87.5-108MHz. While signal is not good, adjust the unit direction to gain more favorable reception effect.

BT/USB FUNCTION

- a. insert USB/TF card to play music, Bluetooth light splash slowly while playing, press ▷|| to play/pause, while Bluetooth light on, press one more time to re-play; press ◀◀ to jump into pre-song, long press to fast reverse; press ▷▷ to jump into next-song, long press to speed; press ⌂ to enter into Supersonic circulation (Bluetooth light splash fast) or all circulation (Bluetooth light splash slow); press "M" switch USB/TF card/Bluetooth.
- b. Bluetooth mode: Turn on with USB/TF card, or press "M" to switch into Bluetooth mode and pairing, Bluetooth light splash fast, will sound while paired. While playing, Bluetooth light flash slow, press ▷|| to pause, while Bluetooth light on, press one more time to re-play; press ◀◀ to jump into pre-song, long press to fast reverse; press ▷▷ to jump into next-song; long press "M" will disconnect Bluetooth, and enter into pairing.

EARPHONE MODE

while in music play or radion mode, plug earphone into PHONE jack, adjust the volume to moderate volume, to listen to your favor program.

TURN OFF

Move function button to TAPE/OFF.

SPECIFICATIONS

power supply: AC 120V/60Hz
DC6V UM2 x 4

Consumption power: 4W

FM Frequency range: 87.5-108MHz

AM Frequency range: 520-1710KHz

output impedance: speaker 6Ω

Bluetooth: version V5.0

Radiation power: <1mW

Frequency range: 2402~2480MHz

 
USB/SD Card Maximum File Size : 32G

It will go into standby mode after inactivity for 15 minutes in USB/BT mode. Press PLAY button or function switch to active.

SETUP / BASIC OPERATION

BATTERY OPERATION

1. Remove the battery compartment door at the back of unit.



2. Insert one Um2x4 C size battery (not included) into the battery compartment, making sure that the battery is installed in the designated numerical order and that the proper polarities (+ and -) are maintained.

Note: *The battery is used for memory backup function only.*

Battery Precautions

Be sure to insert the battery with correct positive "+" and negative "-" orientation.

 
When using rechargeable batteries, refer to the precautions on their labels.

Do not heat or disassemble battery, and NEVER dispose of old batteries by throwing them in a fire.

Do not dispose device into standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate disposal laws and regulations. Please refer to local regulations for proper battery disposal.

Setup

1. Remove any packaging materials from the unit.
2. Connect the AC power cord to a wall outlet.

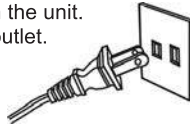

TROUBLESHOOTING GUIDE

	Symptom	Possible Cause	Solution
GENERAL	• Unit will not power on.	• Unit is unplugged.	• Connect the unit to the AC power supply.
	• No sound output from speakers.	• The volume level is set too low. • The input selector does not match the playback source.	• Adjust the volume. • Select the correct input source.
	• Noise/Distortion in sound output.	• The unit is too close to a TV set or another interfering device.	• Turn off the TV or other appliance, and relocate the unit.
	• Unit fails to respond.	• It might result from external factors such as ESD (Electro-static discharge).	• Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
FM RADIO	• Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio reception.	• Properly tune-in the desired station. • Turn-off the interfering TV set.
	• The sound is distorted.	• The antenna is not oriented properly.	• Re-orient the antenna until reception improves.
AM RADIO	• Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio	• Properly tune-in the desired station. • Turn-off the interfering TV set.
	• The sound is distorted.	The boombox is not facing the right direction for AM reception	Rotate the Boombox till AM performance improved
BLUETOOTH	• No sound.	• The unit is not switched to Bluetooth mode. • Your device's and/or the unit's volume is not turned up. • Your device is too far from the unit or there're some obstacle between your device and the unit.	• Ensure the unit is switched to BT mode. • Move your Bluetooth device closer to unit • Turn up the volume on your portable device and/or the unit. • Turn OFF your Bluetooth device and unit. Then power them both back ON.
	• Sound has a lot of static.	• Your device is too far away.	• Bring your device closer to the turntable.
	• Unable to pair with a Bluetooth device.	• Your device doesn't have Bluetooth connectivity. • The Bluetooth pairing is not successful.	• Confirm that your device is Bluetooth compatible. • Re-pair the unit and device again.
USB	• No sound	• USB drive is not plugged in properly • It is not on USB mode, • The mass volume of boombox is low	• Make sure the USB drive is inserted properly • Press Mode button to switch into USB mode • Make sure the mass volume is big enough

TROUBLESHOOTING GUIDE

TF	<ul style="list-style-type: none">• No sound	<ul style="list-style-type: none">• TF card is not plugged in properly• It is not on TF mode,• The mass volume of boombox is low	<ul style="list-style-type: none">• Make sure the TF card is inset properly• Press Mode button to switch into TF mode• Make sure the mass volume is big enough
----	--	--	--

For further assistance with your product, call Innovative Technology at TOLL FREE# 1-877-ITECH-97 (1-877-483-2497).

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

IC STATEMENT

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter. L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs. This device complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

California PROP 65 Warning



WARNING: This product can expose you to chemicals including lead which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.
Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of there turning item and our full inspection (IT) may issue a replacement to customer for the same item or one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number. All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address. Please include your check or money order in the amount of

- **USD \$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99 (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up (Price Paid Per Unit)**
- **Shipping fees are non-refundable**

to be payable to Innovative Technology Electronics LLC.(for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.

Innovative Technology Electronics LLC.
1 Channel Drive
Port Washington, NY 11050
Toll free: 1-877-483-2497

Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

