

DO NOT PRINT PINK DIELINE

FORMAT:148X210MM

格式: 148x210mm

PAPER:80GSM,WOODFREE,WHITE
PRINTING: DOUBLE-SIDE PRINTED
PRINTING COLOUR:BLACK

紙張: 80克白紙, 白色
印刷: 雙面印刷
印刷顏色: 黑色

VICTROLATM MINI STEREO SYSTEM WITH BLUETOOTH VS-115



Instruction Manual
PLEASE READ THIS MANUAL CAREFULLY BEFORE USING
AND KEEP IT FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

Safety precautions

The information you need to prevent danger to the user and other people as well as property damage is described below. Description of signs* shows different levels of danger or damage that may occur due to wrong handling.

Important notes

This book is only a guide for user's operation; not a criterion for configuration.

Only use attachments/accessories specified by the manufacturer.



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.



The exclamation mark is intended to alert the user to the presence of important operating instructions.



To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.



This mark indicates this unit belongs to class 1 laser product. The laser beam may produce radiation harmful to the directly sighting human body.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use the apparatus near water.
6. Clear only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/appliances combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
16. No naked flame sources, such as lighted candles, should be placed on the apparatus.
17. Attention should be drawn to environmental aspects of battery disposal.
18. The product is designed to use in moderate climates.

IMPORTANT SAFETY INSTRUCTIONS

19. The mains plug or an appliance coupler is used as a disconnecting device shall remain remain openable.
20. Do not expose the device to rain, moisture, dripping, or splashing.
21. Do not place objects filled with liquids, such as vases, on the device.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada License-exempt RSS standards. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'utilisation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

FCC IC Radiation Exposure Statement
This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with a minimum distance of 20cm between the receiver and your body.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
Déclaration IC sur l'exposition aux radiations
Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé à une distance minimum de 20 cm entre l'émission et votre corps.
Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

SPECIFICATIONS

Power supply	AC 100-240V, 50/60Hz	
Power consumption	20W	
Working environment	Temperature	+10~35°C
	Relative humidity	5%~95%
	S/N/A weight	>75dB(1kHz)
Disc output	Dynamic Range	>75dB(1kHz)
	THD+NOISE	<0.001(1kHz)
	WOW FLUTTER	Below the limit of apparatus measure
Tuner	FM band Range	87.5MHz~108MHz
Power output (Max)	15Wx2	
Frequency response	±3dB(20Hz~20kHz)	
Unit Size/ Speaker Size	180x135x245mm/155.3x254x129mm	
Unit and speakers Weight	4.32kg	
Accessories	CD Micro System, Speakers, Remote Control, FM Antenna, Instruction Manual	

 
Design and specification are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Made in China.


PRODUCT OVERVIEW

FRONT:



- 1 STAND BY/ON
- 2 PLAY/PAUSE
- 3 STOP
- 4 SOURCE
- 5 PREVIOUS
- 6 NEXT
- 7 OPEN/CLOSE

 BACK:



- 8 DISC TRAY
- 9 AUX IN
- 10 USB SLOT
- 11 MASTER VOLUME ADJUSTER
- 12 SPEAKER OUTPUT
- 13 FM ANTENNA JACK

REMOTE CONTROL

REMOTE CONTROL OPERATION

Insert the batteries into the remote control. Point the remote control at the remote sensor on the front panel. The remote control works within a distance of about 8 meters (26') from the sensor and within an angle of about 30 degrees from the left and right side.

Battery Installation




- 1 Remove the battery compartment cover on the back of the remote control.
- 2 Load one AAA 1.5V battery into the battery compartment making sure that the batteries have been inserted with the correct polarities matching the symbols + / - as indicated inside the battery compartment.
- 3 Replace the cover.

Note:

- Remove the batteries when you do not intend to use the remote control for a long time.
- Do not mix new and used batteries, or different types of batteries.
- Weak batteries can leak and severely damage the remote control.
- The batteries must not be exposed to excessive heat sources, such as sunshine, fire or any other things like that.
- Be environmentally friendly and dispose of batteries according to your government regulations.
- Batteries NOT included.

REMOTE CONTROL

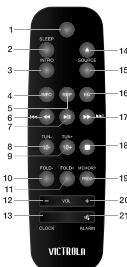

1. STANDBY (ON / OFF)
2. SLEEP
3. INTRO
4. INFO
5. REPEAT
6. REWIND/PREVIOUS
7. PLAY/PAUSE
8. TUNE-/FM
9. TUNE+/FM
10. FOLD-
11. FOLD+
12. VOLUME-
13. VOLUME+
14. OPEN/CLOSE
15. SOURCE
16. EQ
17. FAST FORWARD/NEXT
18. AUTO/STOP
19. MEMORY/PROG
20. MUTE/ALARM
21. MUTE/ALARM

*Please note: Some buttons only work in certain SOURCE modes.

OPERATION AND CONTROLS

- STANDBY**
Press to switch on the unit. Press it again to put the unit in standby mode.
- OPEN/CLOSE**
Press to open or close the disc tray.
- SLEEP**
Press repeatedly to select a sleep time or choose option **OFF** to disable the sleep function, after which the unit will go into standby mode automatically. Then press **(STANDBY)** to wake it up.
- INTRO**
Press to introduce the track of the disc in order, it takes approximately ten seconds for each track.
- CLIP**
In standby mode, press this button to set the clock. Press **[]** button to select 12H or 24H clock display, press clock button to confirm, then use **[]** button to set the clock time, press it again to confirm it.
Note: only available in standby mode.
- SOURCE**
Press repeatedly to switch among CD, AUX IN, BLUETOOTH, USB and FM mode.
- EQ**
Press to stop playback.
- FAST FORWARD**
Press to temporarily pause a playback, Press it again to resume the playback.
Hold down this button for 3 seconds to disconnect bluetooth.
- STOP**
Press to skip to the next track.
Hold down to fast forward playback.
- REWIND**
Press to return to the previous track.
Hold down to rewind playback.
- VOLUME+**
Press [VOLUME+] to turn up the volume.
- VOLUME-**
Press [VOLUME-] to turn down the volume.
- PROGRAM**
In stop mode, place a CD and press [PROGRAM] to access to the program mode. Press the arrows **[]** to select the desired track and press once again [PROGRAM] to confirm your selection. Press **[]** to start program playback.
Note: Up to 20 tracks can be stored in the playlist.
- ALARM**
Press to temporarily switch off the sound. Press it again to switch it on.
In standby mode, press and hold to enter into alarm timer setting mode, then make sure that you have set the clock correctly by pressing **[]** keys, press it again to confirm and set the volume value by the same method.
- REPEAT**
Press repeatedly to switch the repeat modes.
- TUNE+**
Press this button for each time to increase ten tracks.
- TUNE-**
Press this button for each time to decrease ten tracks.

OPERATION AND CONTROLS

- FOLD+**
Press to skip the next folder.
- FOLD-**
Press to return to the previous folder.
- FM**
Press to switch the equalizer mode: flat, rock, pop, jazz or classic.
- FM RADIO OPERATION**
Press SOURCE to select FM mode.
For optimal connection, attach the provided FM Antenna.
- TUNE+**
TUNE-
Hold down [TUNE+/-] to increase/decrease the frequency continuously.
- MEMORY**
After tuning in a new frequency, press [MEMORY], then select a preferred station by pressing **[]** or **[]** button, press it again to save it as a preset station.
- INFO**
Switches between receiving frequency / Program Service (Station Name) / PTY (Program Type), radio text and CT (clock time), if the station supports these functions and the radio reception is adequate.
- AUTO**
Hold down to auto scan for the broadcasting radio channels, press it again to stop auto scanning.
- PRESET**
Press to skip to the next preset station.
- PRESET**
Press to skip to the previous preset station.
- NOTE:** In Tuner mode, [VOLUME+/-], [MUTE] buttons are also active.

- CONNECTING TO BLUETOOTH**
An external device with Bluetooth Connectivity can be wirelessly connected to this unit using the Bluetooth function.
1. Power ON the unit by pressing the Standby Button.
 2. Press the source button until "BT" displays on the LED Screen.
 3. Turn your external device's Bluetooth Setting ON. Wait a moment, then look for the Bluetooth pairing name "V5-115".
 4. Select the Bluetooth pairing name to connect the unit. Once connected, there will be an audible tone indicating device has been successfully paired.
 5. Rotate the VOLUME CONTROL KNOB to adjust the sound level. Use **[]** Play/Pause/Next/Previous functions as usual.

OPERATION AND CONTROLS

- SPEAKER OUTPUT**
Connect the speakers to speaker output terminals with their attached speaker cables.
- AUX IN OPERATION**
An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this unit via AUX IN.
1. Plug a detachable Audio Cable (not provided) into the AUX IN socket on the front of the unit.
 2. Press the source button until the LED Screen displays "AUX IN".
 3. Plug the other end of the Audio Cable into the Headphone or Line Out socket of your External Source.
 4. Rotate the VOLUME CONTROL KNOB to adjust the sound level.
- USB OPERATION**
1. For USB playback, insert USB (not provided) into the USB Port on the front of the unit.
2. Press the Source Button until the LED Display shows "USB".
3. Playback will start automatically.
*Use FOLD- and FOLD+ buttons to switch between folders (if applicable).

TROUBLESHOOTING

Before contacting customer service, please check the following chart for simple troubleshooting solutions.

Symptom	Causes	Remedy
No Power	<ul style="list-style-type: none"> The AC power cord is not connected to the power supply or is not connected to a power supply securely. 	<ul style="list-style-type: none"> Please check that the AC power cord is connected securely.
Sound There is no sound or the sound is distorted.	<ul style="list-style-type: none"> The audio cables aren't connected securely. The volume is set to the minimum level. The sound is switched off. 	<ul style="list-style-type: none"> Connect the audio cables securely. Turn up the volume. Press [MUTE] on the remote control to switch on the sound. Press [VOLUME]
Unable to play a disc	<ul style="list-style-type: none"> The disc is placed in the disc tray in a wrong way. The unit isn't compatible with the disc. The disc is dirty. 	<ul style="list-style-type: none"> Check that the disc is placed in the disc tray with its label side upwards. Clean the disc.
The player stops when a USB drive is inserted into the player	<ul style="list-style-type: none"> The connected USB drive is probably not a certified one. 	<ul style="list-style-type: none"> The player cannot play any unformatted USB drive. In case the player breaks down, turn it off, disconnect the power cord from the AC outlet and unplug the USB drive from the player. Then, power on the player again. The player will resume the normal functions.
The bottom on the unit does not work	<ul style="list-style-type: none"> The unit is being interfered with static electricity, etc. 	<ul style="list-style-type: none"> Switch off and unplug the unit. Then connect the plug to the power supply and switch it on again.
The remote control does not function.	<ul style="list-style-type: none"> There is no battery in the remote control. The batteries are out of charge. The remote control isn't pointed to the remote sensor. The remote control is out of its operating area. The unit is shut down. 	<ul style="list-style-type: none"> Install one AAAA 5V battery in the remote. Replace the batteries with new ones. Make sure that the remote control is pointed to the remote control sensor. Make sure the remote control is within the operating area. Switch off the unit and disconnect it from the AC outlet. Then power on the unit again.

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics LLC.
Innovative Technology Electronics LLC.
Limited Warranty: 90 Days Labor, One Year Parts
Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. If, agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to fire power surges, connection to improper voltage supply or settings, misuse, misbranding, accident, acts of God or attempted repair by an unauthorized service agent.
To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.
All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No item will be shipped back to a PO Box or APO address.
Please include your check or money order in the amount of:
- USD \$5.00 for items \$10.00 to \$29.99 (Price Paid Per Unit)
- USD \$10.00 for items \$30.00 to \$99.99 (Price Paid Per Unit)
- USD \$15.00 for items \$100.00 and up (Price Paid Per Unit)
Shipping fees are non-refundable.
IT will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.
Innovative Technology Electronics LLC.
1 Channel Drive
Port Washington, NY 11050
Tel free: 1-877-435-2407
Website for support: www.victrola.com/pages/technical-support
There are no express warranties except as listed above.
REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. IT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THE PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.
Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. The warranty gives you specific legal rights and you may also have other rights, which vary from state to state.