 


MODEL VTA-200B
QUINCY
6-IN-1 MUSIC CENTER

Important Safety Instructions	3
Product Overview	4
Setup/Basic Operation	7
Listening to a Vinyl Record	7
Listening to CD	8
Listening to the FM Radio	9
Listening to an External Audio Device (AUX Mode)	9
Listening to an External Audio Device (Bluetooth Mode)	9
Listening to a Cassette Tape	10
Maintenance/Proper Handling	10
Specifications	12
Troubleshooting Guide	13
FCC Warning	14
RF Statement and other warnings	15

Important Safety Instructions

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this appliance near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the appliance does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, lipof, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. A grounding plug is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



MODEL VTA-200B
QUINCY
6-IN-1 MUSIC CENTER

Setup/Basic Operation

Setup

- Remove white protective needs cover by gently pulling towards front of unit.
- Remove any packaging materials from the unit.
- Connect the power adaptor to a wall outlet. The power adaptor is located in the cabinet box.

Note:
It is strongly recommended that this product should be operated only from the type of power source indicated on the marking label.
To prevent interference, avoid bundling audio signal cables together with the AC power cord.

Basic Operation

- Push the POWER button to turn the unit on.
- Select the source by turning the selection knob (PHONO/AUX/CD/FM/BT).
- Rotate the VOLUME knob to adjust to the desired sound level.

Listening through RCA LINE OUT
For smaller device listening: First reduce the volume level to minimum. Insert the white and red plugs on the RCA cable into the unit, then insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack.

 
Listening through Earphones/Headphones (not included)
For private listening: First reduce the volume level to minimum. Insert your headphones into the 3.5mm jack, then adjust the volume up by turning the VOLUME knob.

Note: The speakers will automatically be deactivated while headphones are plugged in.

CONDENSATION WARNING:
When the unit is moved from a cold or warm place, or if used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after plugging it into an AC outlet to allow it stabilize at the temperature of its surroundings.

Listening to a Vinyl Record

- Before use, completely loosen the TRANSPORTATION SCREW by turning it clockwise with a coin or screwdriver. Detach the stylus guard (white plastic cover).
- Turn the unit ON by pressing the POWER button.
- Set the FUNCTION KNOB to the PHONO position.
- Gently open the dust cover. First reduce the volume level to minimum.
- Put the record on the turntable. Select the speed. When playing a 45 RPM record, set the individual stylus guard to rest on the record.
- Gently push the CLAMP/PIF to the right to release the TONE ARM.
- Raise the CUE LEVER to lift the TONE ARM off the tone arm support.
- Move the TONE ARM gently to the edge of the record (or the starting point of a track). The turntable will begin to turn.

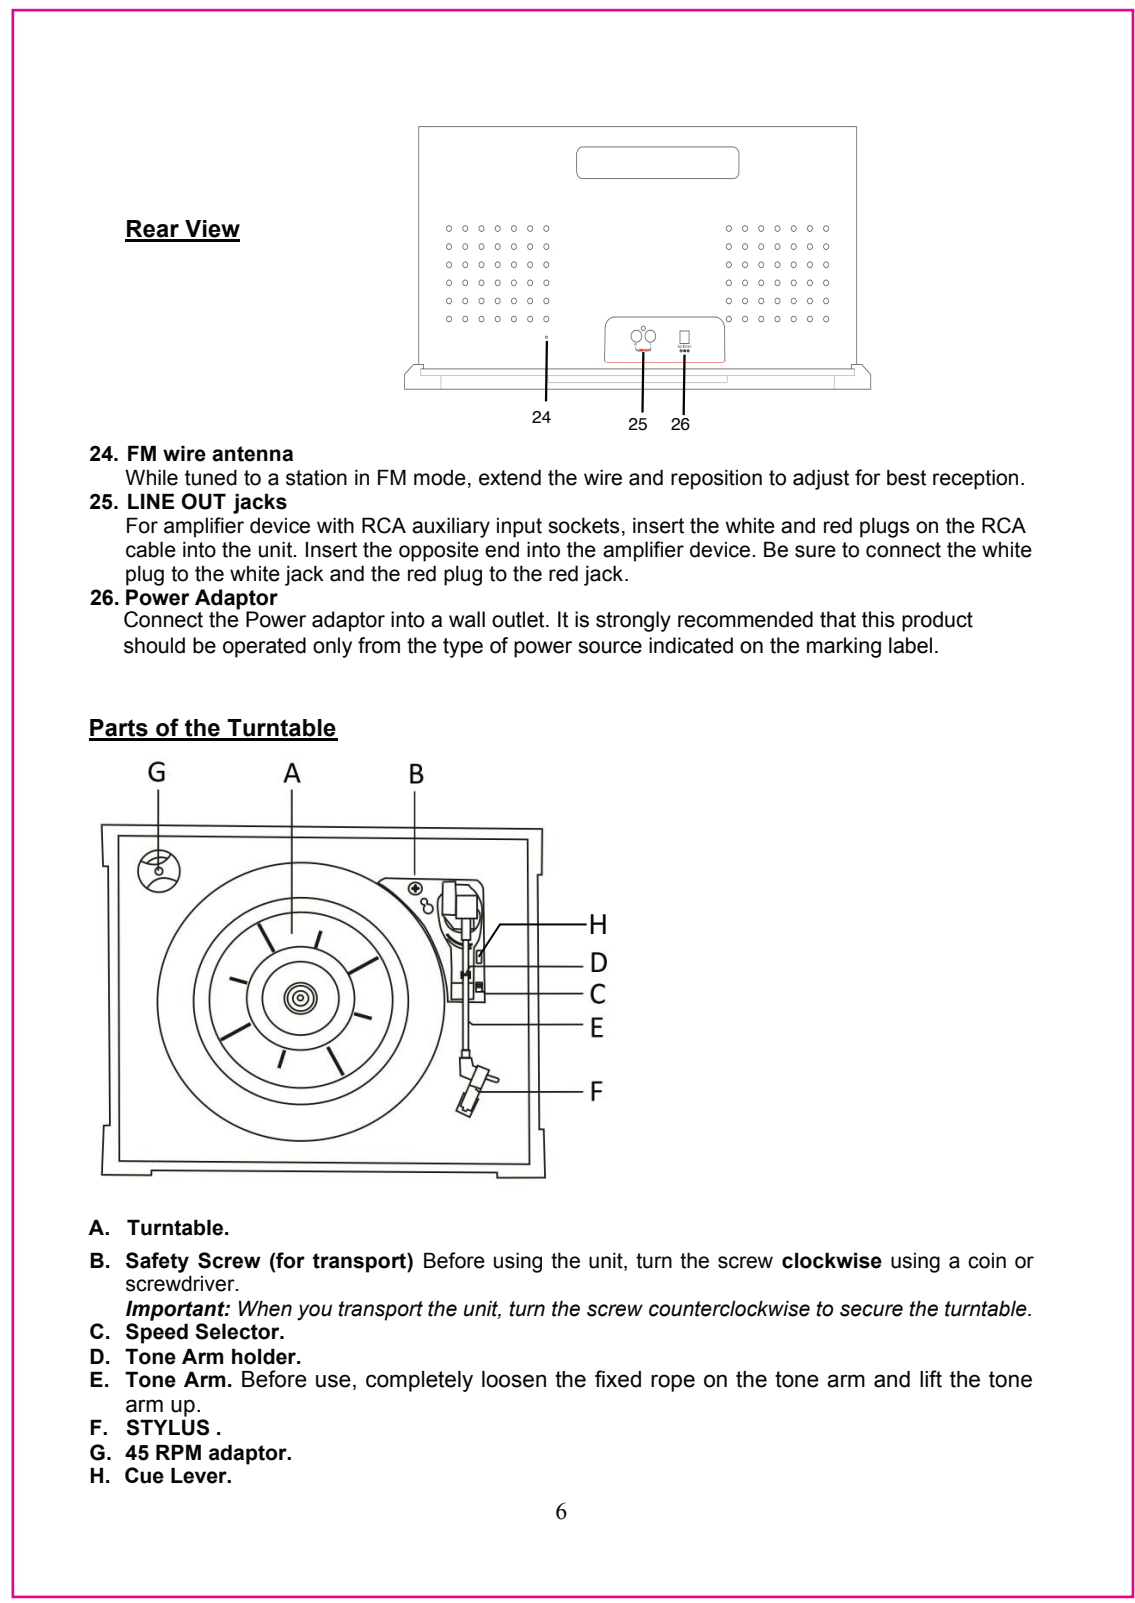

Rear View

24. FM wire antenna
While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.

25. LINE OUT jacks
For amplified device with RCA auxiliary input sockets, insert the white and red plugs on the RCA cable into the back. Insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack.

26. Power Adaptor
Connect the Power adaptor into a wall outlet. It is strongly recommended that this product should be operated only from the type of power source indicated on the marking label.

Parts of the Turntable

A. Turntable.
B. Safety Screw (for transport) Before using the unit, turn the screw clockwise using a coin or screwdriver.
C. Speed Selector.
D. Tone Arm holder.
E. Tone Arm. Before use, completely loosen the fixed rope on the tone arm and lift the tone arm.
F. STYLUS.
G. 45 RPM adaptor.
H. Cue Lever.

Handling Vinyl Records

- Do not touch the record's grooves. Only handle records by the edges or the label with clean hands. Touching the record surface will cause your record's quality to deteriorate.
- To clean a record, use a soft anti-static cloth to gently wipe the record surface.
- Keep records in their protective sleeves when not in use.
- Always store records upright on their edges.
- Avoid stacking records on top of each other.
- Avoid stacking records in a heat source (radiators, stoves, etc.), or in a location subject to vibration, excessive dust, heat, cold, or other.

General Care

- When removing the power plug from the wall outlet, always pull directly on the plug.
- Never pull the cord.
- To clean the exterior cabinet, do not touch it, and do not forget to clean the disc tray.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish.
- For cleaning, use a clean, dry cloth.
- In order to shut off the power this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time.

How to Replace the Turntable Stylus (Replacement Needle # TNP-S)
The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. The highest speed of 78 RPM records would wear the stylus more quickly.

Removing the old stylus:

- Set a screwdriver at the top of the stylus and push downward (A).
- Remove the stylus by pulling it simultaneously downward and forward.

Installing a new stylus:

- Hold the front tip of the stylus and insert its rear edge (B) first.
- Push the stylus upwards (C) until the tip locks into place.

Caution:

- Do not bend the stylus.
- Do not touch the needle to avoid injury your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.

Specifications

GENERAL	
Power Requirement	12V D.C. 2A
Power Consumption	24W
Dimension (W x H x D)	450 x 235 x 340mm / 18 x 10 x 13.4in (approx.)
Weight	4.7kg / 10.3lb (approx.)
AMPLIFIER	
Output Power	4.8 W (5 W)
Frequency Response	60 Hz to 20,000 Hz
SPEAKER SYSTEM	
Type	2-way
Output Power	Max. 6W
FM Radio	88 to 108 MHz
CD PLAYER	
Frequency Response	60 to 20,000 Hz +/-4dB
Signal-to-Noise Ratio	>91 dB (S/N)
CASSETTE PLAYER	
Track System	2 Track, 2 channel stereo
Speed	33-1/3 rpm, 45 rpm and 78 rpm
Wow and Flutter	<0.4% (WRMS)
Head and Reel	1250 x 8300 Hz +/-4dB
RECORD PLAYER	
Note	DC servo motor Drive System
Speed	33-1/3 rpm, 45 rpm and 78 rpm
SN Ratio	More than 50 dB
Cartridge Type	Ceramic Stereo Cartridge
Stylus	TNP-S1
BLUETOOTH	
Bluetooth Version	Bluetooth V5.0
Bluetooth Frequency	2.402GHz-2.480GHz
Operating Distance	10 meters (33 ft.)
POWER ADAPTOR	
Model No.	DGHP0005
Input	100-240V~50/60Hz, 0.8A
Output	12V 2A, 24W
Manufacturer	DOMG GUAN HP-POWER TECHNOLOGY LIMITED

Warranty Information

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

Canada and US Territories

United States

Victrola (Innovative Technology Electronics, LLC) warrants to the original retail purchaser that this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product.

To obtain a replacement under the terms of this warranty, you must contact the dealer from which it was purchased with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

Except as limited below, if the product proves defective in either material or workmanship within one (1) year from the date of purchase, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced with an identical model, Victrola will issue a merchandise credit for the purchase price to be redeemed at victrola.com.

Limitations:

- This limited warranty does not cover failure of the product arising, in whole or in part, from improper installation, storage, transportation, misuse, abuse, accident, neglect, mishandling, unauthorized repair, modification, or wear from ordinary use or environmental deterioration.
- This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.
- This limited warranty is null and void for products not used in accordance with Victrola's instructions.
- This limited warranty terminates if the original retail purchaser sells or otherwise transfers this product.
- This limited warranty is null and void for defects or damage caused by installation or repair performed by any person or entity other than a Victrola authorized installer or dealer.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, jurisdiction to jurisdiction or country to country. All express and implied warranties for the product, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, are limited in time to the term of this warranty. Some states, jurisdictions or countries do not allow the exclusion of certain implied warranties or conditions or limitations on how long an implied warranty or condition lasts, so this limitation may not apply to you. Victrola's responsibility for malfunctions and defects in hardware is limited to replacement or repair as set forth in this warranty statement. Victrola does not accept liability for special, punitive, consequential or incidental damages or losses, whether direct or indirect, including without limitation, any liability for third party claims against you for damages or losses or for products not being available for use. The Victrola may be responsible for the amount you paid for the product that is the subject of the claim. Some states, jurisdictions or countries do not allow the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty Information (Continued)

 
Canada and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

If this product proves defective in either material or workmanship, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced effectively or replaced with an identical model, Victrola at its sole option may replace the unit with a current model of equal or greater value.

Outside the U.S., Canada, and US Territories

The Warranty on this product shall comply with applicable law to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

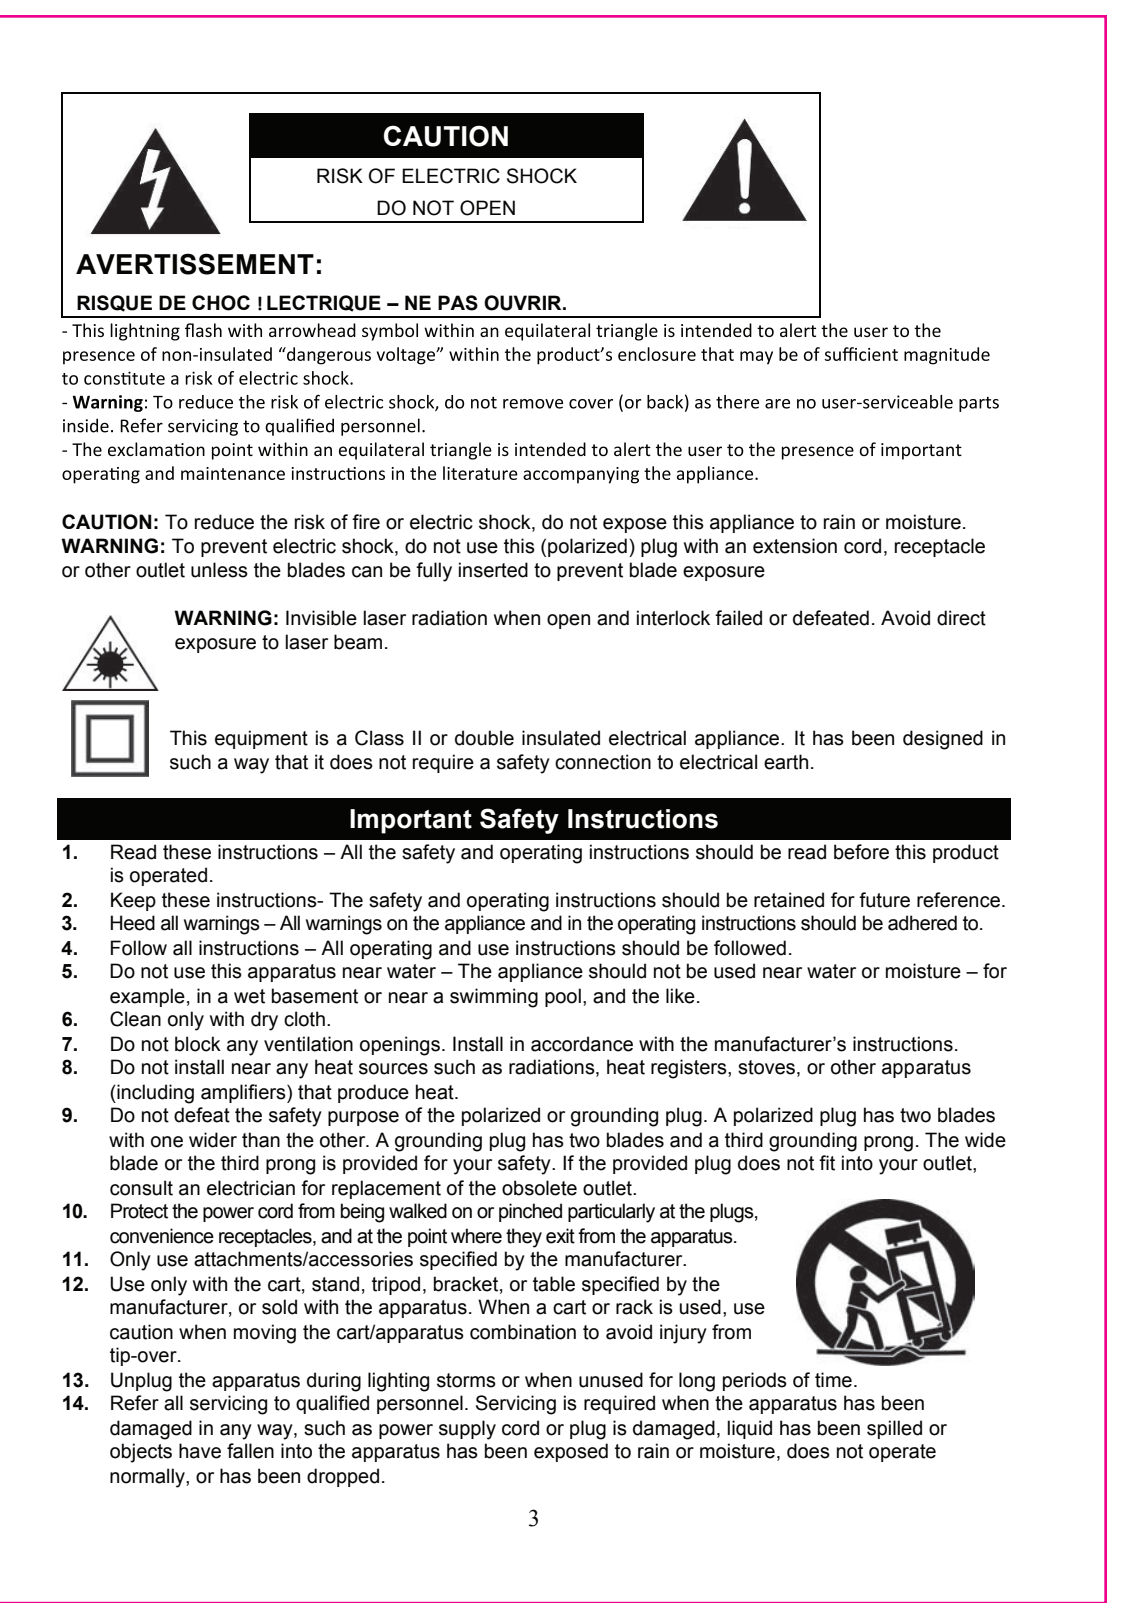

MODEL VTA-200B
QUINCY
6-IN-1 MUSIC CENTER

Product Overview

Front View

Important Safety Instructions

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this appliance near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the appliance does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, lipof, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. A grounding plug is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Listening to the FM Radio

- Select "FM" mode.
- Slide the slide switch to "FM".
- Turn to the desired station using the Radio Tuner Knob.

Adjusting for Best Reception
FM broadcast: Extend and reposition the FM antenna.

Listening to an External Audio Device (AUX Mode)

In AUX (auxiliary) mode, this unit can play audio from an external audio source (MP3 Player, Portable CD Player, etc.)

Playing via 3.5mm AUX-IN Jack on the Front of Unit:


- Turn the unit ON by pressing the POWER button.
- Set the FUNCTION KNOB to the AUX position.
- Connect the 3.5mm aux-in cable (included) into the 3.5mm AUX-IN Jack to play an external audio source, such as CD player, tablet, MP3 player, etc.

Programmed Playback
Up to 20 tracks can be programmed for play in the desired order.

Note:
- Programmed playback works with CD discs only.
- Repeat playback works with CD discs only.

Troubleshooting Guide

Symptom	Possible Cause	Solution
GENERAL		
- Unit will not power on.	- Unit is unplugged.	- Connect the unit to the AC power supply.
- No sound output from speakers.	- The volume level is set too low. - The input selector does not match the playback source.	- Adjust the volume. - Select the correct input source.
- Noise/Distortion in sound output.	- The unit is too close to a TV set or another interfering device. - The antenna is not oriented properly.	- Turn off the TV or other appliance, and relocate the unit. - Re-orient the antenna until reception improves.
- Unit fails to respond.	- It might result from external factors such as ESD (Electro-static discharge).	- Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
TAPE		
- The tape does not play.	- The cassette tape is not inserted properly. - The tape has reached the end.	- Insert the cassette tape correctly. - Flip the cassette.
FM RADIO		
- Cannot listen to any station, or signal appears weak.	- The station is not tuned-in properly. - A TV set is being used nearby and is interfering with the radio reception. - The antenna is not oriented properly.	- Properly tune-in in the desired station. - Turn-off the interfering TV set. - Re-orient the antenna until reception improves.
- The sound is distorted.	- The CD is inserted upside down. - The CD is dusty or dirty or there is condensation on the CD.	- Insert the CD with the printed side right-side up. - Carefully clean and dry the CD.
CD PLAYER		
- CD skips immediately after starting, or unit pauses or stops during play.	- The CD is scratched, damaged or warped. - The disc is very dirty.	- Replace CD with an undamaged one. - Carefully clean the CD.
- CD playback is noisy, or playback skips or skips.	- The CD is scratched, damaged or warped. - The disc is very dirty.	- Replace CD with an undamaged one. - Carefully clean the CD.
- CD tray will not open.	- AMPFM mode is selected.	- Select AUX, PHONO, CD, or TAPE mode.
- Buttons are not functioning correctly.	- The unit is processing information ("Busy" is displayed). - The unit needs to be restarted.	- Wait until the unit finishes processing. - Turn the unit off, then on again.
PHONO		
- Decline in turntable audio performance.	- The turntable stylus is worn out.	- Replace the stylus.
AUX		
- No sound output with external audio device plugged into rear AUX in jack.	- Both AUX in jacks (front and rear) are plugged.	- Unplug the front AUX in Jack.

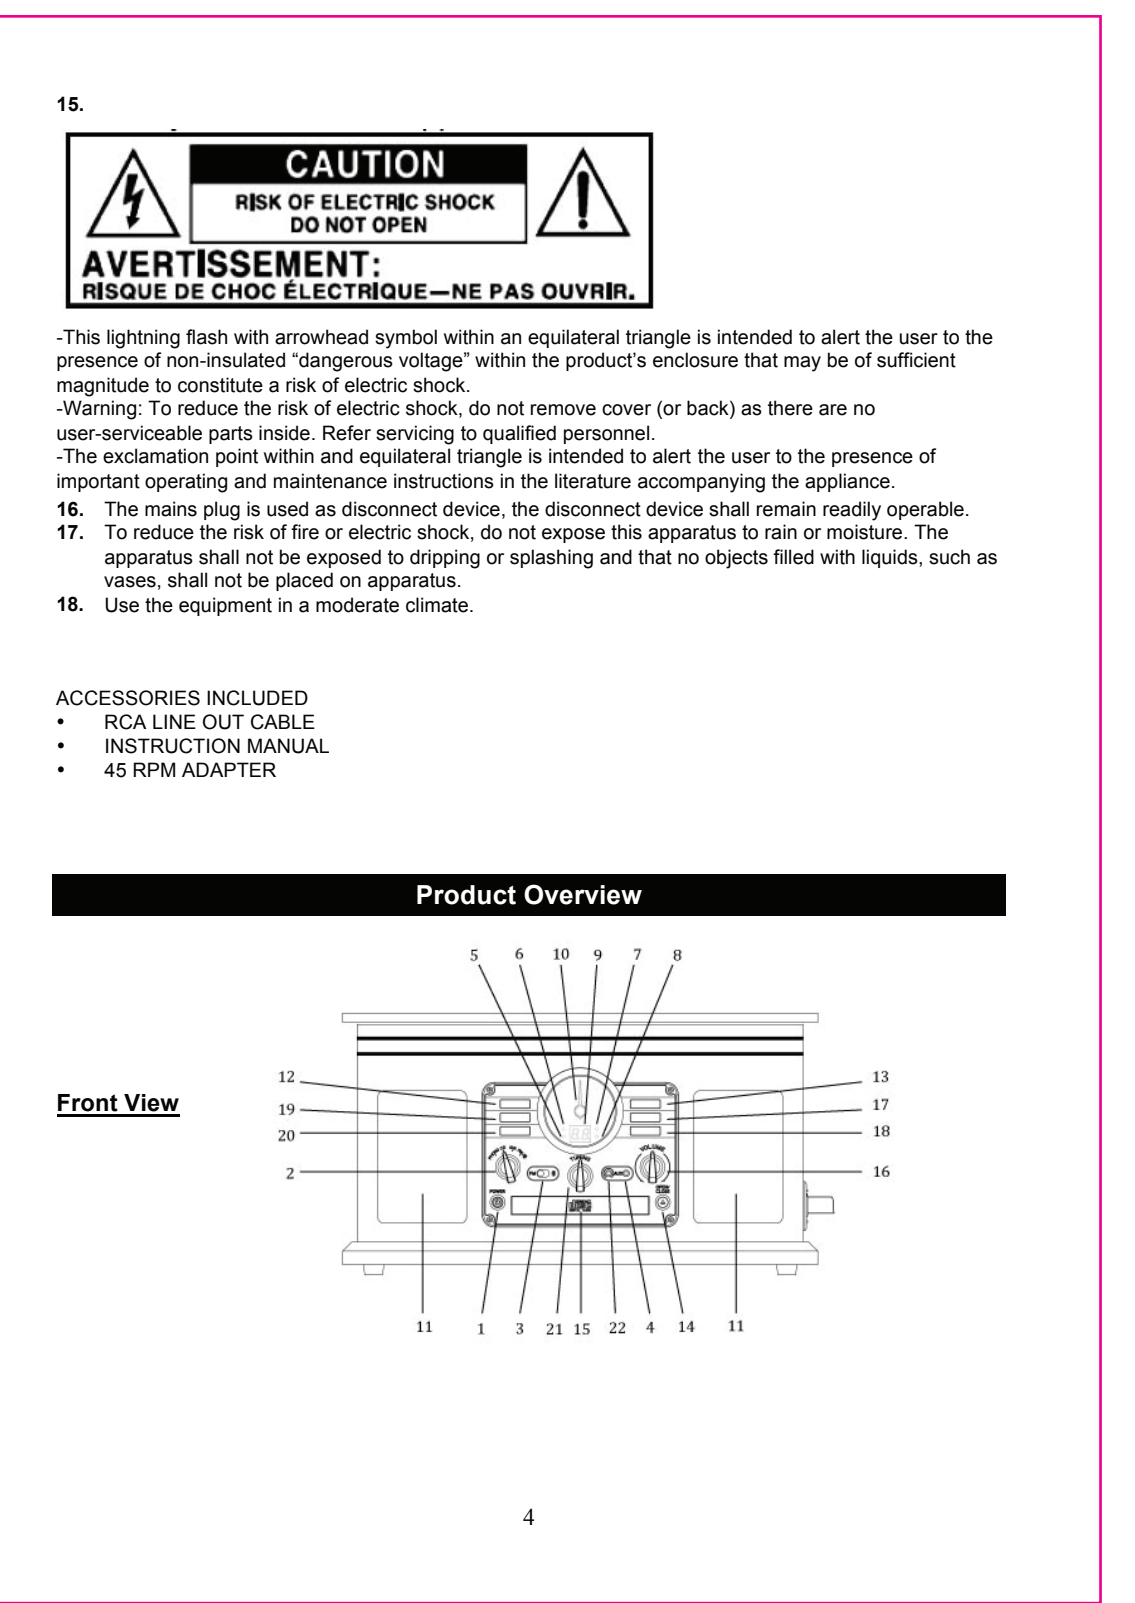 

MODEL VTA-200B
QUINCY
6-IN-1 MUSIC CENTER

Listening to an External Audio Device (Bluetooth Mode)

In BT (Bluetooth) mode, this unit can play music from external devices which have a built-in Bluetooth feature.

GETTING CONNECTED USING BLUETOOTH

- Select "FM" mode.
- Slide the slide switch on "BT" and the ST/BT indicator will flash blue.
- Turn ON the Bluetooth function on your external device.

NOTE: The effective distance between your external device and this apparatus is 10 meters (33ft).
4. Wait for "Victrola QuinCY" to appear on the paired devices list of your external device and press "Victrola QuinCY".
5. In some instances, a window will ask you a password. Fill in "0000" then press "OK" on your external device.
6. A few seconds later your Bluetooth connection is successful and the blue indicator stays lit.
7. Press the PLAY/PAUSE button (▶) to begin playback.
8. To temporarily pause playback, press the PLAY/PAUSE button (▶). Press again to resume.
9. To skip to the previous or next tracks, press the corresponding skip button (◀ or ▶) to listen.

NOTE: Stop, fast forward / rewind are only available on your external device.

Listening to a Cassette Tape

- Load an audio cassette tape into the unit (located on the left side of the unit). Playback will automatically begin.
- Press button halfway to Fast Forward the tape.
- Press button lightly and playback will resume.
- Press button completely down to end playback and eject tape.

NOTE: When loading in a cassette tape, the SELECTION KNOB function will be temporarily overridden until the cassette tape is ejected.

Maintenance / Proper Handling

Compact Disc Handling

- Always place the disc on the disc tray with the label side facing upward (compact discs can be played/recovered only on one side).
- To remove a disc from its storage case, press down on the center of the case and lift the disc.
- To clean a disc, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
- Never use such materials as alcohol, acetone, or other solvents, or abrasive sprays or fluids, benzine or thinner to clean discs. They will irreparably damage the disc's plastic surface.
- Discs should not be returned to their cases until they are protected from dust and scratches.
- Do not expose discs to direct sunlight, high humidity, or high temperature for extended periods of time.
- Use soft uncoated felt-tipped pens to write information on the disc label side. Never use a ball-point or hard-tipped pen, as doing so may damage the recorded side.
- Do not use equipment which emits radio waves, such as mobile phones, or other devices that may interfere with the disc's operation.
- Never handle a disc with dirty fingers.
- Never insert a disc that has a crack on the surface.

Listening to the FM Radio

- Select "FM" mode.
- Slide the slide switch to "FM".
- Turn to the desired station using the Radio Tuner Knob.

Adjusting for Best Reception
FM broadcast: Extend and reposition the FM antenna.

Listening to an External Audio Device (AUX Mode)

In AUX (auxiliary) mode, this unit can play audio from an external audio source (MP3 Player, Portable CD Player, etc.)

Playing via 3.5mm AUX-IN Jack on the Front of Unit:

- Turn the unit ON by pressing the POWER button.
- Set the FUNCTION KNOB to the AUX position.
- Connect the 3.5mm aux-in cable (included) into the 3.5mm AUX-IN Jack to play an external audio source, such as CD player, tablet, MP3 player, etc.

Programmed Playback
Up to 20 tracks can be programmed for play in the desired order.

Note:
- Programmed playback works with CD discs only.
- Repeat playback works with CD discs only.

FCC Statement

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, which may cause undesired operation.

FCC & IC RADIATION EXPOSURE STATEMENT:
This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS:
Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'émetteur et votre corps. Cet émetteur ne doit pas être installé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

IC WARNING

-English:
This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

-Français:
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

AVERTISSEMENT
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRI

This lighting flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
-Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
16. The mains plug is used as a disconnect device, the disconnect device shall remain readily operable.
17. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
18. Use the equipment in a moderate climate.

ACCESSORIES INCLUDED

- RCA LINE OUT CABLE
- INSTRUCTION MANUAL
- 45 RPM ADAPTER

CALIFORNIA PROP 65 WARNING

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Symptom	Possible Cause	Solution
BLUETOOTH		
- No sound	- The unit is not switched to Bluetooth mode. - Your device's and/or the unit's volume is not turned up. - Your device is too far from the unit or there is some obstacle between your device and the unit.	- Ensure the unit is switched to BT mode. - Move your Bluetooth device closer to unit. - Turn up the volume on your portable device and/or the unit. - Turn OFF your Bluetooth device and unit. Then power them both back ON. - Bring your device closer to the turntable.
- Sound has a lot of static	- Your device is too far away	- Bring your device closer to the turntable.
- Unable to pair with a Bluetooth device	- Your device doesn't have Bluetooth connectivity. - The Bluetooth pairing is not successful.	- Confirm that your device is Bluetooth compatible. - Re-pair the unit and device again.

Please Note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.
Made in China.
Bluetooth is a registered trademark of Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Warranty Information

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

Canada and US Territories

United States

Victrola (Innovative Technology Electronics, LLC) warrants to the original retail purchaser that this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product.

 
To obtain a replacement under the terms of this warranty, you must contact the dealer from which it was purchased with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

Except as limited below, if the product proves defective in either material or workmanship within one (1) year from the date of purchase, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced with an identical model, Victrola will issue a merchandise credit for the purchase price to be redeemed at victrola.com.

Limitations:

- This limited warranty does not cover failure of the product arising, in whole or in part, from improper installation, storage, transportation, misuse, abuse, accident, neglect, mishandling, unauthorized repair, modification, or wear from ordinary use or environmental deterioration.
- This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.
- This limited warranty is null and void for products not used in accordance with Victrola's instructions.
- This limited warranty terminates if the original retail purchaser sells or otherwise transfers this product.
- This limited warranty is null and void for defects or damage caused by installation or repair performed by any person or entity other than a Victrola authorized installer or dealer.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, jurisdiction to jurisdiction or country to country. All express and implied warranties for the product, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, are limited in time to the term of this warranty. Some states, jurisdictions or countries do not allow the exclusion of certain implied warranties or conditions or limitations on how long an implied warranty or condition lasts, so this limitation may not apply to you. Victrola's responsibility for malfunctions and defects in hardware is limited to replacement or repair as set forth in this warranty statement. Victrola does not accept liability for special, punitive, consequential or incidental damages or losses, whether direct or indirect, including without limitation, any liability for third party claims against you for damages or losses or for products not being available for use. The Victrola may be responsible for the amount you paid for the product that is the subject of the claim. Some states, jurisdictions or countries do not allow the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitation or exclusion may not apply to you.

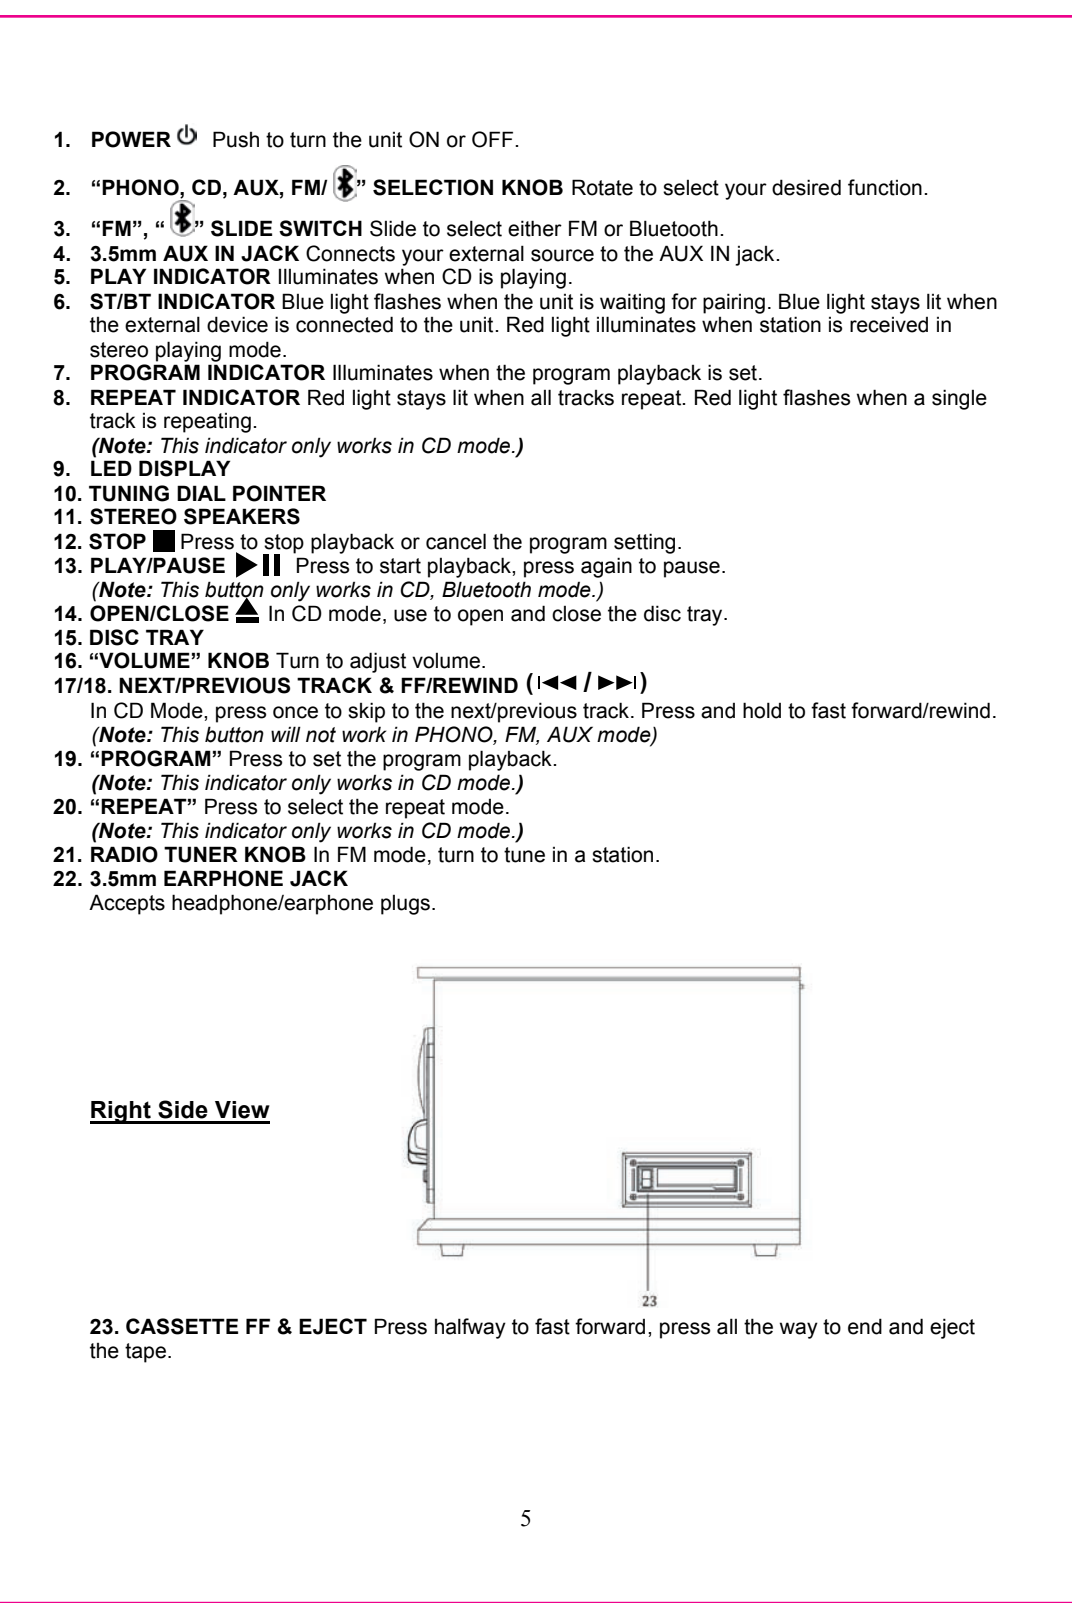

MODEL VTA-200B
QUINCY
6-IN-1 MUSIC CENTER

Right Side View

23. CASSETTE FF & EJECT Press halfway to fast forward, press all the way to end and eject the tape.

Listening to a Cassette Tape

- Load an audio cassette tape into the unit (located on the left side of the unit). Playback will automatically begin.
- Press button halfway to Fast Forward the tape.
- Press button lightly and playback will resume.
- Press button completely down to end playback and eject tape.

NOTE: When loading in a cassette tape, the SELECTION KNOB function will be temporarily overridden until the cassette tape is ejected.

Maintenance / Proper Handling

Compact Disc Handling

- Always place the disc on the disc tray with the label side facing upward (compact discs can be played/recovered only on one side).
- To remove a disc from its storage case, press down on the center of the case and lift the disc.
- To clean a disc, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.
- Never use such materials as alcohol, acetone, or other solvents, or abrasive sprays or fluids, benzine or thinner to clean discs. They will irreparably damage the disc's plastic surface.
- Discs should not be returned to their cases until they are protected from dust and scratches.
- Do not expose discs to direct sunlight, high humidity, or high temperature for extended periods of time.
- Use soft uncoated felt-tipped pens to write information on the disc label side. Never use a ball-point or hard-tipped pen, as doing so may damage the recorded side.
- Do not use equipment which emits radio waves, such as mobile phones, or other devices that may interfere with the disc's operation.
- Never handle a disc with dirty fingers.
- Never insert a disc that has a crack on the surface.

Specifications

GENERAL	
Power Requirement	12V D.C. 2A
Power Consumption	24W
Dimension (W x H x D)	450 x 235 x 340mm / 18 x 10 x 13.4in (approx.)
Weight	4.7kg / 10.3lb (approx.)
AMPLIFIER	
Output Power	4.8 W (5 W)
Frequency Response	60 Hz to 20,000 Hz
SPEAKER SYSTEM	
Type	2-way
Output Power	Max. 6W
FM Radio	88 to 108 MHz
CD PLAYER	
Frequency Response	60 to 20,000 Hz +/-4dB
Signal-to-Noise Ratio	>91 dB (S/N)
CASSETTE PLAYER	
Track System	2 Track, 2 channel stereo
Speed	33-1/3 rpm, 45 rpm and 78 rpm
Wow and Flutter	<0.4% (WRMS)
Head and Reel	1250 x 8300 Hz +/-4dB
RECORD PLAYER	
Note	DC servo motor Drive System
Speed	33-1/3 rpm, 45 rpm and 78 rpm
SN Ratio	More than 50 dB
Cartridge Type	Ceramic Stereo Cartridge
Stylus	TNP-S1
BLUETOOTH	
Bluetooth Version	Bluetooth V5.0
Bluetooth Frequency	2.402GHz-2.480GHz
Operating Distance	10 meters (33 ft.)
POWER ADAPTOR	
Model No.	DGHP0005
Input</	