

YI Action Camera 4K User Manual

SIZE:90X90mm

Front:

Thank you for choosing YI Action Camera 4K

1.Camera kit

2. Getting to know the camera

3.Insert/Remove Micro SD card(sold separately)

To insert Micro SD card:
1. Place card in the slot with label facing front of battery. The card will drop into place when fully inserted.
To remove Micro SD card:
Press finger nail against edge of card and lightly push further into camera. Card will spring out to be removed.

To insert Micro SD card:
1. Press arrow key, then pull following the arrow direction.
2. Close the battery cover to confirm the door is closed firmly.
To remove the battery:
1. Press arrow key, then pull following the arrow direction.
2. Grasp the battery pull-tab and remove from the battery slot.

Tip: We recommend using a 16-32GB micro SD card, class 10 or UHS-1

4.Insert/Remove the battery

5.Charge the battery

1. Connect the camera to a power source or computer with the Micro USB cable.
2. The camera will be powered on and charging, using a computer.
3. The red status light remains ON until the battery is fully charged.

6.How to use the camera

1) Powering on and off:
To power on: Press the Power/Shutter Button. The screen will turn on and there will be a sound.
To power off: Press and hold the Power/Shutter Button for 5 seconds. The screen will turn black and there will be a sound.
With the app, you can control the camera or transfer files from the camera to your phone.

7) Connect to YI Action Camera App

To control the camera remotely access the YI Action Camera App.
1. Scan the QR code to download YI Action Camera App and install the app on your smartphone or tablet.
2. Turn on Wi-Fi in the camera settings menu, connect with smartphone or tablet with the network name and password (Refer to Camera settings/7).
3. Open the YI Action Camera App.
4. Select the camera you want to control and share photos/videos.
5. Select the camera you want to use and select the camera settings (Refer to Camera settings/7).

3) Firmware update
The most current camera firmware will be downloaded automatically after you finish your first connection with your smartphone and camera. For the best performance, please use the most updated version.
Update through the App: Make sure the camera is connected to a power source or has more than 50% battery life.

Back:

4) Home display

Recording mode and parameter (Time count of recording/Time count of available storage)
Capture mode
Playback

Icon Glossary

5) Adjusting the capture mode

Slide up or down to review all modes, then select the desired mode.

6) Capture preferences

Each mode has a settings menu for instruction on individual capture preferences.

7) System settings

Reset your settings to factory default

8) Playback photos and videos

Tip: Burst and Time lapse files will display as the first photos in the series.

9) Quick settings

Slide down and select desired preference

10) Upload files

Connect the camera to the computer using the USB cable to transfer photo and video files to the computer.

11) Technical support

IMPORTANT SAFETY GUIDELINES
1. READ the user manual carefully.
2. CLEAN ONLY with dry cloth.
3. DO NOT use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. ONLY USE electrical accessories specified by the manufacturer.
5. To get the best usage out of this product, please consistently update to the latest version of our app and firmware.
Thank you for choosing YI Action Camera 4K.
http://www.yi.com/en

The device complies with Part 15 of the FCC Rules / Industry Canada non-licensed RSS (Canada). Operation is subject to the following conditions: (1) The device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil ne conforme aux prescriptions du Canada relatives aux appareils radio exempts de licence. L'exploitation est autorisée aux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique qu'il recevra, y compris le brouillage qui pourrait nuire à son fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with RF specifications when used near your head or body. This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (FCC). The SAR limit established by the FCC is 1.6 W/kg averaged over one gram of tissue. The highest SAR value recorded by the FCC for this device complies with the FCC SAR limit. The highest SAR value recorded by the FCC for the device type when using all the listed cases (10g) and when properly worn on the body is 0.230 W/kg.

CAUTION: USE OF EXTERNAL BATTERIES IS RECOMMENDED BY AN INDIRECT TIME DEPENDENT USE OF BATTERIES ACCORDING TO THE INSTRUCTIONS.

Le présent appareil n'est pas étiqueté et susceptible d'émettre ou de recevoir des ondes radio. Veuillez lire les batteries avant de les utiliser.

CE 1313
FCC/ICSE 1313