

Augreener

User Manual

Battery-free wireless doorbell

Model Number:AG101F

Operation instruction:

1.Important

- 1) Do not get the chime wet.
- 2) Do not disassemble, repair or modify.
- 3) Please screw in securely.
- 4) Do not exceed electrical ratings.

2.Attention

- 1) Avoid locating the Button/Chime on or directly near metallic surfaces as this may reduce the operation range.
- 2) When locating the Button onto a UPVC door, always check the operating performance before final installation, internal metal frame may affect performance.

To find ideal locations for the chime kit:

- Try adjusting the location of the Button to the Left/Right or place on external wall.
- Try adjusting the location of the Chime according to the "Range Guide".

3.Pack Contents

Button x1, Chime x1, Adhesive Pad x1, User Manual x1, Button Mounting Base x1

4.Installation Instructions

1) Chime

Plug the Chime into the outlet. The chime will perform better if keeping it away from electric equipment.

2) Button

- Clean the surface where you intend to mount the Button and the back of the Button.
- Before mounting the Button, please run a test. Put the Chime and Button where you want to mount. Close all the doors when you test. If the Chime does not sound, please see- Troubleshooting.

DO NOT install button on UPVC door frames.

DO NOT install button on Metal surface.

A.Mount the Button with screws

	Place the button mounting base on the required place of the wall. Drilling holes on the wall (The arrow on the mounting base points up).
	Screw the two screws into mounting base. Push the Button into the position shown in the below figure.
Front view Rear view	Carefully push the button down to the stop.
	Installation complete.

B.Or mount the Button with adhesive pad

	Peel back one side of adhesive pad. Attach adhesive pad on the back of the Button.
	Peel back the non-adhesive paper.
	Press the Button onto the desired positions for about 30 seconds.

5.Operating Instructions

1) Work Mode


The Chime has been paired to the Button before they left factory. After installation, it's ready to work. When you press the Button, the Chime will sound with indicator light flashing.

2) Melody Selection

Short press the round button, the tune will change.



Re-plug the Chime, the tune will become "Ding Dong Ding Dong"

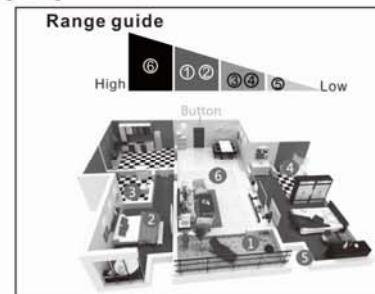

3) Learn Mode


The Button has been paired to the Chime at factory. Unless you need to add additional Button or additional Chime, you don't need to re-pair it.

	Long press the round button on the Chime for 5 seconds until the indicator light off to enter the Learn Mode.
	Press the Button twice in one minute, the Chime will ring with the indicator light flashing to confirm that the Button has been paired to the Chime. If not, press the Button twice again.
	Complete and exit the Learn Mode automatically.

Note: No operation in 1 minute or short press Button once, the chime will exit Learn Mode.

4) Additional Button

Following the instructions in Learn Mode, pair each additional Button to the Chime. Note: Maximum of 3 Buttons can be learnt to a single Chime.

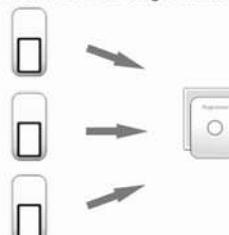

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC Statement:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

5) Additional Chime

Following the instructions in Learn Mode, pair each additional Chime to the Button.

Note: No limit to the number of Chimes.



6.Trouble Shooting

The Chime does not sound.	1. Make sure the Chime is plugged in. 2. Make sure the Button has been paired to the Chime.
Indicator light off	1. Make sure the Chime is plugged in. 2. Check if the Chime is in Learn Mode.
Reduced range	1. Metal structures, including door frames, can result in reduced transmission range. Avoid mounting the Button or Chime on or near metal structures. 2. Other electric equipment can cause radio interference that affects your Chime. 3. Walls, doors and ceilings will reduce the range.

Attentions: If the issue is still not resolved by the above methods, please unplug the Chime and wait for about 3 seconds till the indicator light off, then re-plug it in. If that does not solve the problem, please contact customer service.

7.Specifications

Specifications	Chime	Button
Power Supply	AC 100-230V	Self-powered
Operating Temperature	-10°C ~ +40°C	-40°C ~ +60°C
Working range	120m (open area)	
RF Frequency	433MHz	
Sound Level	85dBA@3ft	-
Power Consumption	<350mW	-
Water Proof	-	Yes
Operating Forces	-	10N
Dimensions	68X86X53 mm	46X88X31 mm
Weight	80 g	62 g
Ring Tone	25 polyphony ring tones	-