



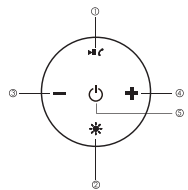

POWER PULSE

LED Bluetooth Speaker

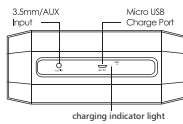

- FEATURES**
1. Play/Pause/Answers/End Call,
 2. LED mode
 3. Previous Song/Volume: "-"
 4. Next Song/Volume: "+"
 5. Turn on / Turn off

1

PACKAGE CONTENTS

- LED Bluetooth® Speaker
- (Optional) 3.5mm Aux Cable
- Micro USB Charging Cable
- Operation Manual

KEY FEATURES

- Color flashing LED lights
- Compatible with most Bluetooth®-enabled devices
- Lightweight and portable design
- Great for travel

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other fluids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the unit at excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or installed batteries to excessive heat, such as direct sunlight, or open flame.

2

CHARGING THE SPEAKERS

The speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker.

Connect the USB cable to a computer USB port and the USB plug to the charging jack of the speaker. The red LED light will illuminate while the speaker is charging.

A full charge of the battery takes around 2-3.5 hours. When the battery is fully charged the red LED charging indicator lights will turn off. At this point, disconnect the speaker. The speaker will then be ready for use.

SPEAKER OPERATION

1. Connect one end of a micro USB cable (included) to your computer or a compatible USB AC/DC Adapter (not included) & the other end of the micro USB cable to the speaker.

2. Press hold the "ON" button to turn on. The green power indicator light of the back will come on.

3. Plug the audio jack into the audio playing device.

4. Ensure that your audio device is on.

5. Adjust the volume control on the audio playing device as needed.

TURNING SPEAKERS ON/OFF

Power On: Long press "ON" button to turn on

Power Off: When speaker turns on, Long press "ON" button to turn off

How to Connect & Pair with BT.

1. Ensure the speakers are turned on. If they are not, please turn on the speaker first before pairing.
2. When turn on the device will then beep. This will indicate your speaker is now in pairing mode.
3. Place the speaker and the BT device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 33 feet apart.
4. Ensure BT is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable BT on your device.

3

5. Once you have activated BT on your device, select the "Power Pulse" from the list of available BT device.
6. If pairing is unsuccessful, turn off the speaker first and repair following the aforementioned steps. Once you have paired the speaker with a device, the earphones will remember this device and will pair automatically when the device's BT is activated and in range. You don't need to re-pair any previously connected devices.

Using a 3.5mm AUX Cable

1. Using the included 3.5mm AUX cable, connect one end of the cable into the speaker's 3.5mm AUX input.
2. Connect the other end into the 3.5mm input of the device you wish to play music from.
3. Move the power switch into the ON position.
4. Begin playing music from your connected device. Previous song/next song function on speaker may not work in this mode.

Charging the Speaker

1. The speaker comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the speaker.
2. Connect the USB cable to a computer USB port and the Micro USB plug to the charging jack of the unit.
3. Full charge of the battery takes up to 2 hours (under 1000mAh input). Disconnect the speakers at this point - the speakers will then be ready for use.
4. When the battery is low, a warning beep will sound automatically - upon hearing this, please charge you device immediately so as not to affect usage.

SPECIFICATIONS:

BT: 2.1+EDR
 Range: Up to 33ft(10m)
 Frequency: 100Hz-20kHz
 Battery: DC3.7V/1200mAh
 Speaker Output: 3W*2
 Charge Method: Micro USB Cable.

4

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.