

Instruction Manual

YoSmartHub

(Central Controller)




Easy, Simple, Intuitive

KingTing Tech. Corporation

For more information, please visit www.YoSmart.com

Product Description

| Name | YoSmartHub | Weight | ~ 155g |
|-----------------------------|-------------------------|---------------------------|----------------------------------|
| Model | KT-MC-U01B / KT-MC-U01W | | |
| Input voltage | DC 5V | Max Current | 300mA |
| Must Have | Wired internet access | Temperature Preference | 0°C ~ +50°C |
| Signal Communicated Through | RF 915MHz | Working Range | Within eyesight or <= 100 meters |

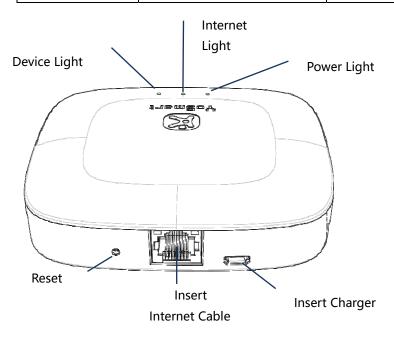


| Indication Lights | When it is | It means |
|-------------------|----------------|---------------|
| Power | Lid | Connected |
| Internet | Flashing | Connected |
| | Lid | Not Connected |
| Device | Green flashing | Connected |
| | Red flashing | Resetting |

Installing the hardware

1. Connecting the hardware

- 1) Use the internet cable (provided) to connect the device to the router;
- 2) Connect the Micro-USB power (provided) to the device
- 3) Connect the device to power

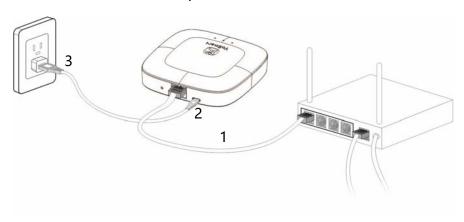

2. To Install it on a wall



Instructions

1. Downloading and installing App

There are three ways to acquire the App for this software:

- 1) Scan the QR code printed on box with phone.
- 2) Search YoSmart on App Store and download the App.
- a) Visitwww.YoSmart.com, go to support and download;



After App installation, runYoSmart , and follow the instructions to register an accountand connect to the device.

2. Resetting the Hub

While the Central Controller is charged, insert anything round (we recommend a paper clip) that is below the size of 1.6mm inside "Reset"; pressing it once will reset the device.

3. Factory Reset

Warning: After factory resetting, all settings will be cleared.

Power off the Hub (by unplugging the Micro-USB power connector)

- 1. Use a1.6mmround object topress the Reset button inside the hardware, and then plug in the power connector while holding the button.
- 2. After plugging in the power connector, you will hear a beeping sound. Keep pressing on the Reset button until you hear a higher pitched beeping sound.
- 3. Release the Reset button, and you are set.

Warnings



- 1. Keep away from hot surfaces;
- 2. No water-proof, do not get it wet;
- 3. Use provided power supply adapter.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.