


FIRST TIME USE

1	Make sure that the Wicked Audio Hum 1000 headphone is charged, your phone turned on, with the Bluetooth feature enabled.	
2	Hold Bluetooth on/off button for 3 seconds and the LED will flash red and blue.	
3	Your mobile phone should detect "WICKED HUM 1000."	
4	Select "WICKED HUM 1000" to pair and once succesfully paired, the LED will slowly flash blue.	
5	To turn on noise cancelling, slide ANC Power button to on position. The ANC power L.E.D. will show green.	

WHAT'S WHAT

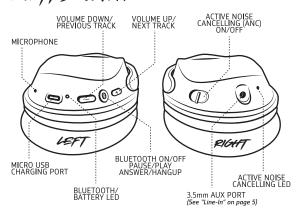

FUNCTIONS

₿	LONG PRESS	BLUETOOTH ON/OFF
8	QUICK PRESS	PLAY/PAUSE, ANSWER CALL/HANG UP
+	QUICK PRESS	NEXT TRACK
-	QUICK PRESS	PREVIOUS TRACK
+	LONG PRESS	VOLUME UP
-	LONG PRESS	VOLUME DOWN
Θ	UP	ACTIVE NOISE CANCELLING ON
	DOWN	ACTIVE NOISE CANCELLING OFF

HANDY L.E.D. INDICATORS

RED & BLUE	PAIRING MODE / DISCONNECTED
FLASHING BLUE	BLUETOOTH IS ON AND CONNECTED
SOLID RED	BATTERY IS CHARGING
SOLID BLUE	BATTERY IS FULLY CHARGED
GREEN (right side)	ACTIVE NOISE CANCELLING IS ON

TROUBLESHOOTING

Product does not turn on:

1 - Make sure to hold On/Bluetooth button for 3+ seconds, LED will turn on. 2 - Make sure battery is charged. Charge battery for at least $30\ \mbox{minutes}$ and power on again.

Your Bluetooth device is unable to search for/locate/pair with Wicked Audio Bluetooth product:

- l Be sure your Bluetooth device has Bluetooth capabilities turned on/activated
- 2 Be sure your Wicked Audio product is in pairing mode (LED will be flashing Red AND Blue.) The Hum 1000 is in pairing mode automatically if a recognized device cannot be found and the product's Wireless capabilities are turned on.
- 3 Delete/Forget/Unpair the Wicked Audio product from your Bluetooth list on your device or other nearby devices and search again.
- 4 Double check the device is not paired to another device within 100ft. "Forget" the Wicked Hum 1000 from the list of available Bluetooth devices. Turn Hum 1000 off and repair to selected device. Hum 1000 will flash red/blue when in pairing mode and only blue when already connected to a device.
- 5 If still unable to search for/locate/pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search
- 6 Turn the Hum 1000 off and charge for at least 30 minutes. Try to pair again after battery is charged.

Disconnected after your Bluetooth device successfully connected/paired with your Wicked Audio product: 1 - The Bluetooth signal has been blocked with an obstruction/exceeded

- Bluetooth range between your Bluetooth device and the Wicked Audio product OR the "Power/Bluetooth" button was held down for too long and disconnected. You will need to manually select "Wicked Endo" in your Bluetooth list on your
- device to successfully pair your Endo to your device.

 2 Check to see if the battery is at low power, charge if needed
- 3 The Hum 1000 was out of range of the device for too long and powered
- 4 Another Bluetooth audio device was turned on within range and your device is now connected to that device instead of the Hum 1000. Turn off second audio device, and pair again to the Hum 1000.

Unable to connect/pair your desired Bluetooth device with your Wicked Audio product after connecting your Wicked Audio product with multiple Bluetooth devices:

- 1 Your Wicked Audio product will attempt to connect/pair with last Bluetoqth device it paired with.
- 2 Turn off Bluetooth capabilities on other Bluetooth devices in your vicinity that were recently paired to your Wicked Audio product. This will allow your desired Bluetooth product to connect with your Wicked Audio product.
- 3 If still unable to pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search again

No sound when talking with someone on the phone using mic on Wicked Audio $\begin{array}{l} \textbf{product:} \\ 1 - \textbf{Make sure the Wicked Audio product is successfully paired with your} \end{array}$

- 2 Increase the volume of your Bluetooth device and/or Wicked Audio product.
 3 Make sure no fabric, dirt, or other gunk is obstructing the mic.

- No sound when playing music:

 1 Increase the volume of your Bluetooth device and/or Wicked Audio product.

 2 Make sure the Wicked Audio is successfully paired with your Bluetooth device.

 3 Make sure the Hum 1000 is charged.

Unable to charge:

- 1 Wicked Audio product will have a solid red LED when charging and the LED
- will be solid blue when fully charged.

 2 Make sure the USB cable is connecting well with charger and the micro USB cable is connecting well with your Bluetooth device.

 3 Check to see if another device will charge from the same power source.

- Active Noise Cancelling not working while using aux cord:

 1 Switch ANC on/off button to "On" position. (This is up when wearing the headphone.) L.E.D. should show green.

 2 Charge battery. Try ANC on/off switch again after battery is fully charged.

LINE-IN MODE

When you'd like to use the headset as normal wired headphones (no Bluetooth), plug the aux cord into the "line-in" port. This is handy for listening to movies on the plane, if you don't want to drain the battery, or if the battery is dead.

ANC (Active Noise Cancelling) will work in line-in mode. Make sure the battery is charged to use ANC while in line-in mode.

HELPFUL TIPS

- 1 When the line-in port is being used, the button functions cannot be used. Return your product to Wireless mode to be able to use the full range of
- 2- It is recommended to turn off the Hum 1000 when using the aux cord as the battery will still drain if the Hum 1000 is not in the off pos
- 3 You can have the ANC (Active Noise Cancelling) on or off in either Bluetooth mode or Line-In Mode. You can make this decision on how you want to conserve battery life or if you want it off

SPECIFICATIONS

NRIVER 40 mm Neodymium **CHARGE TIME** 2 Hours



WICKED AUDIO, INC. 875 W 325 N Lindon, UT 84042 WICKEDAUDIO.COM





FEATURES

ACTIVE NOISE CANCELLING

Extra soft foam combine with luxury synthetic leather

Control your music without pullin

SOFT TECH CUSHIONS

COMFY FIT GOLD-PLATED PLUG

Better conductivity
HANDS-FREE

ENHANCED BASS

WIDE RANGE

range of sound HIGH FIDELTIY

RECHARGEABLE BATTERY

ALL DAY WEAR

VOLUME CONTROL

VOLUME CONTROL

ALL DAY WEAR

RUBBERIZED FINISH

VOLUME CONTROL

RUBBERIZED FINISH

VOLUME

Enhanced sound with Digital Sound Processing

Extra protection, feels good too
TOTAL EAR COVERAGE

PRECAUTIONS

LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A VOLUME AS POSSIBLE.

Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.

SAFE USE & HAZARD WARNINGS

90 dB SPL at 8 hours, 95 dB SPL at 4 hours, 100 dB SPL at 2 hours, 105 dB SPL at 1 hours, 110 dB SPL at 30 min, 115 dB SPL at 15 min, 120 dB SPL: Avoid as damage may occu

ADVERTENCIA

ESCUCHA DEL AUDIO NIVELES EXCESIVOS DE VOLUMEN PUEDE CAUSAR DAÑOS PERMANENTES AUDIENCIA. SE USE COMO VOLUMEN MÁS BAJO POSIBLE.

Durante la exposición a niveles excesivos de ruido puede dañar los oídos resultando en ruido permanente pérdida de audición inducida (PAIR). Por favor, use las guientes pautas establecidas por la Administración de Seguridad de Salud cupacional (OSHA) de tiempo máximo que los niveles de presión de sonido antes de que se produce una lesión auditiva.

USO SEGURO DE PELIGROS Y ADVERTENCIAS

90 dB SPL a 8 horas, 95 dB SPL a 4 horas 100 dB SPL a 2 horas, 105 dB SPL a 1 horas, 110 dB SPL a 30 minuto, 115 dB SPL a 15 minuto, 120 dB SPL: Evite que se puede producir daños

LIMITED ONE-YEAR WARRANTY

GARANTÍA DE POR VIDA

Developed in Utah, U.S.A.

Guarde su recibo para obtener servicio de garantía. Hora de salida www.wickedaudio.com para más deta**ll**e:

FCC ID: 2AMF7WI-BN 100X

FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is engouraged to try to correct the interference by one or grape of the following user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receive
- Connect the equipment into an outlet on a circuit different from that to which the
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Limitation of Liability Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

In no event, under any cause of action of theory of liability, shall Wicked Audio Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the Wicked Audio products, even if the Wicked Audio product has been advised of the possibility of such damage that one may occurred. Without limiting the foreogen you understand of such damages that one may encounter. Without limiting the foregoing, you understand and agree that Wicked Audio has no liability for any damages or destruction to the consumer and agree that Wicked Audio has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained in inside or outside the Wicked Audio products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under applicable law.



©RoHS 🗏 🛟