


# **REVERB BT BLUETOOTH HEADPHONE**

## FUNCTIONS

TONOTIONO		
ტ	LONG PRESS	Power On/Off
ტ	SHORT PRESS	Play/Pause/Answer/Hang Up
+	SHORT PRESS	Next Track
_	SHORT PRESS	Previous Track
+	LONG PRESS	Volume Up
	LONG PRESS	Volume Down

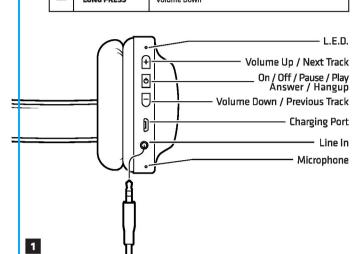

## FIRST TIME USE

- 1 Make sure that the Wicked Audio Reverb BT is charged, your
- device turned on, with the Bluetooth feature enabled. 2 - Turn on the Reverb BT and the LED will flash red and blue.
- 3 Your device should detect "Wicked Reverb." 4 - Select "Wicked Reverb" to pair and once successfully paired, the
- LED will slowly flash blue.

## LINE IN MODE

When you'd like to use the Reverb BT as normal wired headphones (no Bluetooth), plug the aux cord into the "line-in" port. This is handy for listening to movies on the plane, if you don't want to drain the battery, or if the battery is dead.

## HELPFUL TIPS

- 1 When the line-in port is being used, the button functions cannot be used. Return your product to Wireless mode to be able to use the full range of features.
- 2 When the line-in port is being used, the Reverb BT will automatically shut down the Bluetooth capabilities if they are not already turned off.

## HANDY L.E.D. INDICATORS

TROUBLESHOOTING

**PRODUCT DOES NOT TURN ON:** 

minutes and power on again

be flashing Red AND Blue)

Red/Blue **Flashing Blue** Solid Red

on/activated

3

Pairing Mode / Disconnected Bluetooth is on and connected Battery is charging Battery is fully charged

**1** - Hold down power button for 3-5 seconds until LED turns on

2 - Make sure battery is charged. Charge battery for at least 30

FOR/LOCATE/PAIR WITH WICKED AUDIO BLUETOOTH PRODUCT:

1 - Be sure your Bluetooth device has Bluetooth capabilities turned

2 - Be sure your Wicked Audio product is in pairing mode (LED will

3 - Delete/Forget/Unpair the Wicked Audio product from your

4 - If still unable to search for/locate/pair with Wicked Audio

Bluetooth list on your device or other nearby devices and search

Bluetooth product, please restart your Bluetooth device and the

YOUR BLUETOOTH DEVICE IS UNABLE TO SEARCH

### **DISCONNECTED AFTER YOUR BLUETOOTH DEVICE SUCCESSFULLY** CONNECTED/PAIRED WITH YOUR WICKED AUDIO PRODUCT:

2

4

- 1 The Bluetooth signal has been blocked with an obstruction/exceeded Bluetooth range between your Bluetooth
- device and the Wicked Audio product  $\boldsymbol{2}$  - Check to see if the battery is at low power, charge if needed

### **UNABLE TO CONNECT/PAIR YOUR DESIRED BLUETOOTH DEVICE** WITH YOUR WICKED AUDIO PRODUCT AFTER CONNECTING YOUR WICKED AUDIO PRODUCT WITH MULTIPLE BLUETOOTH DEVICES: 1 - Your Wicked Audio product will attempt to connect/pair with last

- Bluetooth device it paired with  ${\bf 2}$  - Turn off Bluetooth capabilities on other Bluetooth devices in your vicinity that were recently paired to your Wicked Audio product. This will allow your desired Bluetooth product to connect with your
- Wicked Audio product. 3 - If still unable to pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search again.

### NO SOUND WHEN TALKING WITH SOMEONE ON THE PHONE **USING MIC ON WICKED AUDIO PRODUCT**

- 1 Make sure the Wicked Audio product is successfully paired with your Bluetooth device
- 2 Increase the volume of your Bluetooth device and/or Wicked Audio product

# NO SOUND WHEN PLAYING MUSIC

Wicked Audio product and search again

1 - Increase the volume of your Bluetooth device and/or Wicked

2 - Make sure the Wicked Audio is successfully paired with your Bluetooth device

### **UNABLE TO CHARGE** 1 - Wicked Audio product will have a solid Red LED when charging

and the LED will turn solid blue when fully charged. 2 - Make sure the USB cable is connecting well with charger and the micro USB cable is connecting well with your Bluetooth device

PRECAUTIONS
LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW
A VOLUME AS POSSIBLE.
Over exposure to excessive sourid levels can damage your ears resulting in permanent noise-induced hearing
Cover exposure to excessive solvewing guidelines established by the Occupational Safety Health
Administration (DSBA) or more in the exposure to sound pressure levels before hearing damage occurs.
SAFE USE 6 HAZARD WARNINGS
90 dB SPL at 8 hours, 95 dB SPL at 4 hours, 100 dB SPL at 2 hours, 103 dB SPL at 1 hours, 110 dB SPL at 30
min, 115 dB SPL at 15 min, 120 dB SPL: Avoid as damage may occur

LMITATION OF LIABILITY Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. In no event, under any cause of action of theory of liability, shall Wicked Audio Inc., its distributors or suppliers be liabile to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the Wicked Audio product has been advised of the possibility or with the Wicked Audio product has been advised of the possibility or Audio has no liability for any damages or destruction to the consumer electronics devices or other personal aroperty that are contained in inside or outside the Wicked Audio products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tor! (including negligence) or otherwise), the entire aggregate ilability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or ilimitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under applicable law.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, inc. and any use of such marks by Wicked Audio Inc. is under license. Other trademarks and trade names are those of their respective new

MODEL #: WI-BT835X FCC ID: 2AFM7WI-BT835X

QRoHS 🗵 🛟