



**Bluetooth Headphone
WI-BTP6XH**

DOUBLE RADAGON HEADPHONE

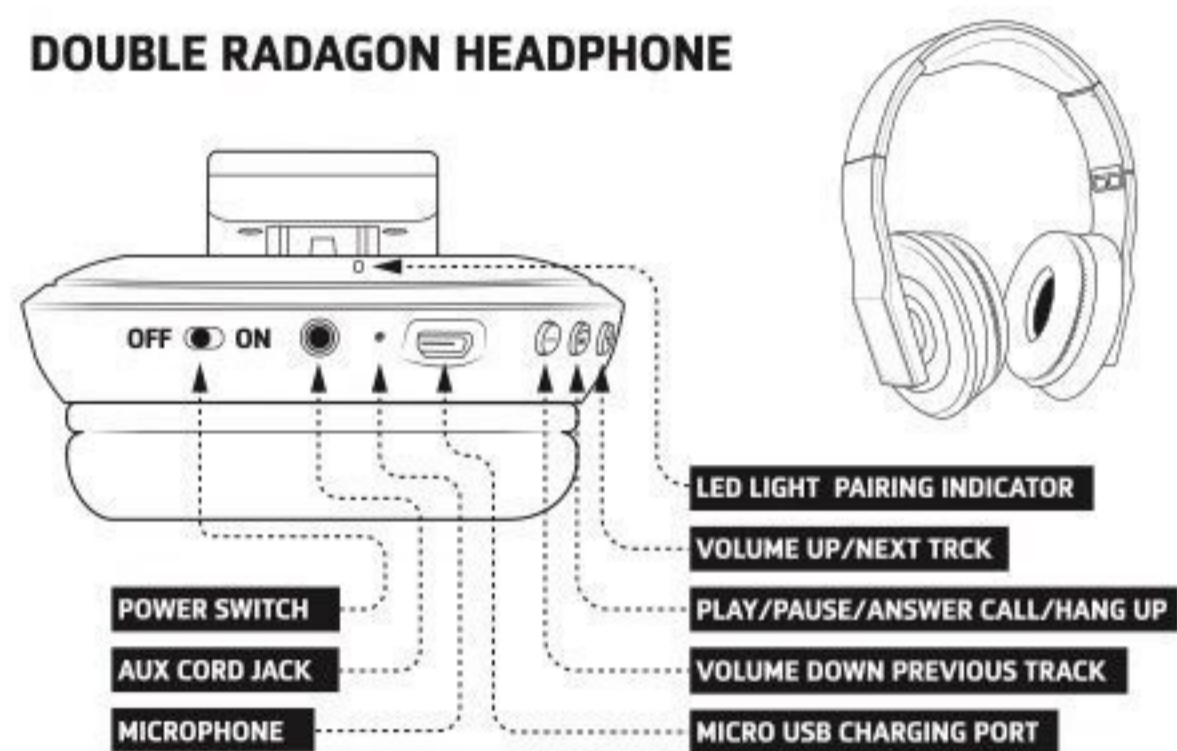

DOUBLE RADAGON PORTABLE SPEAKER

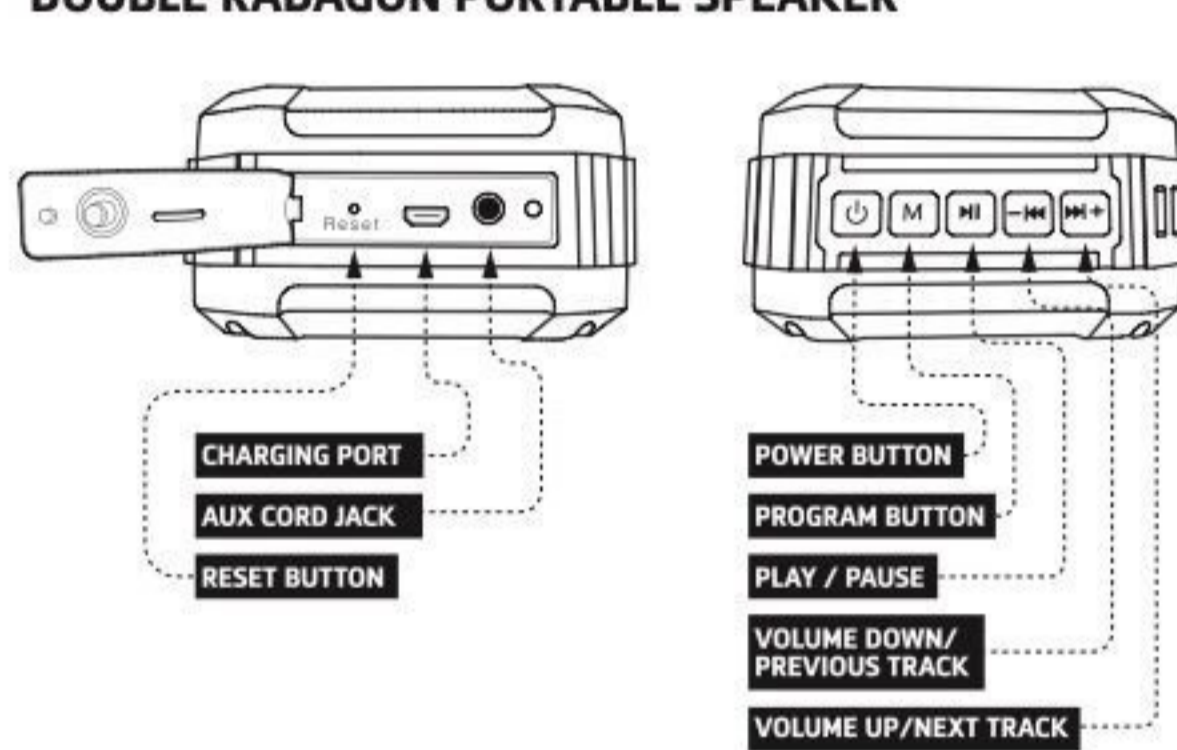

CHARGING THE HEADPHONE OR SPEAKER

To charge the headphone or speaker use the included Micro USB to USB charging cord. Connect the Micro USB (smaller side) into the headphone or speaker and connect USB side into computer or USB wall charger (not included).



The Double Radagon Headphone & Speaker will show a red LED when charging. LEDs will turn off when Double Radagon Headphone & speaker are fully charged.

TURNING ON HEADPHONE OR SPEAKER

Hold down power button 2-3 seconds (Speaker) or slide the switch to "on" position (Headphone) (For pairing instructions, please see "First Time Use" on page 3.)

TURNING OFF HEADPHONE OR SPEAKER

Hold down power button 3-4 seconds until speaker "beeps" and LED turns off (Speaker) or slide the switch to "off" position (Headphone)

FIRST TIME USE (Double Radagon Headphone)

- 1 Make sure the DOUBLE RADAGON Headphone is charged (Please refer to section "Charging the DOUBLE RADAGON Headphone or Speaker" on page 2) and Bluetooth device (phone, computer, tablet etc.) is turned on with the Bluetooth feature enabled (this is usually found in settings).
- 2 Move the power switch to the "on" position to turn on the headphone.
- 3 The Headphone is now in pairing mode and is searching for a device to pair with
- 4 The Headphone will have a flashing red/blue LED light during the pairing process.
- 5 Your device will detect "Wicked Headphone". Select "Wicked Headphone" on your device to start pairing.
- 6 Once selected and paired, the Headphone will announce "Connected". When paired successfully to your device, the Headphone will have a slow flashing blue LED.
- 7 You're ready to go!

FIRST TIME USE (Double Radagon Speaker)

- 1 Make sure the DOUBLE RADAGON Speaker is charged (Please refer to section "Charging the DOUBLE RADAGON Headphone or Speaker" on page 2) and Bluetooth device (phone, computer, tablet etc.) is turned on with the Bluetooth feature enabled (this is usually found in settings).
- 2 Press and hold the power button the speaker (for about 2-3 seconds) until the blue LED turns on in the upper left corner of the speaker grill and you hear a "beep" sound.
- 3 The Speaker is now in pairing mode and is searching for a device to pair with
- 4 The Speaker will have a fast flashing blue LED light

during the pairing process.

- 5 Your device will detect "Wicked Speaker". Select "Wicked Speaker" on your device to start pairing.
- 6 Once selected and paired, the Headphone will "beep" and the LED will be a solid blue. (Once you start playing music the LED will change to slow-flashing blue.)
- 7 You're ready to go!

FUTURE USE AFTER INITIAL PAIRING THE DOUBLE RADAGON TO YOUR DEVICE

(If this is the first time pairing the Headphone or Speaker to your Bluetooth device, or if the DOUBLE RADAGON Headphone or Speaker were "forgotten", please see "First Time Use" section on Page 3.)

- 1 Turn on the DOUBLE RADAGON Headphone or Speaker
- 2 The Headphone or Speaker will both will automatically connect to your device. (If not, please follow the instructions in the "First Time Use" section on pag3. Make sure to check that the DOUBLE RADAGON product is not already pairing to another device.)
- 3 You're ready to go!

DISCONNECTED

Headphone: When out of range, or if your device becomes disconnected from the Headphone, the Headphone will announce "Disconnected". The Headphone will automatically go into pairing mode and the LED will flash Red/Blue.
Speaker: When out of range, or if your device becomes disconnected from the Speaker, you will hear a beep and the LED will flash a fast BLUE. The Speaker will automatically go into pairing mode and will have a fast flashing Blue LED.

PAUSE/PLAY

When Headphone or Speaker is paired to your device you can pause and play your music by Play/Pause button.

NEXT TRACK/PREVIOUS TRACK

Using either the Headphone or Speaker you are able to skip to the next track or listen to a previous track by using a quick press on +/- button on either product.

VOLUME CONTROL

Using either the Headphone or Speaker you are able to turn up/down the volume by using a long press on +/- button on either product

ANSWER/HANGUP

When the Headphone is connected, answer or hang up by using a short press on the center button on the Headphone.

INCOMING CALL

When receiving an incoming call, the Headphone will detect the device's programmed ringtone (this may differ depending on your device)

You can answer by using a short press on the center button on the Headphone.

LOW BATTERIES

Please consider charging your DOUBLE RADAGON Headphone & Speaker regularly when not in use to retain ample battery life in both products. Headphone or Speaker will announce "Low Charge". After a couple minutes the Headphone or Speaker will repeat the announcement and then shut off.

Limitation of Liability Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

In no event, under any cause of action of theory of liability, shall Wicked Audio Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the Wicked Audio products, even if the Wicked Audio product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that Wicked Audio has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained in inside or outside the Wicked Audio products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tort (including negligence) or otherwise, the entire aggregate liability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under applicable law.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Model #: WI-BTP6XH
Headphone FCC ID: 2AFM7WI-BTP6XH
Speaker FCC ID: 2AFM7WI-BTP6XS

IMPORTANT SAFETY INSTRUCTION

1 Read these instructions.
2 Keep these instructions.
3 Heed all warnings.
4 Follow all instructions.
Attention should be drawn to the environmental aspects of battery disposal: The use of apparatus in moderate climates.
This device complies with Industry Canada licence-exempt RSS standards.
Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

INSTRUCTION DE SÉCURITÉ IMPORTANTE

1 Lisez ces instructions.
2 Gardez ces instructions.
3 Avertissez tous les avertissements.
4 Suivez toutes les instructions.
Il convient d'attirer l'attention sur les problèmes d'environnement dus à la mise au déchet des piles: Si l'appareil est destiné à être utilisé sous un climat tempéré.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

PRECAUTIONS

LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A VOLUME AS POSSIBLE.
Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.
SAFE USE & HAZARD WARNINGS
90 dB SPL at 8 hours, 95 dB SPL at 4 hours, 100 dB SPL at 2 hours, 105 dB SPL at 1 hours, 110 dB SPL at 30 min, 115 dB SPL at 15 min, 120 dB SPL. Avoid as damage may occur

PRÉCAUTIONS

ÉVITEZ D'ÉCOUTER DE LA MUSIQUE À UN NIVEAU EXCESSIF, CAR CECI PEUT CAUSER DES DOMMAGES AUDITIFS PERMANENTS.
Les lignes directrices suivantes ont été établies par la Occupational Safety Health Administration (OSHA). Elle souligne le temps maximal d'exposition à divers niveaux de pression sonore avant que des dommages auditifs soient causés. Veuillez utiliser ces lignes directrices afin de limiter votre exposition à des niveaux de bruit élevés, ce qui peut endommager votre capacité auditive et entraîner une perte auditive permanente.
UTILISATION SANS RISQUE ET AVERTISSEMENTS DE DANGER
90 dB SPL 8 heures, 95 dB SPL 4 heures, 100 dB SPL 2 heures, 105 dB SPL 1 heure, 110 dB SPL 30 min, 115 dB SPL 15 min, 120 dB SPL. À éviter, des dommages peuvent être causés

ADVERTENCIA

ESCUCHAR DEL AUDIO NIVELES EXCESIVOS DE VOLUMEN PUEDE CAUSAR DAÑOS PERMANENTES AUDITIVA. SE USE COMO VOLUMEN MAS BAJO POSIBLE.
Durante la exposición a niveles excesivos de ruido puede dañar los oídos resultando en ruido permanente pérdida de audición inducida (PAIR). Por favor, use las siguientes pautas establecidas por la Administración de Seguridad de Salud Ocupacional (OSHA) de tiempo máximo que los niveles de presión de sonido antes de que se produzca una lesión auditiva.
USO SEGURO DE PELIGROS Y ADVERTENCIAS
90 dB SPL a 8 horas, 95 dB SPL a 4 horas, 100 dB SPL a 2 horas, 105 dB SPL a 1 hora, 110 dB SPL a 30 minuto, 115 dB SPL a 15 minuto, 120 dB SPL. Evite que se puede producir daños

LIMITED ONE-YEAR WARRANTY
Keep your receipt to obtain warranty service. Go to www.wickedaudio.com for more details.

Mis au point au China
États-Unis Fabriqué en Chine
Developed in Utah, U.S.A.
Made in China

GARANTIE LIMITÉE D'UN AN
Conservez votre reçu pour obtenir le service en vertu de la garantie. Consultez www.wickedaudio.com pour en savoir plus.

