

CHARGING

Plug the USB end of the charging cord into a power supply, then plug the Micro USB end into the Micro USB port on the the Outcry.

L.E.D. will flash red to begin charge.

L.E.D. will flash green as nears fully charged.

L.E.D. will change to a solid green when fully charged.

The L.E.D. will only turn a solid green if the speaker is turned off.

BLUETOOTH

Make sure that the speaker is charged and your Bluetooth device is turned on with the Bluetooth feature enabled.

Turn on the speaker and the L.E.D. will flash blue.

Your Bluetooth device should detect "WICKED OUTCRY."

Select "WICKED OUTCRY" to pair. Once successfully paired, the L.E.D. will switch to a solid blue.

(Note: Bluetooth mode will not activate while aux cord is connected).

AUX

Connect one end of the AUX cord to the Outcry and the other end to your music device.

PHONE

Press the  Button to answer the incoming call.

Press the  Button to hang up the call.

(Note: Must be in Bluetooth mode).



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Wicked Audio Inc. is under license. Other trademarks and Trade names are those of their respective owners.

SPECIFICATIONS

- RANGE 32FT
- DRIVER 40MM
- AUX IN / POWER CORD 3FT
- LITHIUM ION BATTERY LIFE 3hrs
- CHARGE TIME 1.5hrs
- DC 5V 250MAH INPUT
- 4 OHM 3 WATT SPEAKER

LIFETIME WARRANTY

Keep your receipt to obtain warranty service. Go to www.wickedaudio.com for more details.

WICKED AUDIO, INC.

875 W 325 N
Lindon, UT 84042



 





OUTCRY

 
 


L.E.D. STATES

SOLID BLUE	BLUETOOTH PAIRED / BLUETOOTH PLAY MODE / AUX-IN MODE / ANSWERING INCOMING CALL.
FLASHING BLUE	BLUETOOTH PAIRING / BLUETOOTH IS DISCONNECTED / INCOMING CALL.
SOLID RED	CHARGING.
SOLID GREEN	FULLY CHARGED <i>(Green Light only shows when speaker is off.)</i>

FUNCTIONS

	1 PRESS	NEXT TRACK.
	1 PRESS	PREVIOUS TRACK.
	LONG PRESS	VOLUME UP.
	LONG PRESS	VOLUME DOWN.
	1 PRESS	PLAY / PAUSE / ANSWER AND HANG UP PHONE CALLS.
	LONG PRESS	SWITCHES BETWEEN BLUETOOTH AND LINE IN MODES.

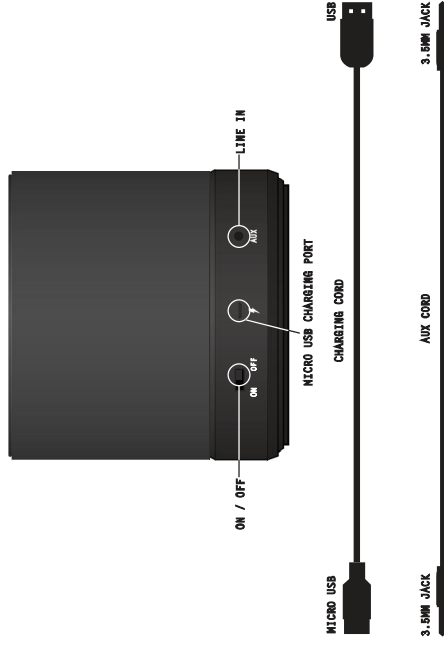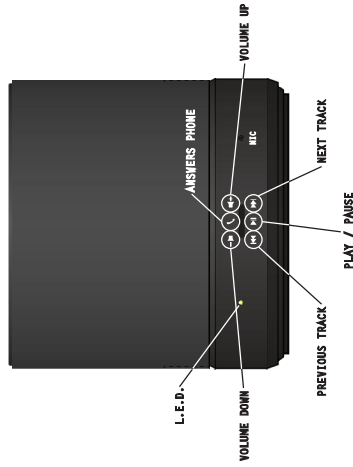

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation