




SYVER TRUE WIRELESS

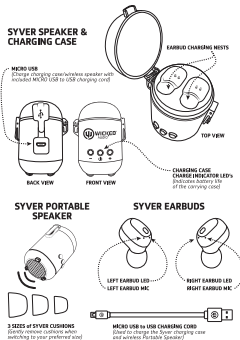

The charging case will shut down automatically if the Syver earbuds both reach full charge or when both of the earbuds are removed from the charging case.

- FIRST TIME USE FOR DUAL EARBUD MODE
1 Make sure the Syver earbuds are charged...
2 Remove charged earbuds from charging case...
3 Both earbuds will pair together...
4 The left earbud will then announce "Pairing"...
5 The right earbud's LED will be off during the pairing process...
6 Your device will detect the Syver's pairing name "Wicked Syver BUDS"...
7 Once selected and paired, the left earbud will beep and announce "Pairing Successful"...
8 You're ready to go!

2 Hold both center buttons for 3-5 seconds. (This is when the earbuds have shut down outside of the charging case.)

- TURNING OFF EARBUDS
1 Place earbuds back into their charging case...
2 Hold center button, on either right or left earbud...
3 Please note when using BOTH earbuds, you only need to hold down ONE center button in order to turn both earbuds off!

DISCONNECTED
When out of range, or if your device becomes disconnected from the Syver earbuds, the left earbud will beep and announce "Disconnected" followed by "Pairing".

PAUSE/PLAY
When both earbuds are paired to your device you can pause and play your music by using a short press on the center button with either the left or right earbud.

the instructions in the section "First Time Use-For Single Earbud Use" below.
Please note that when pairing the RIGHT earbud to your device (using single earbud), you will notice that "Wicked Syver BUDS" shows up a second time in your pairing name options.


- FIRST TIME USE- FOR SINGLE EARBUD USE
1 Determine if you are using the left or the right earbud.
2 Make sure the Syver earbud is charged and your device is turned on with the Bluetooth feature enabled.
3 Turn on the Syver earbud by removing from the charging case...
4 Your phone or device will detect the Syver's pairing name "Wicked Syver BUDS"...
5 Once selected and paired, the earbud will announce "Pairing Successful"...
6 You're ready to go!

Please note when using ONE earbud either earbud can perform all functions. (See previous sections)

FIRST TIME USE WIRELESS PORTABLE SPEAKER
1 Make sure the Syver Speaker is charged and your device

SPEAKER & CHARGING CASE
CHARGING the CHARGING CASE and WIRELESS PORTABLE SPEAKER

To charge the Syver Charging Case and Bluetooth Portable Speaker, use the included Micro USB to USB charging cord.

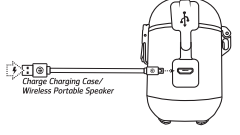

CHARGING THE SYVER EARBUDS
Delicately place the Syver earbuds into the earbud charging nests. Make sure each earbud is placed in its corresponding nest.

FUTURE USE AFTER INITIAL PAIRING THE SYVER TO YOUR DEVICE

If this is the first time the Syver earbuds are being paired to your Bluetooth device, or if the Syver earbuds were "forgotten", please see "First Time Use" section on Page 3.

- 1 The earbuds will automatically turn on after being removed from the charging case...
2 Both earbuds will pair together...
3 Your phone will recognize the pairing name "Wicked Syver BUDS"...
4 Once successfully paired with your phone or device, the left earbud will beep and announce "Pairing Successful"...
5 You're ready to go!

TURNING ON EARBUDS
There are two ways to turn on the earbuds:
1 Remove earbuds from their charging case OR

NEXT TRACK
Using the right earbud you are able to skip to the next track by using 2 short presses (double press) on the center button.

ANSWER/HANGUP
When both earbuds are connected, answer or hang up by using a short press on the center button on either the left or right earbud.

INCOMING CALL
When receiving an incoming call, the earbuds will detect the device's programmed ringtones (this may differ depending on your device).

LOW BATTERY
When using BOTH earbuds together, the left earbud acts as the communicator to your Bluetooth device. Because of this, the left earbud will likely drain its battery quicker than the right.
Please consider charging your Syver earbuds regularly when not in use to retain ample battery life in both earbuds.

- 2 Turn on the Syver Speaker by pressing the Center Power Button (short press). The speaker will beep and announce "Pairing"...
3 Your phone or device will detect the Syver's pairing name "Wicked Syver SPKR"...
4 Once selected and paired the Speaker will announce "Pairing Successful" indicating your device has successfully paired with the Syver.

DISCONNECTED
When out of range, or if your device becomes disconnected from the Syver speaker, the speaker will announce "Disconnected" followed by "Pairing".

PAUSE/PLAY
You can pause and play your music by using a short press on the center

PREVIOUS/NEXT TRACK
You are able to play the previous track or skip to the next track by using a short press on either the +/- buttons.

VOLUME CONTROL
You are able to control the volume of your music by using a long press on either the +/- buttons.

TURNING OFF SYVER SPEAKER
To turn off your Syver Speaker simply hold down the center button for a few seconds until you hear the "beep".

IMPORTANT SAFETY INSTRUCTION
1. Read the instructions carefully.
2. Do not use the product near water.
3. Do not use the product near fire.
4. Do not use the product near children.
5. Do not use the product near pets.
6. Do not use the product near electrical outlets.
7. Do not use the product near power lines.
8. Do not use the product near high voltage areas.
9. Do not use the product near flammable liquids.
10. Do not use the product near open flames.
11. Do not use the product near heat sources.
12. Do not use the product near children's toys.
13. Do not use the product near children's play areas.
14. Do not use the product near children's bedrooms.
15. Do not use the product near children's bathrooms.
16. Do not use the product near children's living areas.
17. Do not use the product near children's dining areas.
18. Do not use the product near children's sleeping areas.
19. Do not use the product near children's play equipment.
20. Do not use the product near children's toys and games.

Warranty Information
Warranty: 1 Year Limited Warranty
Coverage: This warranty covers defects in materials and workmanship under normal use.
Exclusions: This warranty does not cover damage caused by accidents, misuse, or unauthorized repairs.
Contact: For more information, please contact our customer support team at 1-800-XXX-XXXX.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.