




SYVER TRUe WIRELESS

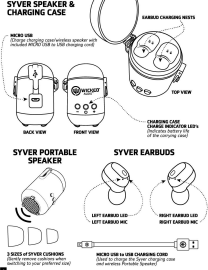

CHARGING THE CHARGING CASE AND WIRELESS PORTABLE SPEAKER... CHARGING THE SYVER EARBUDS... SYVER SPEAKER & CHARGING CASE... SYVER PORTABLE SPEAKER... SYVER EARBUDS

FIRST TIME USE FOR DUAL EARBUDD MODE... FIRST TIME USE FOR SINGLE EARBUDD MODE... FIRST TIME USE FOR WIRELESS PORTABLE SPEAKER... FIRST TIME USE FOR SINGLE EARBUDD MODE

earbuds announces "Second earbud connected"... earbuds announces "Second earbud connected"... earbuds announces "Second earbud connected"

DISCONNECTED... PAUSE/PLAY... NEXT TRACK... PREVIOUS TRACK... ANSWER/HANGUP... INCOMING CALL

REJECT INCOMING CALL... VOLUME CONTROL... VOICE ASSISTANT... LOW BATTERY... FIRST TIME USE FOR SINGLE EARBUDD MODE

and the LED will then flash Red/Blue indicating it is in... NOTE: You are able to use earbuds together or separate... TROUBLESHOOTING

FIRST TIME USE WIRELESS PORTABLE SPEAKER... DISCONNECTED... PAUSE/PLAY... PREVIOUS NEXT TRACK... VOLUME CONTROL... TURNING OFF SYVER SPEAKER

WARRANTY SERVICE INSTRUCTIONS... PRECAUTIONS... LIMITED ONE-YEAR WARRANTY... LIMITED ONE-YEAR WARRANTY

DECLARATION OF CONFORMITY... CE... FCC... ICES... WEEE... RoHS... RECYCLING